

PROFIRE



PF2200-FD



**PRODUCT
MANUAL**

**Warning:**

All PF2200 installations must follow the installation, commissioning, operation, and maintenance procedures outlined in this manual. Failure to comply with the instructions and warnings in this manual may result in death, serious injury, electrocution, property damage, product damage, and/or government fines. All PF2200 installations must be performed in accordance with local electrical code(s) by a capable electrician, and must be field inspected by the Authority Having Jurisdiction to ensure compliance with local electrical and gas codes.

Explosion Hazard. Do not connect or disconnect when energized.

Do not service or open enclosure unless power has been switched off or the area is known to be non-hazardous.

Do not remove or replace fuse when system is powered. Replacement fuses must be ceramic and of correct rating (10A, 150 V_{DC}, Slow Blow). Contact Profire for fuse replacements.

All safety functions must be end-to-end proven following commissioning of the system.

Substitution of components may impair suitability for Class I, Division 2.

**Avertissement:**

Toutes les installations PF2200 doivent être conformes aux procédures d'installation, de mise en service, d'utilisation et d'entretien décrites dans ce manuel. Le non-respect des instructions et des avertissements de ce manuel peut entraîner la mort, des blessures graves, l'électrocution, des dommages matériels, des dommages au produit et/ou des amendes gouvernementales. Toutes les installations PF2200 doivent être effectuées conformément au(x) code(s) électrique(s) local(aux) par un électricien compétent, et doivent être inspectées sur place par l'autorité compétente afin de garantir la conformité aux codes locaux de l'électricité et du gaz.

Risque d'explosion. Ne pas brancher ni débrancher sous tension.

Ne pas réparer ou ouvrir le boîtier si l'instrument est sous tension ou que la zone est reconnue pour être non-dangereuse.

Ne pas retirer ou remplacer le fusible lorsque le système est sous tension. Les fusibles de remplacement doivent être en céramique et de valeur nominale correcte (10A, 150 V_{DC}, slow blow). Contactez Profire pour le remplacement des fusibles.

Toutes les fonctions de sécurité doivent être éprouvées de bout en bout après la mise en service du système.

La substitution de composants peut rendre ce matériel inacceptable pour les emplacements de Classe I, Division 2.

TABLE OF CONTENTS

1	SCOPE	1	5.3	ALARM STATE.....	64
1.1	FARC AND O2 TRIM OPTIONAL SOFTWARE FEATURE.....	1	5.4	READY STATE	65
2	APPROVALS AND RATINGS	2	5.5	WAITING STATE.....	66
2.1	PRODUCT DECLARATIONS.....	2	5.6	STARTUP CHECKS STATE	67
2.2	ELECTRICAL AND MECHANICAL RATINGS	3	5.7	PROVEN PRE-PURGE STATE.....	69
3	USER INTERFACE CARD	8	5.8	IGNITION STATE	72
3.1	KEYPAD.....	8	5.9	PILOT STATE	74
3.2	CONTROLLER INTERFACE.....	9	5.10	MAIN LIGHT OFF STATE	76
3.3	STATUS LED.....	15	5.11	PROCESS CONTROL STATE.....	78
3.4	MODBUS COMMUNICATION.....	16	5.12	MAIN TURNDOWN STATE.....	80
3.5	USB PORT	16	6	INSTALLATION.....	82
4	BMS CARD.....	17	6.1	MOUNTING CONSIDERATIONS	82
4.1	PRESSURE INPUT.....	18	6.2	CONNECTION DIAGRAMS.....	82
4.2	HIGH PRESSURE INPUT.....	20	7	SYSTEM CONFIGURATION.....	91
4.3	PROOF OF POSITION INPUT	21	7.1	TEMPERATURES.....	91
4.4	PROOF OF CLOSURE INPUT	23	7.2	INPUTS.....	93
4.5	TEMPERATURE CONTROL VALVE OUTPUT.....	24	7.3	PROCESS CONTROL	98
4.6	PILOT 1 VALVE SOLENOID OUTPUT.....	26	7.4	OUTPUTS.....	102
4.7	PILOT 2 VALVE SOLENOID OUTPUT.....	28	7.5	SETUP	104
4.8	MAIN VALVE SOLENOID OUTPUTS.....	30	8	MAINTENANCE.....	108
4.9	FAN OUTPUT.....	31	8.1	TOOLS REQUIRED.....	108
4.10	STATUS CONTACT.....	33	8.2	RECOMMENDED MAINTENANCE PROCEDURES.....	108
4.11	CONTROLLER POWER INPUT.....	35	8.3	TRANSPORTATION AND STORAGE CONDITIONS	109
4.12	EMERGENCY SHUTDOWN INPUT.....	37	8.4	REPAIR AND REPLACEMENT.....	109
4.13	REMOTE START INPUT.....	38	8.5	DECOMMISSIONING.....	109
4.14	AUXILIARY OUTPUTS.....	39	8.6	USEFUL LIFE	110
4.15	LEVEL/FLOW INPUT	41	8.7	MANUFACTURER NOTIFICATION.....	110
4.16	PROOF OF AIRFLOW INPUT.....	43	9	TROUBLESHOOTING	111
4.17	AUXILIARY INPUTS.....	45	10	ALERT CODES & RESPONSE TIMES.....	112
4.18	UV FLAME DETECTION INPUTS.....	49	10.1	ALARMS.....	112
4.19	PILOT IGNITION I/O	51	10.2	WAITS	121
4.20	EXTERNAL IGNITION SWITCH INPUT.....	53	10.3	WARNINGS	122
4.21	BATH TEMPERATURE INPUT.....	54	10.4	MAIN PERMISSIVES	124
4.22	OUTLET TEMPERATURE INPUT.....	56	11	GLOSSARY	125
4.23	STACK TEMPERATURE INPUT.....	58	12	ACRONYMS.....	127
5	OPERATING SEQUENCE.....	59	13	DOCUMENT REVISION HISTORY.....	128
5.1	POWER ON STATE.....	60	13.1	CHANGE SUMMARY	128
5.2	LOCKOUT STATE.....	61			

1 SCOPE

The PF2200-FD Burner Management System is an automated safety controller designed to monitor and control industrial heating processes that utilize single burner forced draft appliances. It provides safe burner ignition, ionization or UV flame detection, temperature control, position proving and peripheral input device monitoring. The user interface provides real-time system status and state information as well as detailed alert annunciation, advanced diagnostics and data logging. The system has been optimized for power consumption to be utilized in a variety of applications and can be monitored remotely.

This document provides detailed descriptions of the PF2200-FD inputs, outputs and operating sequence as well as installation, maintenance and commissioning instructions. This document is applicable for the following hardware and firmware versions:

BMS CARD HARDWARE VERSION	UI CARD HARDWARE VERSION	PF2200-FD FIRMWARE VERSION
v2.3.x / 2.4.x	v3.2.x / v3.3.x	FD 3.0.4

Previous versions of the PF2200-FD Product Manual can be found [here](#).

The card hardware versions and current system firmware can be found on the [Information screen](#) of the User Interface, where the BOM Version corresponds to the card hardware and Bundle Version corresponds to the system firmware. Additionally, the card hardware version is printed on the last line of the QR code label affixed to each card. Note that the BMS firmware version and the UI firmware version must match in order for the system to operate correctly. Mismatched firmware is not supported.

1.1 FARC AND O2 TRIM OPTIONAL SOFTWARE FEATURE

The PF2200-FD controller can be shipped with additional software features to accommodate applications that require fuel-air ratio control (FARC) and stack oxygen trim (O₂ Trim) capabilities. Controllers with the FARC and O₂ Trim software feature installed allow for the configuration of specific air and fuel actuator positions across the entire operating range of an appliance as well as the ability to further modulate one of the channels to achieve desired stack oxygen readings. Feature availability is displayed on the [Information Screen](#).

2 APPROVALS AND RATINGS

The PF2200-FD is approved for use in a 1oo1 deployment configuration and is certified to the following standards:



SIL 2 Capable - IEC 61508: 2010 Parts 1-7



Electrical Burner Control System - UL 60730-2-5/ ANSI Z21.20-2014 • CSA C22.2 No. 60730-2-5
Class I Div 2 Group A, B, C & D, T4A (Class I, Zone 2, Group IIC – US Only) - UL 121201 • CSA-C22.2 No. 213



Type 4X - CSA C22.2 No. 94.1:15 • CSA C22.2 No. 94.2:15, Ed. 2 • UL 50:15, Ed. 13 • UL 50E:15, Ed. 2
IP66 - CSA-C22.2 No. 60529:16

2.1 PRODUCT DECLARATIONS

SYSTEM PARAMETER	VALUE
Maximum Flame Detector Response Time	50ms
Minimum Flame Detector Self-Checking Rate	1Hz
Maximum Ionization Flame Failure Lock-Out Time	4s
Maximum UV Flame Failure Lock-Out Time	1s
Maximum Flame-Failure Reignition Time	120s ^{Note 1}
Maximum Ignition Time	11s
Maximum Pilot-Flame Establishing Period	10s
Maximum Main-Flame Establishing Period	10s
Maximum Post-Ignition Time	2.5s
Maximum Pre-Ignition Time	1s
Minimum Pre-Purge Time	10s
Minimum Inter-Purge Time	10s
Minimum Post-Purge Time	10s
Minimum Recycle Time	10s ^{Note 2}
Maximum Start-up Lock-Out Time	10s ^{Note 3}
Maximum Number of Start-Up Retries	3
Minimum Waiting Time	10s
Pollution Degree	1 ^{Note 4}
Signal for Absence/Presence of Flame	-2.54V ^{Note 5}
High Voltage Spark Gap Range	2 – 8mm


SYSTEM PARAMETER	VALUE
Types of Action	Type 2: Electronic Disconnection, Non-volatile Lockout, Permanent Operation
Types of Burners	Full Rate Start and Low Rate Start
Type of Control	Incorporated Control
Types of Ignition	Interrupted
Types of Pilot	Continuous, Intermittent and Interrupted

- 1 Flame-failure Reignition Time is only utilized when Reignition mode is enabled, both Pilots have enabled flame detection and when the other flame is continuously proven.
- 2 Automatic Recycle is only permitted upon loss of a proven flame when configured Relight Attempts settings is not set to 0.
- 3 Since recycling is allowed, this time is from fuel flow energizing on start-up to fuel flow de-energize due to no flame presence.
- 4 Pollution degree when installed in enclosure with a rating of IP54 or equivalent
- 5 Flame signal is the amount that the AC signal being applied to the flame rod is rectified (i.e. the DC offset to the AC waveform)

2.2 ELECTRICAL AND MECHANICAL RATINGS

2.2.1 PRODUCT RATINGS

TYPE	RATING
Temperature – Operating/Storage	-40°C to 55°C (-40°F to 131°F)
Voltage Range	12V Mode: 10.2 - 16.2 V _{DC} • 24V Mode: 20.4 - 32.4 V _{DC}
Humidity - Product	0% to 100% Condensing
Humidity - BMS and UI Card	0% to 90% Non-condensing
Vibration - Tested	3g swept from 10Hz to 150Hz, 10 consecutive sweeps, 3-axis
Enclosure	304 Stainless Steel, Type 4X, IP66
Enclosure Dimensions	335mm x 251mm x 145mm (13.2" x 9.9" x 5.7")
Enclosure Weight	7.26 kg / 16 lbs.

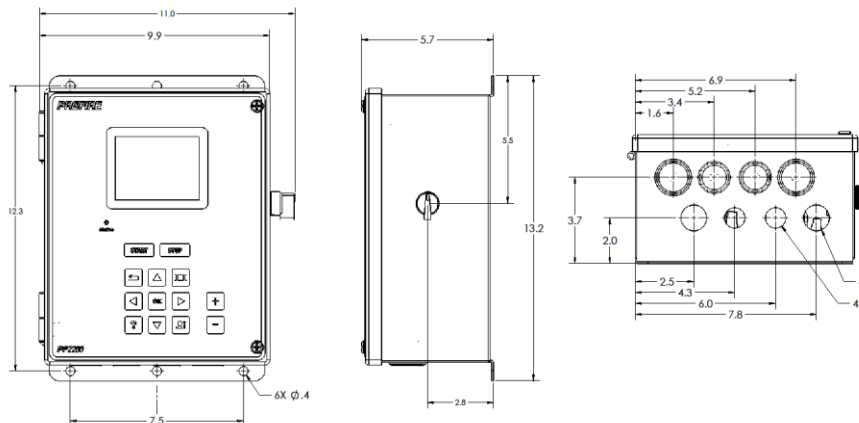

2.2.2 POWER CONSUMPTION

CONTROLLER DETAILS ^{NOTE 1}	12V MODE	24 MODE
Running • Backlight off • No USB	0.7W	0.9W
Running • Backlight off • USB installed	1.1W	1.3W
Running • Backlight on • USB installed	1.3W ^{NOTE 2}	1.5W ^{NOTE 2}

1 Power consumption numbers are for the PF2200 controller only. Ensure that all external loads (e.g., valves, ignition coils, 4-20mA Transmitters, etc.) are factored in when selecting a power supply for the system.
2 The screen backlight remains on while UI buttons are being pressed and turns off after 10 minutes of inactivity.

2.2.3 USER INTERFACE CARD ELECTRICAL RATINGS

TERMINAL	INPUT/ OUTPUT	RATING	AWG		TORQUE [N·m]		
			MIN	MAX	MIN	MAX	
MODBUS	1 A	RS-485, -7V – 7V Common Mode Range with reference to terminal 3 (-)	28	16	0.22	0.25	
	2 B						
	3 -						
PFN	4 +	O	28	16	0.22	0.25	
	5 PFN A	I/O					
	6 PFN B	I/O					
	7 -	O					
USB	- USB	I/O	5 V _{DC} , 200mA max	-	-	-	-
KEYPAD	- KEYPAD	I	3 V _{DC} , 4.75kΩ source impedance	-	-	-	-

2.2.4 BMS CARD ELECTRICAL RATINGS

NAME	SAFETY RATED	TERMINAL		INPUT/OUTPUT	RATING	AWG ^{NOTE 4}		TORQUE [N·m]	
						MIN	MAX	MIN	MAX
USER INTERFACE	NO	1	+	O	Power Out: 7-35 V _{DC} , 500mA Max PFN: -7V – 7V Common Mode Range	28	16	0.22	0.25
		2	PFN A	I/O					
		3	PFN B	I/O					
		4	-	O					
PRESS. COMM	YES	5	PWR	O	12V Mode: 12 V _{DC} , 24V Mode: 13.5 V _{DC} , 30mA Max	24	12	0.5	0.6
		6	SIG IN	I	30 V _{DC} Max ^{(NOTE 2), (NOTE 3)}				
PRESS. HIGH	YES	7	PWR	O	12V Mode: 12 V _{DC} , 24V Mode: 13.5 V _{DC} , 30mA Max	24	12	0.5	0.6
		8	SIG IN	I	30 V _{DC} Max ^(NOTE 2)				
PoP	YES	9	PWR	O	12V Mode: 12 V _{DC} , 24V Mode: 13.5 V _{DC} , 30mA Max	24	12	0.5	0.6
		10	SIG IN	I	30 V _{DC} Max ^{(NOTE 2), (NOTE 3)}				
PoC	YES	11	PWR	O	12V Mode: 12 V _{DC} , 24V Mode: 13.5 V _{DC} , 30mA Max	24	12	0.5	0.6
		12	SIG IN	I	30 V _{DC} Max ^(NOTE 2)				
TCV	NO	13	OUT	O	20mA Max Output, Expected Load: < 350Ω ±0.1 mA Accuracy	24	12	0.5	0.6
		14	GND						
PILOT 1	YES	15	+	O		24	12	0.5	0.6
		16	-	O					
PILOT 2	YES	17	+	O	12 V _{DC} /24 V _{DC} 5A Max	24	12	0.5	0.6
		18	-	O					
SSV	YES	19	+	O	Pulsed Output with configurable PWM Expected Load: Inductive/Resistive	24	12	0.5	0.6
		20	-	O					
		21	+	O					
		22	-	O					
FAN	NO	23	+	O	12 V _{DC} /24 V _{DC} 5A Max	24	12	0.5	0.6
		24	-	O					
RUN STATUS	NO	25	A	-	120V, 170Vpk Max 1500V Max impulse 1A _{RMS} Max	24	12	0.5	0.6
		26	NOT USED						
		27	B	-					
EGND	NO	28	EGND		Earth ground terminal	24	12	0.5	0.6

NAME	SAFETY RATED	TERMINAL	INPUT/OUTPUT	RATING	AWG ^{NOTE 4}		TORQUE [N·m]	
					MIN	MAX	MIN	MAX
POWER IN	NO	29	-	Class 2 Power Supply ^(NOTE 6) 12 V _{DC} /24 V _{DC} 10A Max	24	12	0.5	0.6
		30	-					
		31	+					
		32	+					
ESD	YES	33	PWR	12V Mode: 12 V _{DC} , 24V Mode: 13.5 V _{DC} , 30mA Max	24	12	0.5	0.6
		34	SIG IN	30 V _{DC} Max ^(NOTE 2)				
START	YES	35	PWR	12V Mode: 12 V _{DC} , 24V Mode: 13.5 V _{DC} , 30mA Max	24	12	0.5	0.6
		36	SIG IN	30 V _{DC} Max ^(NOTE 2)				
AUX OUT 1	NO	37	OUT	20mA Max Output Expected Load: < 350Ω ±0.1 mA Accuracy	24	12	0.5	0.6
AUX OUT 2	NO	38	GND					
		39	OUT					
40	GND							
LEVEL/ FLOW	YES	41	PWR	12V Mode: 12 V _{DC} , 24V Mode: 13.5 V _{DC} , 30mA Max	24	12	0.5	0.6
		42	SIG IN	30 V _{DC} Max ^{(NOTE 2), (NOTE 3)}				
PROOF OF AIR	YES	43	PWR	12V Mode: 12 V _{DC} , 24V Mode: 13.5 V _{DC} , 30mA Max	24	12	0.5	0.6
		44	SIG IN	30 V _{DC} Max ^(NOTE 3)				
AUX IN 1	YES	45	PWR	12V Mode: 12 V _{DC} , 24V Mode: 13.5 V _{DC} , 30mA Max	24	12	0.5	0.6
		46	SIG IN	30 V _{DC} Max ^{(NOTE 2), (NOTE 3)}				
AUX IN 2	YES	47	PWR	12V Mode: 12 V _{DC} , 24V Mode: 13.5 V _{DC} , 30mA Max	24	12	0.5	0.6
		48	SIG IN	30 V _{DC} Max ^{(NOTE 2), (NOTE 3)}				
UV SCANNER	YES	49	PWR	12V Mode: 12 V _{DC} , 24V Mode: 13.5 V _{DC} , 30mA Max	24	12	0.5	0.6
		50	FAULT	30 V _{DC} Max ^(NOTE 2)				
		51	FLAME	30 V _{DC} Max ^(NOTE 2)				
		52	NO FLAME	30 V _{DC} Max ^(NOTE 2)				
PILOT 1 ION	YES	53	+	Intermittent 80-130 V _{RMS} Output	24	12	0.5	0.6
		54	-					
PILOT 1 COIL	YES	55	-	12 V _{DC} /24 V _{DC} Pulsed Output Expected Load: Inductive	24	12	0.5	0.6
		56	+					
PILOT 2 ION	YES	57	+	Intermittent 80-130 V _{RMS} Output	24	12	0.5	0.6
		58	-					

NAME	SAFETY RATED	TERMINAL	INPUT/OUTPUT	RATING	AWG ^{NOTE 4}		TORQUE [N·m]	
					MIN	MAX	MIN	MAX
PILOT 2 COIL	YES	59 -	O	12 V _{DC} /24 V _{DC} Pulsed Output Expected Load: Inductive	24	12	0.5	0.6
		60 +	O					
BATH	YES ^(NOTE 1)	61 +	I	Thermocouple Mode: Type K Grounded or Ungrounded -100 °C to 1350 °C ±2 °C Accuracy	28	16	0.22	0.25
		62 -	I					
		63 R	I					
		64 +	I					
		65 -	I					
		66 R	I					
OUTLET	NO	67 +	I	RTD Mode: PT-100 RTD -100 °C to 850 °C ±0.5 °C Accuracy	28	16	0.22	0.25
		68 -	I					
		69 R	I					
STACK	NO	70 +	I		28	16	0.22	0.25
		71 -	I					
		72 R	I					
SWITCH ^(NOTE 5)	YES	- RUN	I	3.3 V _{DC} max	28	16	0.22	0.25
		- IGN	I					
		- PWR	O	3.3 V _{DC} , 1kΩ source impedance				

1 The Bath temperature input is safety rated ONLY if the input is configured as a dual element input. If configured as a single element the Bath temperature input is NOT safety rated.

2 A digital input with an input current of 1.25mA or greater will be seen by the system as an energized input, while a digital input with an input current of 500µA or less will be seen by the system as a de-energized input.

3 Input accuracy when configured in 4-20mA mode: ±0.1 mA

4 All wire sizes listed indicate the size restrictions of the BMS connector only. All wires must be adequately sized for their respective current requirements in accordance with local electrical codes.










5 Ignition Switch contacts must (1) be connected to a pre-wired, Profire-supplied PF2200 ignition switch (Part No. PFA-004260) or (2) have RUN and PWR terminals connected with a wire jumper.

6 The PF2200 must be powered from a Class 2 circuit as defined in the Canadian Electrical Code (CSA 22.2 No 1-15) or US National Electrical Code (NFPA 70).

3 USER INTERFACE CARD

The User Interface Card allows interaction with the system using the keypad, display, Modbus port, and USB port. The card interacts with the BMS card through a proprietary communication protocol called PFN, which utilizes the RS-485 physical transport layer. PFN and power to the User Interface are factory wired to the BMS card through a wiring harness.

3.1 KEYPAD

BUTTON	FUNCTIONS
	Start the system from Ready state
	Reignite when one pilot is lost while running
	Stop the system ^(NOTE 1)
	Return to previous screen from an on-screen menu
	Cycle through Status, Settings, and System screens
	Display keypad functionality help screen
	Switch to Commissioner Mode to see all available settings
	Switch to Operator Mode to see only essential settings and setpoints
	Navigate Menus and highlight items
	Select highlighted item
	Open settings adjustment dialog when highlighting numeric settings
	Change Status screen display mode
	Make incremental changes to numeric settings
	Scroll Event Log by full page


1 The keypad is intended to aid in commissioning and system navigation, and it must not be incorporated into any safety function. If user shut-down is a required safety function, then the BMS Card ESD input or External Ignition Switch must be used.

Use the Keypad Diagnostic Tool (**System > Diagnostics > Keypad**) to check the functionality of each button individually.

3.2 CONTROLLER INTERFACE

The PF2200-FD controller consists of 3 main screens:

1. **Status Screen** – Always-on display that shows real-time system data including input device readings, controller state and alerts
2. **Settings Screen** – Screen containing all the configuration settings required to set up the system
3. **System Screen** – Screen containing tools for data logging and settings backup as well as a suite of diagnostic information for troubleshooting

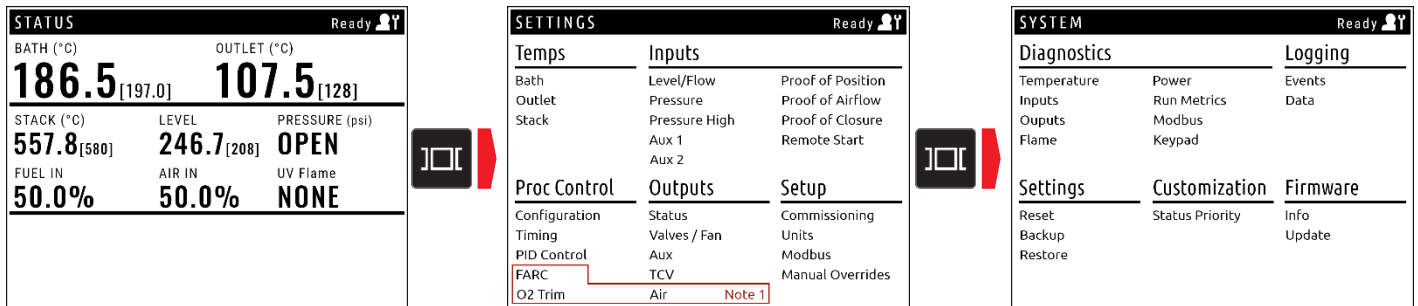


1 FARC, O2 Trim and Air Output menus are only available for controllers with FARC and O2 Trim software feature installed.





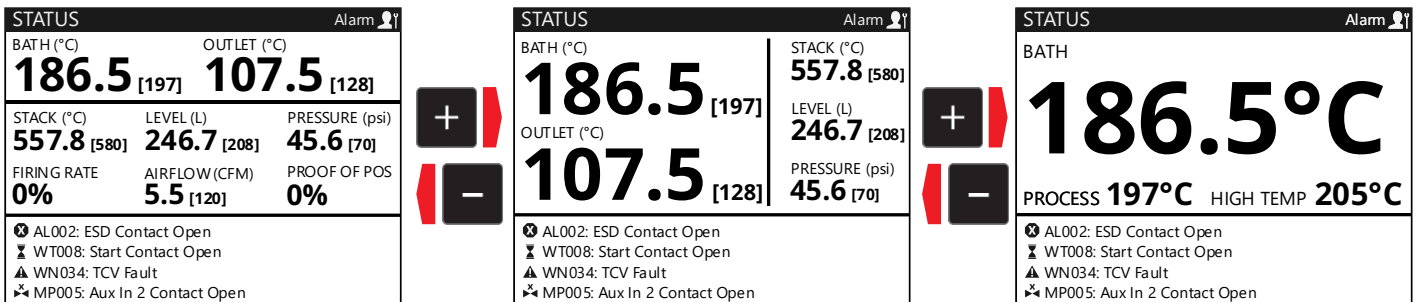

3.2.1 STATUS SCREEN



The Status Screen displays the current controller state in the Status Bar at the top of the Status Screen. All current alarms, waits, warnings, and main permissives are displayed in the Alerts Pane at the bottom of the Status Screen. The main window of the Status Screen shows the current states/readings of the connected input devices.

The information displayed can be customized to show one, five, or eight status elements; use **+** and **-** to cycle between the one-item, five-item, and eight-item zoom levels. The order in which the status elements are displayed on each zoom level can be customized using the Status Priority Tool (**System > Customization > Status Priority**).



3.2.2 SETTINGS SCREEN

The Settings Screen contains sub-menus for all configuration settings required to commission a system. Use     to select a menu and press  to see a list of all related settings. By default, the Settings Screen is shown in Operator Mode, so a limited number of settings are displayed for quickly making changes after the system has been commissioned. Pressing  switches to Commissioning Mode and read-only access is granted to all settings. Users must enter a valid password when prompted in order to modify settings.

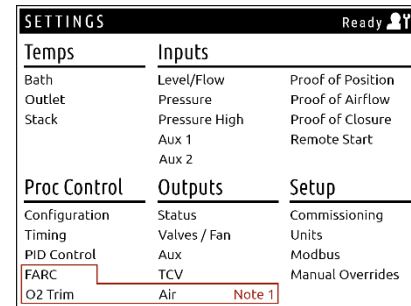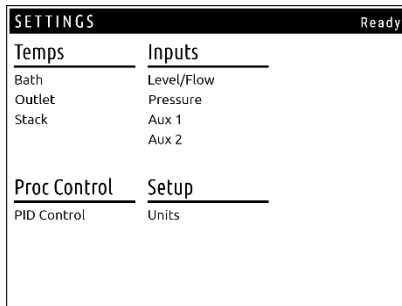

1 FARC, O2 Trim and Air Output menus are only available for controllers with FARC and O2 Trim software feature installed.

SETTINGS MODIFICATION

A valid password must be entered when prompted in order to adjust any setting. Each setting has a pre-determined security level based on its potential safety and reliability impact, and each security level has a separate password.

L1 security level: settings that DO NOT impact the safety-integrity of the system BUT can impact the process operation.

If the L1 Password Enable setting is Enabled, L1 setting modification requires the L1 password. If the L1 Password Enable setting is Disabled, L1 settings can be modified with no password.

L2 security level: settings that DO impact the safety-integrity of the system

For L1 and L2 passwords, please contact Profire customer service. Passwords will only be distributed to individuals that are capable of assessing the safety impact of the changes they intend to make.

After entering a valid password, the user is authenticated and can make changes to the associated settings. The authentication will timeout after 15 minutes regardless of activity. Any further attempt to adjust settings requires the user to re-authenticate.

DROP DOWN SETTINGS MODIFICATION

SETTINGS Bath		Ready
Type	RTD	
Input	Dual	
Mode	Process Control	
High Temp Setpoint	90.0 °C	
Pilot Off Setpoint	85.0 °C	
Main Off Setpoint	85.0 °C	
Process Setpoint	80.0 °C	
Standby Setpoint	70.0 °C	
Low Temp Setpoint	0.0 °C	
Deadband	2.0 °C	

ACCEPTED CHANGE METHOD

QUICK SETTINGS ADJUSTMENT METHOD

NUMERIC SETTINGS MODIFICATION

SETTINGS Bath		Ready
Type	RTD	
Input	Dual	
Mode	Process Control	
High Temp Setpoint	90.0 °C	
Pilot Off Setpoint	85.0 °C	
Main Off Setpoint	85.0 °C	
Process Setpoint	80.0 °C	
Standby Setpoint	70.0 °C	
Low Temp Setpoint	0.0 °C	
Deadband	2.0 °C	

ACCEPTED CHANGE METHOD

QUICK SETTINGS ADJUSTMENT METHOD

Settings changes made using the Quick Settings Adjustment methods take effect immediately when changed. Settings changes made using the Accepted Change method do not take effect until after the change has been accepted by the user. When using the accepted change method, pressing **↩** will discard a change that has not yet been accepted by the user.

3.2.3 SYSTEM SCREEN

The PF2200 Systems screen contains tools for system monitoring, troubleshooting, and customization. The diagnostics menus contain useful real-time troubleshooting information, the logging tools provide detailed event history and data logging functionality, the settings tools allow saving and loading of settings between controllers, and the status priority tool allows for customization of the information displayed on the Status screen.

DIAGNOSTICS



MENU ITEM	DESCRIPTION
Temperature Diagnostics	Displays real-time temperature readings of all temperature inputs and ambient temperature sensors.
Input Diagnostics	Displays real-time external switch position and voltage or current readings of all BMS inputs.
Output Diagnostics	Displays real-time TCV and Aux output positions as well as power consumption readings for all solenoid outputs.
Flame Diagnostics	Displays real-time flame strength information, flame fails since last power cycle and allowable relights remaining.
Power Diagnostics	Displays real-time and average hourly power consumption readings.
Run Metrics	Displays system/valve run times and light off failures since last power cycle. Cross limiting status information is also displayed for controllers with FARC and O2 Trim software feature installed.
Modbus Diagnostics	Displays Modbus transmission statistics, error counts and key troubleshooting information.
Keypad Diagnostics	Interactive tool for testing the functionality of each key on the keypad.

LOGGING

Event Log

The Event Log screen displays a full history of system events for reference and troubleshooting. Events are continuously recorded to the USB storage device when inserted.



The event log displays all events that are stored on the USB storage device. If no USB is installed, the system only displays 500 past events and gets cleared upon power cycle. When the USB device is full, the oldest event will be deleted to make room for a new event to be logged.

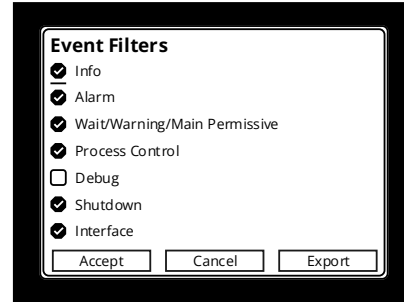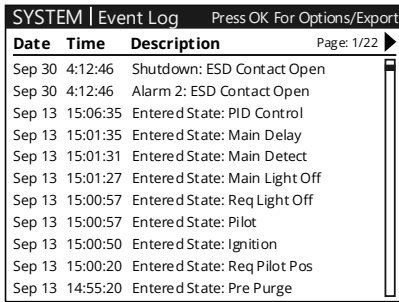

Use the event log filter to view specific events on the system screen. All event types will still be logged to the USB storage device, regardless of the filters selected.

Data Logging

The Data Logging tool logs input/output readings for up to 8 user selectable pieces of system information to the USB storage device. The data is logged in 15 second intervals and saved to the USB storage device regularly.

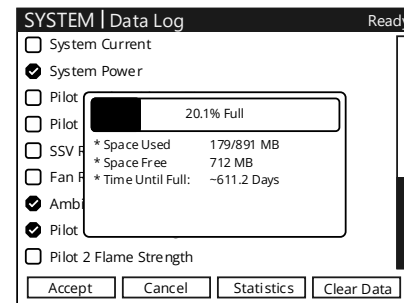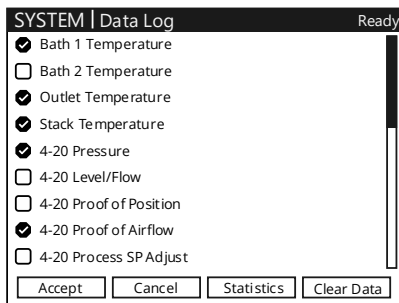





Use the Data Log Statistics window to see an estimate of how long the system will run before the USB storage device becomes full. Once full, the oldest data will be deleted and replaced with new data.


SETTINGS

MENU ITEM	DESCRIPTION
Reset	Resets all BMS settings to their default values.
Backup	Saves all current BMS settings to the USB storage device.
Restore	Tool to load BMS settings from the USB storage device.

Some settings may not be restored when loading a settings file from a system with a different version of firmware installed. The settings restore tool provides a list of all settings that were not restored. Ensure that all settings are correct after using the Settings Restore tool.

STATUS PRIORITY



The Status Priority tool allows configuration of the items displayed on the main Status screen. Use  and  to select a status element and  and  to move it up or down the priority list.

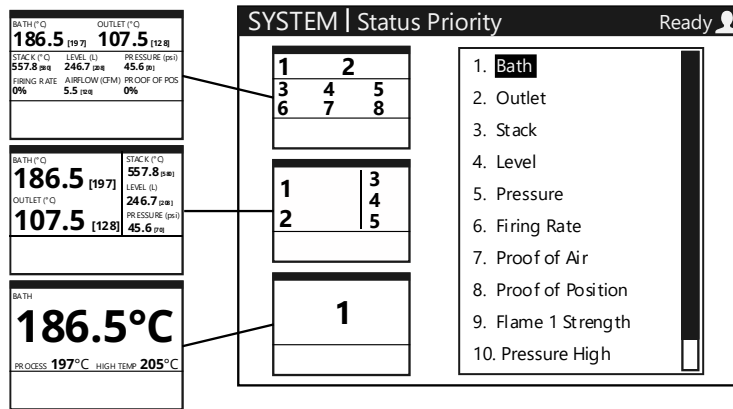

The images on the Status Priority screen represent the Status screen and show how the status elements will be displayed in the one, five, or eight element Status screen views.

FIRMWARE Information


The Information screen displays useful firmware and hardware information associated with the BMS and UI cards and indicates the availability of any optional software features installed on the controller.

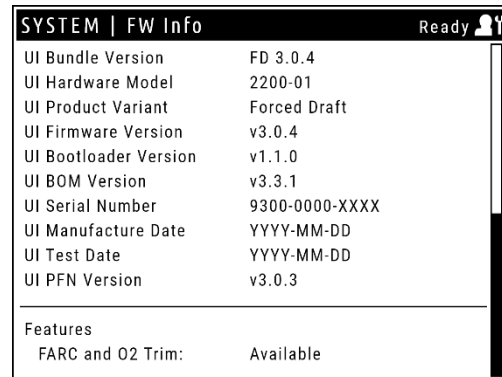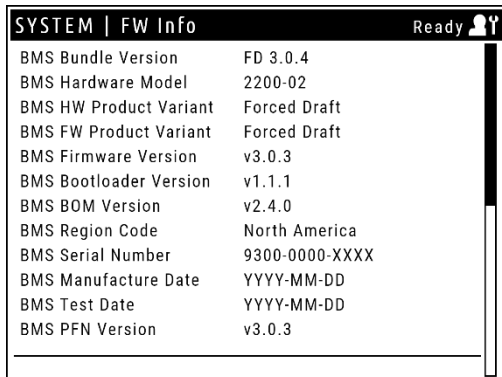

It is useful to have this system information on hand when contacting Profire for technical support.

Update

The Firmware Update tool facilitates system software upgrades in the field. A USB drive containing an approved firmware bundle file can be used to update the system.

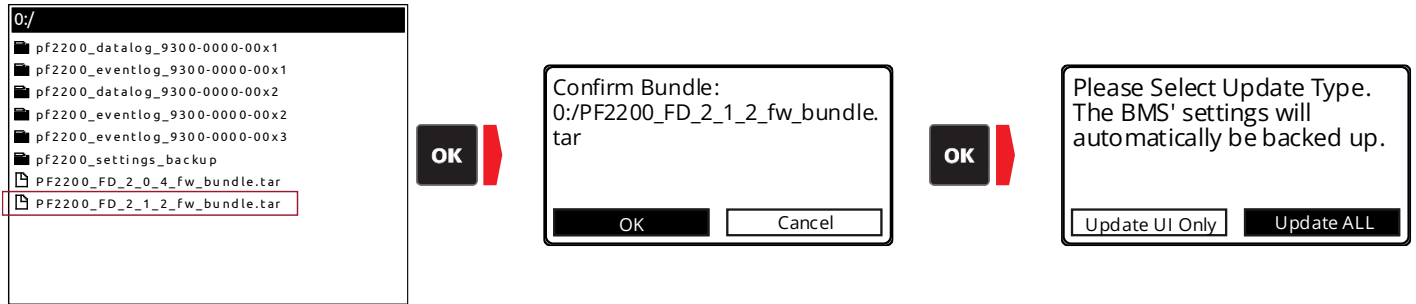

3.3 STATUS LED

The LED on the front of the PF2200-FD indicates the current operating state of the system.

3.3.1 STATUS LED BEHAVIOR

SYSTEM STATE	CONDITION	BEHAVIOR
POWER ON	Any	Cycles Green, Amber, Red
ALARM	Any	Slow flashing Red
READY	Any	Solid Red
LOCKOUT	Any	Fast flashing Red
WAITING	No Warning present	Slow flashing Green
	Warning present	Slow flashing Amber
STARTUP CHECKS PROVEN PRE-PURGE IGNITION PILOT MAIN LIGHT OFF PROCESS CONTROL MAIN TURNDOWN	No Warning present	Solid Green
	Warning present	Solid Amber

3.4 MODBUS COMMUNICATION

Remote access to status information and non-safety critical settings is available via the Modbus terminals on the UI card. Refer to the [PF2200-FD Modbus Configuration Guide](#) for detailed programming information.

3.4.1 INTENDED FIELD DEVICE CONNECTIONS

FIELD DEVICE	CONFIGURATION REQUIREMENTS	CONNECTION DIAGRAMS
Modbus Communication Module - Terminating resistor not required	Settings > Setup > Modbus Modbus RTU Communication: Enabled Modbus Termination: Disabled All other settings: As desired	Modbus Input Wiring
Modbus Communication Module - Terminating resistor required	Settings > Setup > Modbus Modbus RTU Communication: Enabled Modbus Termination: Enabled All other settings: As desired	Modbus Input Wiring
Not Used	Settings > Setup > Modbus Modbus RTU Communication: Disabled	N/A

Navigate to the Modbus Diagnostics Screen (**System > Diagnostics > Modbus**) for useful Modbus troubleshooting information.

3.5 USB PORT

The USB port of the User Interface card is used for data-logging as well as settings backup and restore functionality.

3.5.1 USB FUNCTIONS

FUNCTION	CONFIGURATION REQUIREMENTS
Event logging to USB	System > Logging > Events No configuration required - Event log is automatically stored to USB when installed
Data logging to USB	System > Logging > Data Select up to 8 items to log
Saving current controller settings to USB	System > Settings > Backup
Loading saved controller settings from USB	System > Settings > Restore Select desired file to load

An approved USB storage device must be used; use of a non-approved USB storage device may compromise USB functionality. Each PF2200 is shipped with one approved USB storage device. Please contact Profire for replacements.

4.1 PRESSURE INPUT

4.1.1 DETAILS

ITEM	
Terminals	5 & 6
Name	PRESS COMM
Type	Configurable digital or 4-20mA input

4.1.2 INTENDED FIELD DEVICE CONNECTIONS

FIELD DEVICE	CONFIGURATION REQUIREMENTS	CONNECTION DIAGRAMS
Low-pressure switch	Settings > Inputs > Pressure Type: Digital Low Pressure Mode: As desired All other settings: Ignored System > Customization > Status Priority As desired	Digital Input - Dry Contact Digital Input - Wet Contact
4-20mA pressure transmitter	Settings > Inputs > Pressure Type: 4-20 Span Min/Max: transmitter Min/Max All other settings: As desired Settings > Setup > Units Pressure: As desired System > Customization > Status Priority As desired	Analog Input - Loop Powered 4-20mA Transmitter Analog Input - Self Powered 4-20mA Transmitter
Not Used	Settings > Inputs > Pressure Type: Disabled	N/A

The Pressure input must be connected to a low-pressure switch when configured as a digital input. The High Pressure Input (terminals 7 & 8) must be used to connect a high pressure switch.

4.1.3 SYSTEM BEHAVIOR – PRESSURE INPUT

CONFIGURATION DETAILS	SCENARIO		STATE TRANSITION IF RUNNING	ALERTS PANE	
	PRESSURE INPUT STATE	SSV OUTPUT STATE			
TYPE: DIGITAL	Low Pressure Mode: Alarm	De-energized	Any	Lockout	Low Pressure Alarm
	Low Pressure Mode: Wait	De-energized	Any	Waiting ^(NOTE 1)	Low Pressure Wait
	Low Pressure Mode: Warning	De-energized	Any	No effect	Low Pressure Warning
	Low Pressure Mode: Main Permissive	De-energized	Any	Pilot ^(NOTE 2)	Low Pressure Main Permissive
	Any	Energized	Any	No effect	N/A
TYPE: 4-20	Any	Out of Range	Any	Lockout	Pressure Range Alarm
	Any	High Trip	De-energized	No effect	High Pressure Warning
	Any	High Trip	Energized	Lockout	High Pressure Alarm
	Low Pressure Mode: Alarm	Low Trip	Any	Lockout	Low Pressure Alarm
	Low Pressure Mode: Wait	Low Trip	Any	Waiting ^(NOTE 1)	Low Pressure Wait
	Low Pressure Mode: Warning	Low Trip	Any	No effect	Low Pressure Warning
	Low Pressure Mode: Main Permissive	Low Trip	Any	Pilot ^(NOTE 2)	Low Pressure Main Permissive

1 System transitions to Waiting state via the Main Turndown state when coming from the Process Control state.

2 No effect if running in a non-fuel state

A high-pressure event on the Pressure input will cause the burner to transition to the Lockout state only if it persists once the burner has entered a main fuel state. In any other state, the system will display a high pressure warning in the Alerts Pane and the burner will continue to run. This is true only when the Pressure Type setting is set to 4-20. The state of the SSV Output is not considered when **Type** is set to **Digital**.

4.2 HIGH PRESSURE INPUT

4.2.1 DETAILS

ITEM	
Terminals	7 & 8
Name	PRESS HIGH
Type	Digital input

4.2.2 INTENDED FIELD DEVICE CONNECTIONS

FIELD DEVICE	CONFIGURATION REQUIREMENTS	CONNECTION DIAGRAMS
High pressure switch	Settings > Inputs > Pressure High Pressure High: Enabled System > Customization > Status Priority As desired	Digital Input - Dry Contact Digital Input - Wet Contact
Not Used	Settings > Inputs > Pressure High Pressure High: Disabled	N/A

4.2.3 SYSTEM BEHAVIOR – HIGH PRESSURE INPUT

CONFIGURATION DETAILS	PRESSURE HIGH INPUT STATE	STATE TRANSITION IF RUNNING	ALERTS PANE
PRESSURE HIGH: ENABLED	De-energized	Lockout	High Pressure Alarm
	Energized	No effect	N/A
PRESSURE HIGH: DISABLED	Any	No effect	N/A

4.3 PROOF OF POSITION INPUT

4.3.1 DETAILS

ITEM	
Terminals	9 & 10
Name	POP
FARC Alternate Name	FARC Fuel Position Feedback * FARC functionality only available with FARC and O2 Trim software feature installed.
Type	Configurable Digital or 4-20mA Input

4.3.2 INTENDED FIELD DEVICE CONNECTIONS

FIELD DEVICE	CONFIGURATION REQUIREMENTS	CONNECTION DIAGRAMS
Temperature control valve 4-20mA position feedback signal	Settings > Inputs > Proof of Position Type: 4-20 Settings > Outputs > TCV All settings: As required per appliance manufacturer recommendations Settings > Proc Control > Configuration Light Off Firing Rate: As desired	Analog Input – Self Powered 4-20mA Transmitter
Temperature control valve digital proof of light off position switch	Settings > Inputs > Proof of Position Type: Digital	Digital Input – Dry Contact Digital Input – Wet Contact
FARC fuel channel position feedback signal	Refer to the PF2200-FD FARC User Guide for configuration details.	Analog Input – Self Powered 4-20mA Transmitter
Not Used	Settings > Inputs > Proof of Position Type: Disabled	N/A

When configured in digital mode, the Proof of Position input must be connected to a digital proof of light off position switch. The Auxiliary inputs (terminals 45 & 46 and 47 & 48) must be used if digital proof of pilot position or digital proof of purge position inputs are required.

4.3.3 SYSTEM BEHAVIOR – PROOF OF POSITION INPUT

TYPE SETTING	SCENARIO		SYSTEM STATE TRANSITION	ALERTS PANE/LOCKOUT MESSAGE
	INITIAL SYSTEM STATE	POP INPUT STATE		
DISABLED	Any	Any	No effect	N/A
ANY	Any not listed below	Any	No effect	N/A
DIGITAL	Startup Checks	De-energized	Proven Pre-Purge	N/A
		Energized	Lockout	TCV Failed to Prove Light Off Position
	Request Light Off Position	De-energized	Lockout	TCV Failed to Prove Light Off Position
		Energized	Main Light Off	N/A
	Main Light Off	De-energized	Lockout	TCV Position Error
		Energized	Process Control	N/A
	All not listed above	Any	No effect	N/A
	4-20	Any	Out of Range	Lockout
Request Purge Position		Outside Position Error	Lockout	Failed to Prove Purge Position
		Within Position Error	Prove Airflow	N/A
Request Pilot Position		Outside Position Error	Lockout	TCV Failed to Prove Pilot Position
		Within Position Error	Ignition	N/A
Request Light Off Position		Outside Position Error	Lockout	TCV Failed to Prove Light Off Position
		Within Position Error	Main Light Off	N/A
Prove Airflow Pre-Purge or any fuel state		Outside Position Error	Lockout	TCV Position Error
		Within Position Error	No effect	N/A

4.4 PROOF OF CLOSURE INPUT

4.4.1 DETAILS

ITEM	
Terminals	11 & 12
Name	POC
Type	Digital input

4.4.2 INTENDED FIELD DEVICE CONNECTIONS

FIELD DEVICE	CONFIGURATION REQUIREMENTS	CONNECTION DIAGRAMS
Main Valve (SSV) Proof of Closure Switch	Settings > Inputs > Proof of Closure Proof of Closure: Enabled	Digital Input – Dry Contact Digital Input – Wet Contact
Not Used	Settings > Inputs > Proof of Closure Proof of Closure: Disabled	N/A

4.4.3 SYSTEM BEHAVIOR – PROOF OF CLOSURE INPUT

CONFIGURATION DETAILS	SCENARIO		STATE TRANSITION IF RUNNING	ALERTS PANE
	SSV OUTPUT STATE	POC INPUT STATE		
PROOF CLOSURE: ENABLED	De-energized	De-energized	Lockout	Proof of Closure Contact Open Alarm
	Energized	Energized	No effect	Proof of Closure Contact Failed to Open Warning
	De-energized	Energized	No effect	N/A
	Energized	De-energized	No effect	N/A
PROOF CLOSURE: DISABLED	Any	Any	No effect	N/A

4.5 TEMPERATURE CONTROL VALVE OUTPUT

4.5.1 DETAILS

ITEM	
Terminals	13 & 14
Name	TCV
FARC Alternate Name	FARC Fuel Position Output * FARC functionality only available with FARC and O2 Trim software feature installed.
Type	4-20mA output

4.5.2 INTENDED FIELD DEVICE CONNECTIONS

FIELD DEVICE	CONFIGURATION REQUIREMENTS	CONNECTION DIAGRAMS
4-20mA Proportional Fuel Gas Valve using internal PID algorithm	Settings > Outputs > TCV All settings: As desired Settings > Inputs > Proof of Position All settings: As desired Settings > Proc Control > Configuration Process Control Mode: PID Control Post Purge Mode: As desired Settings > Proc Control > Timing Position Timeout Settings: As desired Settings > Proc Control > PID Control All settings: As desired	TCV Output Wiring
4-20mA Proportional Fuel Gas Valve using external firing rate input	Settings > Outputs > TCV Min Position: As desired All other settings: Ignored in Process Control state Settings > Inputs > Proof of Position All settings: As desired Settings > Proc Control > Configuration Process Control Mode: External Firing Rate Post Purge Mode: As desired Settings > Proc Control > Timing Position Timeout Settings: As desired Settings > Inputs > Aux 1 or Aux 2 Type: 4-20 4-20 Mode: Appliance Firing Rate	TCV Output Wiring
FARC fuel channel position actuator	Refer to the PF2200-FD FARC User Guide for configuration details.	TCV Output Wiring

4.5.3 SYSTEM BEHAVIOR – TCV OUTPUT

SYSTEM STATE	BEHAVIOR
ANY STOPPED STATE	Off Position ^(NOTE 1)
WAITING	Off Position ^(NOTE 2)
STARTUP CHECKS	Off Position
PROVEN PRE-PURGE - REQUEST PURGE POSITION, PROVE AIRFLOW, PRE-PURGE	Purge Position
PROVEN PRE-PURGE - REQUEST PILOT POSITION	Pilot Position
IGNITION	Pilot Position
PILOT	Pilot Position
PILOT - REQUEST LIGHT OFF POSITION	Light Off Position ^(NOTE 3)
MAIN LIGHT OFF	Light Off Position ^(NOTE 3)
PROCESS CONTROL - PID CONTROL	Between Minimum Position and 100% per internal PID algorithm ^(NOTE 3)
PROCESS CONTROL - EXTERNAL FIRING RATE	Between Minimum Position and 100% per external firing rate input ^(NOTE 3)
PROCESS CONTROL – MANUAL CONTROL	Per Manual Firing Rate ^(NOTE 3) setting (Settings > Setup > Manual Overrides)
MAIN TURNDOWN	Minimum Position ^(NOTE 3)

1 When post-purging, TCV output is at its (1) configured Purge Position when Post Purging Mode setting is set to Purge Position or (2) last running position prior to Lockout when Post Purging Mode setting is set to Last Position.

2 TCV output is at Purge Position when system is post purging while in the Waiting state.

3 When FARC Mode is enabled the TCV output matches the configured FARC table position at the current system firing rate.

4.6 PILOT 1 VALVE SOLENOID OUTPUT

4.6.1 DETAILS

ITEM	
Terminals	15 & 16
Name	PILOT 1
Type	Powered solenoid valve output with configurable PWM

4.6.2 INTENDED FIELD DEVICE CONNECTIONS

FIELD DEVICE	CONFIGURATION REQUIREMENTS	CONNECTION DIAGRAMS
Normally Closed Pilot Gas Shutoff Valve – Peak and Hold	<p>Settings > Proc Control > Configuration</p> <p>Pilot Off Mode: As desired</p> <p>Pilot 2: As desired</p> <p>Minimum Pilots Running: As desired</p> <p>Reignition: As desired</p> <p>Settings > Proc Control > Timing</p> <p>Pilot Startup Delay Time: As desired</p> <p>Settings > Outputs > Valves</p> <p>Pilot Valve PWM: As desired</p>	<p>Solenoid Output – 12V/24V</p>
Normally Closed Pilot Gas Shutoff Valve – Constant current	<p>Settings > Proc Control > Configuration</p> <p>Pilot Off Mode: As desired</p> <p>Pilot 2: As desired</p> <p>Minimum Pilots Running: As desired</p> <p>Reignition: As desired</p> <p>Settings > Proc Control > Timing</p> <p>Pilot Startup Delay Time: As desired</p> <p>Settings > Outputs > Valves</p> <p>Pilot Valve PWM: 100%</p>	<p>Solenoid Output – 12V/24V</p>

4.6.3 SYSTEM BEHAVIOR – PILOT 1 OUTPUT

SYSTEM STATE	PILOT 1 OUTPUT
POWER ON	De-energized
LOCKOUT	De-energized
ALARM	De-energized
READY	De-energized
WAITING	De-energized
STARTUP CHECKS	De-energized
PROVEN PRE-PURGE	De-energized
IGNITION	Energized
PILOT	Energized ^(NOTE 1)
MAIN LIGHT OFF	Energized ^{(NOTE 1), (NOTE 2)}
PROCESS CONTROL	Energized ^{(NOTE 1), (NOTE 2)}
MAIN TURNDOWN	Energized ^{(NOTE 1), (NOTE 2)}

*1 De-energized following automatic reignition failure
 2 De-energized when Pilot Off Mode is set to Interrupted*

FEATURE NOTE Pilot Off Mode



Settings



Process Control



Configuration

The **Pilot Off Mode** settings allows the user to specify the circumstances at which the pilot valve outputs are to be de-energized to avoid overheating. The Pilot valves will de-energize as follows:

1. **Disabled:** when the process temperature exceeds its configured **High Temp Setpoint**.
2. **Off at Pilot Off Setpoint:** when the process temperature exceeds its configured **Pilot Off Setpoint**.
3. **Off at Main Off Setpoint:** when the process temperature exceeds its configured **Main Off Setpoint**.
4. **Interrupted:** after successful main light off when monitoring main flame with a UV flame scanner.

4.7 PILOT 2 VALVE SOLENOID OUTPUT

4.7.1 DETAILS

ITEM	
Terminals	17 & 18
Name	PILOT 2
Type	Powered solenoid valve output with configurable PWM

4.7.2 INTENDED FIELD DEVICE CONNECTIONS

FIELD DEVICE	CONFIGURATION REQUIREMENTS	CONNECTION DIAGRAMS
Normally Closed Pilot Gas Shutoff Valve – Peak and Hold	Settings > Proc Control > Configuration Pilot Off Mode: As desired Pilot 2: Enabled Minimum Pilots Running: As desired Reignition: As desired Settings > Outputs > Valves Pilot Valve PWM: As desired	Solenoid Output – 12V/24V
Normally Closed Pilot Gas Shutoff Valve – Constant current	Same as above except: Settings > Outputs > Valves Pilot Valve PWM: 100%	Solenoid Output – 12V/24V
Not Used	Settings > Proc Control > Configuration Pilot 2: Disabled	N/A

4.7.3 SYSTEM BEHAVIOR – PILOT 2 OUTPUT

CONFIGURATION DETAILS	SYSTEM STATE	PILOT 2 OUTPUT
PILOT 2: DISABLED	Any	De-energized
PILOT 2: ENABLED	Power On	De-energized
	Lockout	De-energized
	Alarm	De-energized
	Ready	De-energized
	Waiting	De-energized
	Startup Checks	De-energized
	Proven Pre-Purge	De-energized
	Ignition	Energized
	Pilot	Energized ^(NOTE 1)
	Main Light Off	Energized ^{(NOTE 1), (NOTE 2)}
	Process Control	Energized ^{(NOTE 1), (NOTE 2)}
	Main Turndown	Energized ^{(NOTE 1), (NOTE 2)}

*1 De-energized following automatic reignition failure
 2 De-energized when Pilot Off Mode is set to Interrupted*

FEATURE NOTE Pilot Reignition



Settings



Process Control



Configuration

When the **Reignition** setting is **Enabled**, the system will automatically attempt to relight a lost pilot flame provided there is a proven flame on the other pilot. The system will continue to run in its current state; it will keep the lost pilot valve output energized and will energize its associated coil output to attempt a relight. The coil output will remain energized for 2 minutes or until the flame has been successfully re-established, whichever is shorter. If the flame has not been re-established within the 2 minute time limit, the lost pilot valve output and associated coil output will be de-energized and the system will continue to run with a single pilot flame. After this point, the user must manually initiate reignition using (1) the START button on the keypad, or (2) the external ignition switch if a relight is desired. This will cause the system to transition to the Proven Pre-Purge state to prepare for an ignition attempt. If flame is not detected on at least one pilot at any point during the reignition, the system will abort the reignition sequence and behave as though a flame loss has occurred.

Additional Configuration Requirements:

Settings > Process Control > Configuration > **Pilot 2: Enabled**

Settings > Process Control > Configuration > **Minimum Pilots Running: 1**

4.8 MAIN VALVE SOLENOID OUTPUTS

4.8.1 DETAILS

ITEM	
Terminals	19 & 20 and 21 & 22
Name	SSV
Type	Powered solenoid valve output with configurable PWM

4.8.2 INTENDED FIELD DEVICE CONNECTIONS

FIELD DEVICE	CONFIGURATION REQUIREMENTS	CONNECTION DIAGRAMS
Normally Closed Main Gas Shutoff Valves – Peak and Hold	Settings > Outputs > Valves SSV PWM: As desired	Solenoid Output – 12V/24V
Normally Closed Main Gas Shutoff Valves – Constant current	Settings > Outputs > Valves SSV PWM: 100%	Solenoid Output – 12V/24V

4.8.3 SYSTEM BEHAVIOR – SSV OUTPUTS

SYSTEM STATE	SSV OUTPUTS
POWER ON	De-energized
LOCKOUT	De-energized
ALARM	De-energized
READY	De-energized
WAITING	De-energized
STARTUP CHECKS	De-energized
PROVEN PRE-PURGE	De-energized
IGNITION	De-energized
PILOT	De-energized
MAIN LIGHT OFF	Energized
PROCESS CONTROL	Energized
MAIN TURNDOWN	Energized

4.9 FAN OUTPUT



Warning:

The Purge Only Fan output mode must not be used for applications which require fan-assisted combustion air. This mode is only intended to be used in natural draft applications where a fan is only required during the purge cycle to lower the purge-time requirement. Improper use of this mode may result in inadequate airflow during combustion causing an unsafe fuel mixture and/or flame blow-back which may result in death, serious injury, property damage or equipment damage.

4.9.1 DETAILS

ITEM	
Terminals	23 & 24
Name	FAN
Type	Powered output

4.9.2 INTENDED FIELD DEVICE CONNECTIONS

FIELD DEVICE	CONFIGURATION REQUIREMENTS	CONNECTION DIAGRAMS
Forced Draft Fan	Settings > Outputs > Valves Fan Mode: Forced Draft Settings > Inputs > Proof of Airflow All settings: As desired	Fan Output Wiring
Purge Fan for natural draft applications only. * See Warning below	Settings > Outputs > Valves Fan Mode: Purge Only Settings > Inputs > Proof of Airflow All settings: As desired	Fan Output Wiring
Not Used	N/A	N/A

4.9.3 SYSTEM BEHAVIOR – FAN OUTPUT

SYSTEM STATE	FORCED DRAFT MODE	PURGE ONLY MODE
POWER ON	De-energized	De-energized
LOCKOUT	De-energized ^(NOTE 1)	De-energized ^(NOTE 1)
ALARM	De-energized ^(NOTE 1)	De-energized ^(NOTE 1)
READY	De-energized ^(NOTE 1)	De-energized ^(NOTE 1)
WAITING	De-energized ^(NOTE 1)	De-energized ^(NOTE 1)
STARTUP CHECKS	De-energized	De-energized
PROVEN PRE-PURGE – REQUEST PURGE POSITION	Energized	Energized
PROVEN PRE-PURGE – PROVE AIRFLOW	Energized	Energized
PROVEN PRE-PURGE – PRE-PURGE	Energized	Energized
PROVEN PRE-PURGE – REQUEST PILOT POSITION	Energized	De-energized
IGNITION	Energized	De-energized
PILOT	Energized	De-energized
MAIN LIGHT OFF	Energized	De-energized
PROCESS CONTROL	Energized	De-energized
MAIN TURNDOWN	Energized	De-energized

1 Energized when system is purging

4.10 STATUS CONTACT

4.10.1 DETAILS

ITEM	
Terminals	25 & 27
Name	RUN STATUS
Type	Normally open dry contact

4.10.2 INTENDED FIELD DEVICE CONNECTIONS




FIELD DEVICE	CONFIGURATION REQUIREMENTS	CONNECTION DIAGRAMS
Site equipment status panel	Settings > Outputs > Status Mode: As desired	Run Status - External AC Source Run Status - External DC Source Run Status - BMS Power
Tank pump motor enable via relay	Settings > Outputs > Status Mode: Level/Flow Control Level/Flow Control Setpoint: As desired	Run Status - Pump Control

4.10.3 STATUS CONTACT BEHAVIOR

The following table shows the status contact behavior in every system state for each available Mode setting:

SYSTEM STATE	RUN STATUS MODE	HEATING STATUS MODE	LOW TEMP WARNING MODE		LEVEL/FLOW CONTROL MODE	
			PROCESS TEMP BELOW LOW TEMP SETPOINT	PROCESS TEMP ABOVE LOW TEMP SETPOINT	LEVEL/FLOW INPUT BELOW LEVEL/FLOW CONTROL SETPOINT	LEVEL/FLOW INPUT ABOVE LEVEL/FLOW CONTROL SETPOINT
POWER ON	OPEN	OPEN	OPEN	OPEN	CLOSED	OPEN
LOCKOUT	OPEN	OPEN	OPEN	OPEN	CLOSED	OPEN
ALARM	OPEN	OPEN	OPEN	OPEN	CLOSED	OPEN
READY	OPEN	OPEN	OPEN	OPEN	CLOSED	OPEN
WAITING	CLOSED	OPEN	OPEN	CLOSED	CLOSED	OPEN
STARTUP CHECKS	CLOSED	OPEN	OPEN	CLOSED	CLOSED	OPEN
PROVEN PRE-PURGE	CLOSED	OPEN	OPEN	CLOSED	CLOSED	OPEN
IGNITION	CLOSED	CLOSED	OPEN	CLOSED	CLOSED	OPEN
PILOT	CLOSED	CLOSED	OPEN	CLOSED	CLOSED	OPEN
MAIN LIGHT OFF	CLOSED	CLOSED	OPEN	CLOSED	CLOSED	OPEN
PROCESS CONTROL	CLOSED	CLOSED	OPEN	CLOSED	CLOSED	OPEN
MAIN TURNDOWN	CLOSED	CLOSED	OPEN	CLOSED	CLOSED	OPEN

FEATURE NOTE
 Run Status Pump Control

-  Settings
-  Outputs
-  Status

The Run Status dry contact **Mode** can be set to **Level/Flow Control** and used to control a pump motor based on a level or flow input to the BMS. The contact behavior depends on the user configured **Run Status Level/Control Setpoint** that is set independently of the Level/Flow setpoints used for process control. The contact remains closed (pump energized) as long as the measured Level/Flow input reading is below the Run Status Level/Control Setpoint and remains open (pump de-energized) as long as the measured Level/Flow input reading is above the **Run Status Level/Control Setpoint** minus the configured **Level/Flow 4-20 Deadband** setting.

Additional Configuration Requirements:
 Settings > Inputs > Level/Flow > **Type**: 4-20
 Settings > Inputs > Level/Flow > **4-20 Span Min/Max**: per transmitter
 Settings > Inputs > Level/Flow > **4-20 Deadband**: as desired

4.11 CONTROLLER POWER INPUT

4.11.1 DETAILS

ITEM	
Terminals	28, 29, 30, 31, 32
Name	POWER IN
Type	BMS power input

4.11.2 INTENDED FIELD DEVICE CONNECTIONS

FIELD DEVICE	CONFIGURATION REQUIREMENTS	CONNECTION DIAGRAMS
12V Class 2 Power Supply ^(NOTE 1)	Settings > Setup > Commissioning Voltage Setting: 12V	Power Input Wiring
24V Class 2 Power Supply ^(NOTE 1)	Settings > Setup > Commissioning Voltage Setting: 24V	Power Input Wiring

1 The PF2200 must be powered from a Class 2 circuit as defined in the Canadian Electrical Code (CSA 22.2 No 1-15) or US National Electrical Code (NFPA 70).

Use the Power Diagnostics Screen (**System > Diagnostics > Power**) to see real time voltage and power consumption numbers.

4.11.3 SYSTEM BEHAVIOR – 12V MODE

SCENARIO		STATE TRANSITION IF RUNNING	ALERTS PANE
SYSTEM VOLTAGE	VOLTAGE RESTART		
BELOW 9.5V	Enabled	Waiting	Low Voltage Wait
	Disabled	Lockout	Low Voltage Alarm
BETWEEN 9.5V AND 10.2V	Any	No effect	Low Voltage Warning
BETWEEN 10.2V AND 16.2V	Any	No effect	N/A
BETWEEN 16.2V AND 16.8V	Any	No effect	High Voltage Warning
ABOVE 16.8V	Enabled	Waiting	High Voltage Wait
	Disabled	Lockout	High Voltage Alarm

4.11.4 SYSTEM BEHAVIOR – 24V MODE

SCENARIO		STATE TRANSITION IF RUNNING	ALERTS PANE
SYSTEM VOLTAGE	VOLTAGE RESTART		
BELOW 19.0V	Enabled	Waiting	Low Voltage Wait
	Disabled	Lockout	Low Voltage Alarm
BETWEEN 19.0V AND 20.4V	Any	No effect	Low Voltage Warning
BETWEEN 20.4V AND 32.4V	Any	No effect	N/A
BETWEEN 32.4V AND 33.6V	Any	No effect	High Voltage Warning
ABOVE 33.6V	Enabled	Waiting	High Voltage Wait
	Disabled	Lockout	High Voltage Alarm

4.12 EMERGENCY SHUTDOWN INPUT

4.12.1 DETAILS

ITEM	
Terminals	33 & 34
Name	ESD
Type	Digital input

4.12.2 INTENDED FIELD DEVICE CONNECTIONS

FIELD DEVICE	CONFIGURATION REQUIREMENTS	CONNECTION DIAGRAMS
External Emergency Stop Pushbutton	N/A – ESD Input is always enabled	Digital Input – Dry Contact Digital Input – Wet Contact
Shutdown signal from PLC		
Plant ESD loop		

4.12.3 SYSTEM BEHAVIOR – ESD INPUT

ESD INPUT STATE	STATE TRANSITION IF RUNNING	STATE TRANSITION IF STOPPED	ALERTS PANE
DE-ENERGIZED	Lockout	Alarm	ESD Contact Open Alarm
ENERGIZED	No effect	No effect	N/A

4.13 REMOTE START INPUT

4.13.1 DETAILS

ITEM	
Terminals	35 & 36
Name	START
Type	Digital input

4.13.2 INTENDED FIELD DEVICE CONNECTIONS

FIELD DEVICE	CONFIGURATION REQUIREMENTS	CONNECTION DIAGRAMS
Remote Control Panel BMS Start Switch	Settings > Inputs > Remote Start Remote Start: Enabled	Digital Input – Dry Contact Digital Input – Wet Contact
Start signal from PLC	Settings > Inputs > Remote Start Remote Start: Enabled	Digital Input – Dry Contact Digital Input – Wet Contact
Not Used	Settings > Inputs > Remote Start Remote Start: Disabled	N/A

4.13.3 SYSTEM BEHAVIOR – REMOTE START INPUT

CONFIGURATION DETAILS	EVENT		STATE TRANSITION	ALERTS PANE
	INITIAL SYSTEM STATE	START INPUT STATE		
REMOTE START: ENABLED	Any	Energized	No effect	N/A
	Any Stopped	De-energized	No effect	Start Contact Open Wait
	Any Running	De-energized	Waiting ^(NOTE 1)	Start Contact Open Wait
	Lockout	Energized to de-energized to energized	Ready/Alarm	N/A
	Ready	Energized to de-energized to energized	Startup	N/A
REMOTE START: DISABLED	Any	Any	No effect	N/A

1 System transitions to Waiting state via the Main Turndown state when coming from the Process Control state.

toggling the Remote Start Input from energized to de-energized to energized within 30 seconds will (1) acknowledge on-screen lockout messages and transition the system out of the Lockout state, or (2) start the system if it is in the Ready state.

4.14 AUXILIARY OUTPUTS

4.14.1 DETAILS

ITEM	
Terminals	37 & 38 and 39 & 40
Name	AUX OUT 1 and AUX OUT 2
FARC Alternate Name	FARC Air Position Output * FARC functionality only available with FARC and O2 Trim software feature installed.
Type	4-20mA output

4.14.2 INTENDED FIELD DEVICE CONNECTIONS

FIELD DEVICE	CONFIGURATION REQUIREMENTS	CONNECTION DIAGRAMS
BMS Temperature input echo to PLC	Settings > Outputs > Aux Mode: As desired Temp Echo Spans: As desired Settings > Setup > Units Temperature: As desired	Analog Output - 4-20mA echo to PLC
BMS input echo to PLC	Settings > Outputs > Aux Mode: As desired Temp Echo Spans: Ignored	Analog Output - 4-20mA echo to PLC
Modbus Register Echo to PLC	Settings > Outputs > Aux Mode: Modbus Echo Temp Echo Spans: Ignored Settings > Setup > Modbus RTU Communication: Enabled All other settings: As desired Modbus Setup: Write desired value (x10) to Remote Echo for Aux Modbus register	Analog Output - 4-20mA echo to PLC
FARC air channel position actuator	Refer to the PF2200-FD FARC User Guide for configuration details.	TCV Output Wiring

4.14.3 SYSTEM BEHAVIOR – AUX OUTPUTS

MODE	AUX OUT BEHAVIOR	EXAMPLE
ANY TEMPERATURE ECHO MODE	Temperature input value is echoed out on the Aux Output as a 4-20mA signal mapped between the Temp Echo Span values	Mode: Bath Temp Echo Temp Echo Span Min (4mA): 0 °F Temp Echo Span Max (20mA): 100 °F Actual Bath Temperature: 50 °F Aux Output Value: 12mA Note: Aux Output is disabled (i.e., 0mA output) if temperature reading is outside the configured Temp Echo Span settings.
ANY BMS INPUT ECHO MODE	BMS input value is echoed out on the Aux Output as an identical 4-20mA signal	Mode: Level/Flow Echo Actual Level/Flow Input Value: 12mA Aux Output Value: 12mA
MODBUS ECHO	Value written to Remote Echo for Aux Modbus register is echoed out on the Aux Output as a 4-20mA signal mapped between 0 and 100%. Note: Written value is interpreted as 10x the intended echo value (i.e. value of 255 written to Modbus register corresponds to a 25.5% output) Refer to PF2200-FD Modbus Configuration Guide for detailed Modbus register information.	Settings > Outputs > Aux Mode: Modbus Echo Settings > Setup > Modbus RTU Communication: Enabled Actual value written to Remote Echo for Aux Modbus register: 500 (50.0%) Aux Output Value: 12mA
AIR CHANNEL	Refer to table below	Refer to the PF2200-FD FARC User Guide for details.

4.14.4 SYSTEM BEHAVIOR – FARC AIR CHANNEL OUTPUT

SYSTEM STATE	BEHAVIOR
Any stopped state	Off Position ^(NOTE 1)
Waiting	Off Position ^(NOTE 2)
Startup Checks	Off Position
Proven Pre-Purge – Request Purge Position, Prove Airflow, Pre-Purge	Purge Position
Proven Pre-Purge – Request Pilot Position	Pilot Position
Ignition	Pilot Position
Pilot	Pilot Position
Pilot – Request Light Off Position	FARC table at configured Light Off Firing Rate
Main Light Off	FARC table at configured Light Off Firing Rate
Process Control	Position specified in FARC table for current system firing rate
Manual Control	Position specified in FARC table for configured Manual Firing Rate setting (Settings > Setup > Manual Overrides)
Main Turndown	FARC table at configured Minimum Firing Rate

1 When post-purging, the FARC air channel output is at its (1) configured Purge Position when its Post Purging Mode setting is set to Purge Position or (2) last running position prior to Lockout when its Post Purging Mode setting is set to Last Position.

2 The FARC air channel output is at Purge Position when system is post purging while in the Waiting state.

4.15 LEVEL/FLOW INPUT

4.15.1 DETAILS

ITEM	
Terminals	41 & 42
Name	Level/Flow
Type	Configurable digital or 4-20mA input

4.15.2 INTENDED FIELD DEVICE CONNECTIONS

FIELD DEVICE	CONFIGURATION REQUIREMENTS	CONNECTION DIAGRAMS
Digital level or flow switch	Settings > Inputs > Level/Flow Type: Digital Digital Mode: As desired Level/Flow Delay: As desired All other settings: Ignored System > Customization > Status Priority As desired	Digital Input - Dry Contact Digital Input - Wet Contact
4-20mA level transmitter	Settings > Inputs > Level/Flow Type: 4-20 Digital Mode: Ignored Span Min/Max: Transmitter Min/Max All other settings: As desired Settings > Setup > Units Level: As desired Level/Flow Input Units: Level System > Customization > Status Priority As desired	Analog Input - Loop Powered 4-20mA Transmitter Analog Input - Self Powered 4-20mA Transmitter
4-20mA flow transmitter	Settings > Inputs > Level/Flow Type: 4-20 Digital Mode: Ignored Span Min/Max: Transmitter Min/Max All other settings: As desired Settings > Setup > Units Flow: As desired Level/Flow Input Units: Flow System > Customization > Status Priority As desired	Analog Input - Loop Powered 4-20mA Transmitter Analog Input - Self Powered 4-20mA Transmitter
Not Used	Settings > Inputs > Level/Flow Type: Disabled	N/A

4.15.3 SYSTEM BEHAVIOR – LEVEL/FLOW INPUT

CONFIGURATION DETAILS		LEVEL/FLOW INPUT STATE	STATE TRANSITION IF RUNNING	ALERTS PANE
TYPE: DIGITAL	Digital Mode: Alarm	De-energized	Lockout	Level/Flow Contact Open Alarm
	Digital Mode: Wait	De-energized	Waiting ^(NOTE 1)	Level/Flow Contact Open Wait
	Digital Mode: Warning	De-energized	No effect	Level/Flow Contact Open Warning
	Digital Mode: Any	Energized	No effect	N/A
TYPE: 4-20	Any	Out of Range	Lockout	Level/Flow Range Alarm
	High Trip Mode: Alarm	High	Lockout	High Level/Flow Alarm
	High Trip Mode: Wait	High	Waiting ^(NOTE 1)	High Level/Flow Wait
	High Trip Mode: Warning	High	No effect	High Level/Flow Warning
	Low Trip Mode: Alarm	Low	Lockout	Low Level/Flow Alarm
	Low Trip Mode: Wait	Low	Waiting ^(NOTE 1)	Low Level/Flow Wait
	Low Trip Mode: Warning	Low	No effect	Low Level/Flow Warning
	Any	Valid Range	No effect	N/A

1 System transitions to Waiting state via the Main Turndown state when coming from the Process Control state.

4.16 PROOF OF AIRFLOW INPUT

4.16.1 DETAILS

ITEM	
Terminals	43 & 44
Name	PROOF OF AIR
Type	Configurable digital or 4-20mA input

4.16.2 INTENDED FIELD DEVICE CONNECTIONS

FIELD DEVICE	CONFIGURATION REQUIREMENTS	CONNECTION DIAGRAMS
Digital proof of airflow switch	Settings > Inputs > Proof of Airflow Type: Digital All other settings: Ignored Settings > Proc Control > Timing Airflow Proving Timeout: As desired	Digital Input – Dry Contact Digital Input – Wet Contact
4-20mA airflow transmitter	Settings > Inputs > Proof of Airflow Type: 4-20 Span Min/Max: Transmitter Min/Max All other settings: As desired Settings > Proc Control > Timing Airflow Proving Timeout: As desired Settings > Setup > Units Airflow: As desired System > Customization > Status Priority As desired	Analog Input - Loop Powered 4-20mA Transmitter Analog Input – Self Powered 4-20mA Transmitter

4.16.3 SYSTEM BEHAVIOR – PROOF OF AIRFLOW INPUT

TYPE SETTING	SCENARIO		SYSTEM STATE TRANSITION	ALERTS PANE/LOCKOUT MESSAGE	
	INITIAL SYSTEM STATE	POA INPUT STATE			
DIGITAL	Any	Out of range	Lockout if running / Alarm if stopped	Proof of Airflow Out of Range	
	Startup Checks	Energized	Lockout	Airflow Input Stuck	
		De-energized	Proven Pre-Purge	N/A	
	Proven Pre-Purge – Request Purge Position	Any	No effect	N/A	
	Proven Pre-Purge – Prove Airflow Pre-Purge Request Light Off Position (NOTE 1)	Energized	Ignition via Proven Pre-Purge sequence	N/A	
		De-energized	Lockout	Failed to Prove Airflow	
	Any Fuel state (NOTE 1)	Energized	No effect	N/A	
		De-energized	Lockout	Failed to Prove Airflow	
	4-20	Any	Out of range	Lockout if running Alarm if stopped	
		Any	High	Lockout if running Alarm if stopped	High Airflow
Startup Checks		Valid range	Lockout	Airflow Input Stuck	
		Low	Proven Pre-Purge	N/A	
Proven Pre-Purge – Request Purge Position		Low or valid range	No effect	N/A	
Proven Pre-Purge – Prove Airflow Pre-Purge Request Light Off Position (NOTE 1)		Valid range	Ignition via Proven Pre-Purge sequence	N/A	
		Low	Lockout	Failed to Prove Airflow	
Any Fuel state (NOTE 1)		Valid range	No effect	N/A	
		Low	Lockout	Failed to Prove Airflow	

1 Proof of Airflow input is ignored in all states after Pre-Purge when Fan Mode setting is set to Purge Only

4.17 AUXILIARY INPUTS

4.17.1 DETAILS

ITEM	
Terminals	45 & 46 and 47 & 48
Name	AUX IN 1 and AUX IN 2
FARC Alternate Names	FARC Air Position Feedback Input / FARC O2 Trim Input * FARC functionality only available with FARC and O2 Trim software feature installed.
Type	Configurable digital or 4-20mA inputs

4.17.2 INTENDED FIELD DEVICE CONNECTIONS

FIELD DEVICE	CONFIGURATION REQUIREMENTS	CONNECTION DIAGRAMS
Digital input switch or temperature control valve digital proof of purge or pilot position switch	Settings > Inputs > Aux 1/2 Type: Digital Digital Trip Mode: As desired All other settings: Ignored System > Customization > Status Priority As desired	Digital Input – Dry Contact Digital Input – Wet Contact
4-20mA input transmitter	Settings > Inputs > Aux 1/2 Type: 4-20 4-20 Mode: High/Low Trip Digital Trip Mode: Ignored 4-20 Span Min/Max: Transmitter Min/Max All other settings: As desired Settings > Setup > Units Aux In 1/2: As desired System > Customization > Status Priority As desired	Analog Input - Loop Powered 4-20mA Transmitter Analog Input – Self Powered 4-20mA Transmitter Analog Input – Input from PLC
4-20mA flame quality output from UV scanner	Settings > Inputs > Aux 1/2 Type: 4-20 4-20 Mode: UV Flame Quality All other settings: Ignored System > Customization > Status Priority As desired	UV Flame Scanner Wiring
External firing rate input from PLC	Settings > Inputs > Aux 1/2 Type: 4-20 4-20 Mode: Appliance Firing Rate All other settings: Ignored Settings > Proc Control > Configuration Process Control Mode: External Firing Rate	Analog Input – Input from PLC

FIELD DEVICE	CONFIGURATION REQUIREMENTS	CONNECTION DIAGRAMS
External Bath ^(NOTE 1) setpoint adjustment input from PLC	Settings > Inputs > Aux 1/2 Type: 4-20 4-20 Mode: Bath ^(NOTE 1) Process SP Adjust 4-20 Span Min/Max: As desired All other settings: Ignored Settings > Temps > Bath ^(NOTE 1) Mode: Process Control Settings > Setup > Units Aux In X: Temperature	Analog Input – Input from PLC
4-20mA FARC air channel positioner feedback signal	Refer to the PF2200-FD FARC User Guide for configuration details.	Analog Input - Loop Powered 4-20mA Transmitter
4-20mA O2 Sensor		Analog Input – Self Powered 4-20mA Transmitter
Not Used	Settings > Inputs > Aux 1/2 Type: Disabled	N/A

1 Aux Input can also be configured as a setpoint adjustment input for the Outlet temperature input.

4.17.3 SYSTEM BEHAVIOR – AUX IN HIGH/LOW TRIP

CONFIGURATION DETAILS	AUX IN INPUT STATE	STATE TRANSITION IF RUNNING	ALERTS PANE	
TYPE: DIGITAL	Digital Mode: Alarm	De-energized	Lockout	Aux In Contact Open Alarm
	Digital Mode: Wait	De-energized	Waiting	Aux In Contact Open Wait
	Digital Mode: Warning	De-energized	No effect	Aux In Contact Open Warning
	Digital Mode: Main Permissive	De-energized	Pilot – from main fuel state No effect otherwise	Aux In Contact Open Main Permissive
	Digital Mode: Any Above	Energized	No effect	N/A
TYPE: 4-20 MODE: HIGH/LOW TRIP	High Trip Mode: Alarm	Too high	Lockout	Aux In High Trip Alarm
	High Trip Mode: Wait	Too high	Waiting	Aux In High Trip Wait
	High Trip Mode: Warning	Too high	No effect	Aux In High Trip Warning
	High Trip Mode: Main Permissive	Too high	Pilot – from main fuel state No effect otherwise	Aux In High Trip Main Permissive
	Low Trip Mode: Alarm	Too low	Lockout	Aux In Low Trip Alarm
	Low Trip Mode: Wait	Too low	Waiting	Aux In Low Trip Wait
	Low Trip Mode: Warning	Too low	No effect	Aux In Low Trip Warning
	Low Trip Mode: Main Permissive	Too low	Pilot – from main fuel state No effect otherwise	Aux In Low Trip Main Permissive
TYPE: 4-20 MODE: ANY	Any	Out of Range	Lockout	Aux In Range Alarm
	Any	Valid Range	No effect	N/A

4.17.4 SYSTEM BEHAVIOR – AUX IN DIGITAL PURGE POSITION MODE

INITIAL SYSTEM STATE	AUX IN INPUT STATE	STATE TRANSITION	ALERTS PANE
STARTUP CHECKS	De-energized	No effect	N/A
	Energized	Lockout	Failed to Prove Purge Position
PROVEN PRE-PURGE - REQUEST PURGE POSITION	De-energized	Lockout	Failed to Prove Purge Position
	Energized	No effect	N/A
PROVEN PRE-PURGE - PROVE AIRFLOW PROVEN PRE-PURGE - PRE-PURGE	De-energized	Lockout	TCV Position Error
	Energized	No effect	N/A
ANY STATE NOT LISTED ABOVE	Any	No effect	N/A

4.17.5 SYSTEM BEHAVIOR – AUX IN DIGITAL PILOT POSITION MODE

INITIAL SYSTEM STATE	AUX IN INPUT STATE	STATE TRANSITION	ALERTS PANE
STARTUP CHECKS	De-energized	No effect	N/A
	Energized	Lockout	Failed to Prove Pilot Position
PROVEN PRE-PURGE - REQUEST PILOT POSITION	De-energized	Lockout	Failed to Prove Pilot Position
	Energized	No effect	N/A
IGNITION PILOT PILOT – PILOT STARTUP DELAY	De-energized	Lockout	TCV Position Error
	Energized	No effect	N/A
ANY STATE NOT LISTED ABOVE	Any	No effect	N/A

FEATURE NOTE Process Setpoint Adjustment input



Settings



Inputs



Aux In 1/Aux In 2

Configuring the **Aux In 4-20 Mode** setting as **Process SP Adjust** allows a process setpoint to be updated remotely from an external 4-20mA signal. This can be used for applications that require seasonal setpoint adjustments or other process temperature compensation. The Process Setpoint Adjust input can change the target process control temperature of a desired temperature input between its configured **Low Temp Setpoint** and **Process Setpoint**. A 4mA input signal corresponds to the configured **Aux In 4-20 Span Min** setting and a 20mA input signal corresponds to the configured **Aux In 4-20 Span Max** setting. The Process Setpoint will be clamped between the configured **Low Temp Setpoint** and **Process Setpoint** regardless of the setpoint adjustment input signal (e.g. All setpoint adjustment signals below the configured **Low Temp Setpoint** will change the **Process Setpoint** to match the **Low Temp Setpoint**.)

4.17.6 SYSTEM BEHAVIOR – AUX IN AIR POSITION

INITIAL SYSTEM STATE	AUX IN INPUT STATE	STATE TRANSITION	ALERTS PANE
ANY	Out of Range	Lockout	Aux In Out of Range
READY STARTUP CHECKS	Any	No effect	N/A
REQUEST PURGE POSITION	Within Position Error	Prove Airflow	N/A
	Outside Position Error	Lockout	Air Failed to Prove Purge Position
REQUEST PILOT POSITION	Within Position Error	Ignition	N/A
	Outside Position Error	Lockout	Air Failed to Prove Pilot Position
REQUEST LIGHT OFF POSITION	Within Position Error	Main Light Off	N/A
	Outside Position Error	Lockout	Air Failed to Prove Light Off Position
PROVE AIRFLOW PRE-PURGE IGNITION PILOT MAIN LIGHT OFF PROCESS CONTROL	Within Position Error	No effect	N/A
	Outside Position Error	Lockout	Air Position Error

4.17.7 SYSTEM BEHAVIOR – O2 SENSOR

INITIAL SYSTEM STATE	AUX IN INPUT STATE	STATE TRANSITION	ALERTS PANE
PROCESS CONTROL * AFTER O2 SENSOR WARMUP ONLY	Above Low Trip Setpoint	No effect – system is actively trimming	High Percent O2 warning if above High Trip Setpoint
	Below Low Trip Setpoint	Lockout	Low Percent O2 alarm
ANY OTHER STATE	Any	No effect	N/A

4.18 UV FLAME DETECTION INPUTS

4.18.1 DETAILS

ITEM	
Terminals	49, 50, 51, 52
Name	UV SCANNER
Type	Digital inputs

4.18.2 INTENDED FIELD DEVICE CONNECTIONS

FIELD DEVICE	CONFIGURATION REQUIREMENTS	CONNECTION DIAGRAMS
UV main flame scanner	Settings > Proc Control > Configuration UV Flame Detect Mode: Main Only Pilot Off Mode: As desired Settings > Inputs > Aux 1/2 Configure for UV flame quality if desired System > Customization > Status Priority As desired	UV Flame Scanner Wiring
UV pilot and main flame scanner	Settings > Proc Control > Configuration UV Flame Detect Mode: Pilot and Main Pilot Off Mode: Interrupted Pilot 2: Disabled Settings > Inputs > Aux 1/2 Configure for UV flame quality if desired System > Customization > Status Priority As desired	UV Flame Scanner Wiring
Not Used	Settings > Proc Control > Configuration UV Flame Detect Mode: Disabled	N/A

The PF2200-FD supports flame scanners with digital outputs for (1) device fault, (2) flame presence detected and (3) flame absence detected. The flame failure response time of the flame scanner must be 3 seconds or less to ensure that the overall UV flame failure response time of the system is within 4 seconds. A 4-20mA flame quality output is optional. The following UV flame scanners are approved for use with the PF2200-FD:

1. Fireye 65UV5-1004E
2. Zeeco ZPF-120 *

* Zeeco ZPF-120 scanner does not have a separate fault output. Internal faults are conveyed as a mismatch on the Flame On and Flame Off outputs. When using this scanner, the UV PWR output and UV Fault input (terminals 49 and 50) must be shorted together with a jumper. Note that a scanner fault will be announced in the Alerts Pane as a UV Flame Detect Mismatch.

4.18.3 SYSTEM BEHAVIOR – UV FAULT INPUT

UV FAULT INPUT STATE	STATE TRANSITION IF RUNNING	STATE TRANSITION IF STOPPED	ALERTS PANE
DE-ENERGIZED	Lockout	Alarm	UV Flame Detect Fault Alarm
ENERGIZED	No effect	No effect	N/A

4.18.4 SYSTEM BEHAVIOR – UV FLAME ON AND FLAME OFF INPUTS

UV FLAME ON INPUT STATE	UV FLAME OFF INPUT STATE	SYSTEM INTERPRETATION	STATE TRANSITION IF RUNNING	STATE TRANSITION IF STOPPED	ALERTS PANE
DE-ENERGIZED	De-energized	Mismatch	Lockout	Alarm	UV Flame Detect Mismatch Alarm
ENERGIZED	Energized	Mismatch	Lockout	Alarm	N/A
DE-ENERGIZED	Energized	UV flame absent	Refer to Operating Sequence Section for state specific behavior		N/A
ENERGIZED	De-energized	UV flame present			N/A

4.19 PILOT IGNITION I/O

4.19.1 DETAILS

ITEM	
Terminals	53, 54, 55, 56 and 57, 58, 59, 60
Name	PILOT 1 ION/COIL and PILOT 2 ION/COIL
Type	ION – Ionization flame detection signal utilizing flame rectification COIL – Powered ignition output

4.19.2 INTENDED FIELD DEVICE CONNECTIONS

FIELD DEVICE	CONFIGURATION REQUIREMENTS	CONNECTION DIAGRAMS
Profire Ignition Coil	Settings > Proc Control > Ignition Mode: Coil Settings > Proc Control > Configuration Pilot 2: As desired	Single Rod Ignition Wiring Dual Rod Ignition Wiring
Separate ignition module with DC input	Settings > Proc Control > Ignition Mode: HEI Settings > Proc Control > Configuration Pilot 2: As desired	Dual Rod Ignition Wiring

4.19.3 SYSTEM BEHAVIOR – COIL OUTPUTS

CONFIGURATION DETAILS	SYSTEM STATE	COIL 1 OUTPUT BEHAVIOR	COIL 2 OUTPUT BEHAVIOR
MODE: COIL	Ignition	Energized - Pulsed	De-energized ^(NOTE 2)
	Any other state	De-energized ^(NOTE 1)	De-energized ^(NOTE 2)
MODE: HEI	Ignition	Energized - Steady	De-energized ^(NOTE 2)
	Any other state	De-energized ^(NOTE 1)	De-energized ^(NOTE 2)

1 Energized under Reignition conditions when Reignition setting is Enabled

2 Follows behavior of Coil 1 output when Pilot 2 is Enabled

4.19.4 SYSTEM BEHAVIOR – IONIZATION INPUTS

FLAME VOLTAGE READINGS		SYSTEM INTERPRETATION
STRENGTH	Greater than 800 mV	Strong Flame Detected
	Between 400 mV and 800 mV	Weak Flame Detected
	Less than 400 mV	No Flame Detected
DC HIGH	Above 2500 mV	Flame Voltage is within acceptable range
	Below 2500 mV	Flame Voltage Fault
AC	Above 500 mV _{pk-pk}	Flame Load Monitor Check passed
	Below 500 mV _{pk-pk}	Flame Load Monitor Check failed

Check the Flame Diagnostics Screen (**System > Diagnostics > Flame**) to see real-time flame strength and voltage readings.

4.19.5 SYSTEM BEHAVIOR – FLAME DETECTION

CONFIGURATION DETAILS	PILOT 1 FLAME PRESENCE	PILOT 2 FLAME PRESENCE	SYSTEM INTERPRETATION
PILOT 2: DISABLED MINIMUM PILOTS RUNNING: 1	Present	Any	Pilot flame present
	Absent	Any	Pilot flame absent
PILOT 2: ENABLED MINIMUM PILOTS RUNNING: 1	Present	Any	Pilot flame present
	Any	Present	Pilot flame present
	Absent	Absent	Pilot flame absent
PILOT 2: ENABLED MINIMUM PILOTS RUNNING: 2	Present	Present	Pilot flame present
	Absent	Any	Pilot flame absent
	Any	Absent	Pilot flame absent

4.20 EXTERNAL IGNITION SWITCH INPUT

4.20.1 DETAILS

ITEM	
Terminals	PWR, IGN, RUN
Name	SWITCH
Type	Digital input

4.20.2 INTENDED FIELD DEVICE CONNECTIONS

FIELD DEVICE	CONFIGURATION REQUIREMENTS	CONNECTION INSTRUCTIONS
Profire PF2200 Ignition Switch	N/A – Always enabled	Connect factory wired switch connector to BMS Switch terminal header.
Not Used	N/A – Always enabled	Add wire jumper between Switch PWR and RUN terminals

4.20.3 SYSTEM BEHAVIOR – EXTERNAL SWITCH INPUT

INITIAL BURNER STATE	EXTERNAL SWITCH POSITION	STATE TRANSITION	ALERTS PANE
ANY	Run	No effect	N/A
ANY	Ignite for less than 1s	No effect	N/A
READY	Ignite for more than 1s	Startup	N/A
ANY FUEL STATE	Ignite for more than 1s	Proven Pre-Purge	N/A
ANY NON-RUNNING STATE	Ignite for more than 5s	Alarm	External Switch Stuck Alarm
ANY RUNNING STATE	Ignite for more than 5s	Lockout	External Switch Stuck Alarm
ANY NON-RUNNING STATE	Stop	Alarm	User Stop via External Switch Alarm
ANY RUNNING STATE	Stop	Lockout	User Stop via External Switch Alarm
LOCKOUT	Run to Stop to Run	Ready/Alarm	N/A

Toggling the External Ignition Switch from Run position to Stop position to Run position within 30 seconds will acknowledge on-screen lockout messages and transition the system out of the Lockout state. Toggling the External Ignition Switch to the Ignite position while in a fuel state will transition the system to the Proven Pre-Purge state and initiate pilot reignition. This is useful upon loss of a single pilot flame when controlling a dual pilot application; the pilots can be reignited without stopping the system.

4.21 BATH TEMPERATURE INPUT

4.21.1 DETAILS

ITEM	
Terminals	61, 62, 63 and 64, 65, 66
Name	BATH
Type	Configurable Type K Thermocouple or PT-100 RTD temperature input

4.21.2 INTENDED FIELD DEVICE CONNECTIONS

FIELD DEVICE	CONFIGURATION REQUIREMENTS	CONNECTION DIAGRAMS
Type K Thermocouple installed in Appliance Bath (Grounded or Ungrounded)	<p>Settings > Temps > Bath Type: TC Input: As desired ^(NOTE 1) All other settings: As desired</p> <p>Settings > Proc Control > Configuration Process Control Mode: As desired Pilot Off Mode: As desired</p> <p>Settings > Setup > Units Temperature: As desired</p> <p>System > Customization > Status Priority As desired</p>	<p>Temperature Input- Dual Type K Thermocouple Temperature Input- Single Type K Thermocouple</p>
PT100 RTD installed in Appliance Bath	<p>Settings > Temps > Bath Type: RTD Input: As desired ^(NOTE 1) All other settings: As desired</p> <p>Settings > Proc Control > Configuration Process Control Mode: As desired Pilot Off Mode: As desired</p> <p>Settings > Setup > Units Temperature: As desired</p> <p>System > Customization > Status Priority As desired</p>	<p>Temperature Input- Dual 3-Wire RTD Temperature Input- Single 3-wire RTD</p>

1 Bath Input setting is required to be set to Dual if the Bath Input is specified as a safety function.

4.21.3 SYSTEM BEHAVIOR – BATH TEMPERATURE INPUT

TEMPERATURE READING	STATE TRANSITION WHEN RUNNING FOR EACH BATH INPUT MODE	
	PROCESS CONTROL	HIGH TEMP ESD
OPEN/OUT OF RANGE	Lockout	Lockout
SHORT IN RTD MODE	Lockout	Lockout
ABOVE HIGH TEMP SETPOINT	Lockout	Lockout
BELOW HIGH TEMP SETPOINT AND ABOVE PILOT OFF SETPOINT	Refer to Operating Sequence Section for state specific behavior	No effect
BELOW PILOT OFF SETPOINT AND ABOVE MAIN OFF SETPOINT		No effect
BELOW MAIN OFF SETPOINT AND ABOVE PROCESS SETPOINT		No effect
BELOW PROCESS SETPOINT AND ABOVE LOW TEMP SETPOINT		No effect
BELOW LOW TEMP SETPOINT		No effect

4.22 OUTLET TEMPERATURE INPUT

4.22.1 DETAILS

ITEM	
Terminals	67, 68, 69
Name	OUTLET
Type	Configurable Type K Thermocouple or PT-100 RTD temperature input

4.22.2 INTENDED FIELD DEVICE CONNECTIONS

FIELD DEVICE	CONFIGURATION REQUIREMENTS	CONNECTION DIAGRAMS
Single Element Type K Thermocouple installed at Appliance Outlet (Grounded or Ungrounded)	Settings > Temps > Outlet Type: TC Mode: As desired Settings > Setup > Units Temperature: As desired System > Customization > Status Priority As desired	Temperature Input- Single Type K Thermocouple
Single Element PT100 RTD installed at Appliance Outlet	Settings > Temps > Outlet Type: RTD Mode: As desired Settings > Setup > Units Temperature: As desired System > Customization > Status Priority As desired	Temperature Input- Single 3-wire RTD
Not Used	Settings > Temps > Outlet Mode: Disabled	N/A

4.22.3 SYSTEM BEHAVIOR – OUTLET TEMPERATURE INPUT

TEMPERATURE READING	STATE TRANSITION WHEN RUNNING FOR EACH OUTLET INPUT MODE			
	PROCESS CONTROL	HIGH TEMP ESD	DISPLAY ONLY	DISABLED
OPEN/OUT OF RANGE	Lockout	Lockout	No effect*	No effect
SHORT IN RTD MODE	Lockout	Lockout	No effect	No effect
ABOVE HIGH TEMP SETPOINT	Lockout	Lockout	No effect	No effect
BELOW HIGH TEMP SETPOINT AND ABOVE PILOT OFF SETPOINT	Refer to Operating Sequence Section for state specific behavior	No effect	No effect	No effect
BELOW PILOT OFF SETPOINT AND ABOVE MAIN OFF SETPOINT		No effect	No effect	No effect
BELOW MAIN OFF SETPOINT AND ABOVE PROCESS SETPOINT		No effect	No effect	No effect
BELOW PROCESS SETPOINT AND ABOVE LOW TEMP SETPOINT		No effect	No effect	No effect
BELOW LOW TEMP SETPOINT		No effect	No effect	No effect

* Out of Range warning displayed in Alerts Pane

4.23 STACK TEMPERATURE INPUT

4.23.1 DETAILS

ITEM	
Terminals	70, 71, 72
Name	STACK
Type	Configurable Type K Thermocouple or PT-100 RTD temperature input

4.23.2 INTENDED FIELD DEVICE CONNECTIONS

FIELD DEVICE	CONFIGURATION REQUIREMENTS	CONNECTION DIAGRAMS
Single Element Type K Thermocouple installed in Appliance Stack (Grounded or Ungrounded)	Settings > Temps > Stack Type: TC Mode: As desired Settings > Setup > Units Temperature: As desired System > Customization > Status Priority As desired	Temperature Input- Single Type K Thermocouple
Single Element PT100 RTD installed in Appliance Stack	Settings > Temps > Stack Type: RTD Mode: As desired Settings > Setup > Units Temperature: As desired System > Customization > Status Priority As desired	Temperature Input- Single 3-wire RTD
Not Used	Settings > Temps > Stack Mode: Disabled	N/A

4.23.3 SYSTEM BEHAVIOR – STACK TEMPERATURE INPUT


TEMPERATURE READING	STATE TRANSITION WHEN RUNNING FOR EACH STACK INPUT MODE		
	HIGH TEMP ESD	DISPLAY ONLY	DISABLED
OPEN/OUT OF RANGE	Lockout	No effect*	No effect
SHORT IN RTD MODE	Lockout	No effect	No effect
ABOVE HIGH TEMP SETPOINT	Lockout	No effect	No effect
BELOW HIGH TEMP SETPOINT	No effect	No effect	No effect

* Out of Range warning displayed in Alerts Pane

5 OPERATING SEQUENCE

The PF2200-FD utilizes a state-based control scheme to safely monitor and control a burner. Each system state has specific entry and exit requirements and defined output behavior. The sections below outline the system transitions, output behavior and configuration settings related to each system state.

The current system state is always displayed in the Status Bar located at the top of the User Interface screen.

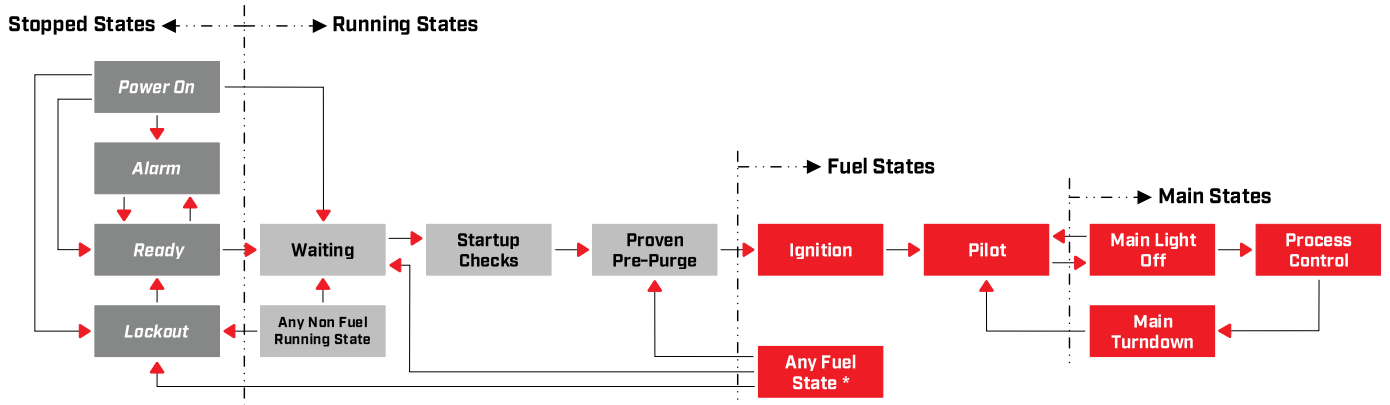

* The system cannot transition from the Process Control state to the Waiting state without going through the Main Turndown state first.

STATE NAME	COIL OUTPUTS	PILOT OUTPUTS	SSV OUTPUTS	FAN OUTPUT
Power On	De-energized	De-energized	De-energized	De-energized
Alarm	De-energized	De-energized	De-energized	De-energized (NOTE 3)
Ready	De-energized	De-energized	De-energized	De-energized (NOTE 3)
Lockout	De-energized	De-energized	De-energized	De-energized (NOTE 3)
Waiting	De-energized	De-energized	De-energized	De-energized (NOTE 3)
Startup Checks	De-energized	De-energized	De-energized	De-energized
Proven Pre-Purge	De-energized	De-energized	De-energized	Energized (NOTE 4)
Ignition	Energized	Energized	De-energized	Energized (NOTE 5)
Pilot	De-energized (NOTE 1)	Energized	De-energized	Energized (NOTE 5)
Main Light Off	De-energized (NOTE 1)	Energized (NOTE 2)	Energized	Energized (NOTE 5)
Process Control	De-energized (NOTE 1)	Energized (NOTE 2)	Energized	Energized (NOTE 5)
Main Turndown	De-energized (NOTE 1)	Energized (NOTE 2)	Energized	Energized (NOTE 5)

1 Coil outputs can be energized in this state upon flame loss when Reignition setting is Enabled

2 Pilot outputs are de-energized in this state when Pilot Off Mode is set to Interrupted

3 Fan output is energized when system is post-purging

4 Fan output is de-energized when Fan Mode is set to Purge Only and system is in Request Pilot Position stage of the Proven Pre-Purge state.


5 Fan output is de-energized when Fan Mode is set to Purge Only

Alert types displayed in the Alerts Pane on the Status Screen:

1. Alarm – Prevents the system from entering any running state.
2. Wait – Prevents the system from entering any fuel state.
3. Main Permissive – Prevents the system from entering any main fuel state.
4. Warning – Displayed on screen only - does not affect system state.

5.1 POWER ON STATE

The Power On state is the default state of the system upon initial powered up. All safety outputs are de-energized upon entering the state.

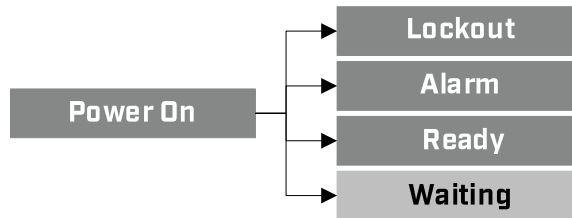

5.1.1 POWERED OUTPUT BEHAVIOR IN THE POWER ON STATE

OUTPUT	BEHAVIOR
Coil 1 Output	De-energized
Coil 2 Output	De-energized
Pilot 1 Valve Output	De-energized
Pilot 2 Valve Output	De-energized
Main SSV Outputs	De-energized
Fan Output	De-energized ^(NOTE 1)
TCV/FARC Air Output	Off Position

1 Fan output is energized until purge time has elapsed if system was purging at last power down

5.1.2 TRANSITIONS TO THE POWER ON STATE

FROM	SCENARIO	CONDITION
Power Off	System has just powered up	Any

5.1.3 TRANSITIONS FROM THE POWER ON STATE

TO	SCENARIO	CONDITION
Lockout	Any	Unacknowledged lockout message present at last power down
Alarm	Any	Alarm condition present
Ready	Burner was not running at last power down	Voltage Restart setting Enabled, AND No alarm condition present
	Any	Voltage Restart setting Disabled, AND No alarm condition present
Waiting	System was running at last power down	Voltage Restart setting Enabled, AND No alarm condition present


The Voltage Restart setting dictates whether a running system will be automatically restarted following a power loss event. The system will only restart automatically if there are no alarms present.

5.1.4 RELATED SETTINGS – POWER ON STATE

SETTING	NAVIGATION
Voltage Restart	Settings > Setup > Commissioning

5.2 LOCKOUT STATE

The Lockout state holds all safety outputs in the de-energized position, triggers a post purge and prevents the system from entering any other state until the user acknowledges an on-screen lockout message.

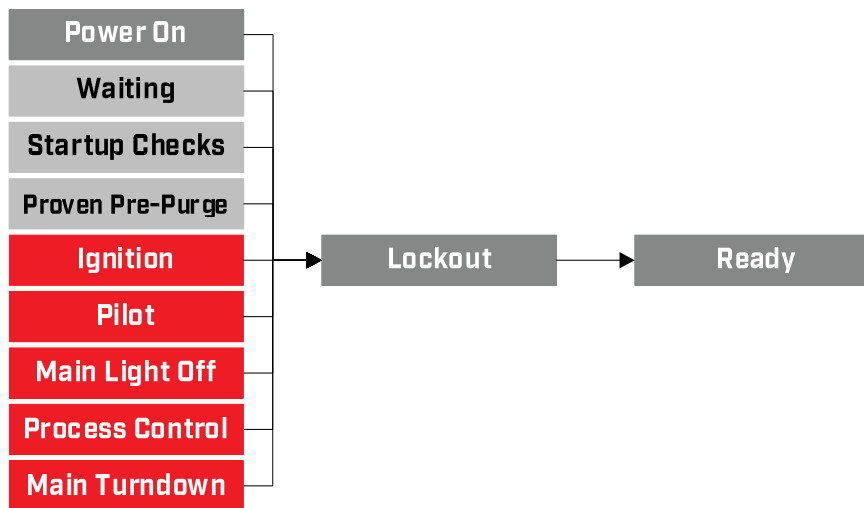

5.2.1 POWERED OUTPUT BEHAVIOR IN THE LOCKOUT STATE

OUTPUT	BEHAVIOR
Coil 1 Output	De-energized
Coil 2 Output	De-energized
Pilot 1 Valve Output	De-energized
Pilot 2 Valve Output	De-energized
Main SSV Outputs	De-energized
Fan Output	De-energized ^(NOTE 1)
TCV/FARC Air Output	Off Position ^(NOTE 2)

1 Fan Output is energized while system is purging

2 TCV/Air output will (1) remain in its pre-Lockout position or (2) move to its configured Purge Position while system is purging and Post Purge Mode setting is set to Last Position or Purge Position, respectively.

5.2.2 TRANSITIONS TO THE LOCKOUT STATE

FROM	SCENARIO	CONDITION
Power On	System has just powered up	Lockout message present at last power down
Waiting	Any	Alarm condition present
	System stopped by user	Any
Startup Checks	Any	Alarm condition present
	Flame Detected	Any
	System stopped by user	Any
	Airflow Failure	Any
	Proof of Position Failure	PoP/Aux In configured for position proving
Proven Pre-Purge	Any	Alarm condition present
	System stopped by user	Any
	Failed to prove purge position	PoP/Aux In configured for purge position proving
	Failed to prove airflow	Any
	Failed to prove pilot position	PoP/Aux In configured for pilot position proving
Ignition	Any	Alarm condition present
	System stopped by user	Any
	Pilot fails to ignite	Ignition attempt limit has been exceeded

FROM	SCENARIO	CONDITION
Pilot	Any	Alarm condition present
	System stopped by user	Any
	Flame failure	Relight Attempts limit has been exceeded
	Failed to prove light off position	System is in Request Light Off Position stage of Pilot state AND Proof of Position Type is not Disabled
	Main Flame detected	System is in Request Light Off Position stage of Pilot state AND UV Flame Detect Mode is set to Main Only
Main Light Off Process Control Main Turndown	Any	Alarm condition present
	System stopped by user	Any
	Flame failure	Relight Attempts limit has been exceeded

There are 4 ways to stop the system:

1. USER INTERFACE: Press **STOP** then confirm by pressing **OK** or **STOP** again.
2. START/STOP SWITCH: Turn switch to STOP position.
3. ESD INPUT: Toggle input to de-energized position.
4. MODBUS: Write Stop command to the Start/Stop Modbus register.

Refer to the [Forced Draft Modbus Configuration Guide](#) for Modbus register addresses and commands.
Transitions from The Lockout State

5.2.3 TRANSITIONS FROM THE LOCKOUT STATE

TO	SCENARIO	CONDITION
Ready	Lockout message acknowledged by user	No alarm condition present

There are 4 ways to acknowledge a Lockout:

1. USER INTERFACE: Press **OK** on the keypad.
2. START/STOP SWITCH: Toggle switch from RUN to STOP to RUN position.
3. REMOTE START INPUT: Toggle input from energized to de-energized to energized.
4. MODBUS: Write Acknowledge command to the Clear Shutdown Code Modbus register

Refer to the [Forced Draft Modbus Configuration Guide](#) for Modbus register addresses and commands.

5.2.4 RELATED SETTINGS – LOCKOUT STATE

SETTING	NAVIGATION
Relight Attempts	Settings > Proc Control > Ignition
Purge Time	Settings > Proc Control > Timing
Remote Start	Settings > Inputs > Remote Start
RTU Communication	Settings > Setup > Modbus

5.3 ALARM STATE

The Alarm state is the state to which the system will transition when an alarm is present and the system is not running. The system cannot transition out of the Alarm state until all alarms are cleared. Check the Alerts Pane on the screen to see a list of active alarms.



5.3.1 POWERED OUTPUT BEHAVIOR IN THE ALARM STATE

OUTPUT	BEHAVIOR
Coil 1 Output	De-energized
Coil 2 Output	De-energized
Pilot 1 Valve Output	De-energized
Pilot 2 Valve Output	De-energized
Main SSV Outputs	De-energized
Fan Output	De-energized ^(NOTE 1)
TCV/FARC Air Output	Off Position ^(NOTE 2)

1 Fan Output is energized while system is purging
2 TCV/Air Output will (1) remain in its pre-Lockout position or (2) move to its configured Purge Position while system is purging and Post Purge Mode setting is set to Last Position or Purge Position, respectively.

5.3.2 TRANSITIONS TO THE ALARM STATE

FROM	SCENARIO	CONDITION
Power On	System has just powered up	Alarm condition present
Ready	Any	Alarm condition present

5.3.3 TRANSITIONS FROM THE ALARM STATE

TO	SCENARIO	CONDITION
Ready	Any	No alarm conditions present

The UI Alerts Pane only displays active alerts – once an alarm condition is cleared, the corresponding alarm is removed from the Alerts Pane. Check the Event Log (**System Screen > Logging > Events**) for a history of all alarm events.

5.3.4 RELATED SETTINGS – ALARM STATE

SETTING	NAVIGATION
Comm Loss Alarm	Settings > Setup > Commissioning

5.4 READY STATE

The Ready state is the state to which the system transitions when all alarm conditions are cleared and the system is safe to start. Users are only able to start the system from the Ready state.



5.4.1 POWERED OUTPUT BEHAVIOR IN THE READY STATE

OUTPUT	BEHAVIOR
Coil 1 Output	De-energized
Coil 2 Output	De-energized
Pilot 1 Valve Output	De-energized
Pilot 2 Valve Output	De-energized
Main SSV Outputs	De-energized
Fan Output	De-energized ^(NOTE 1)
TCV/FARC Air Output	Off Position ^(NOTE 2)

1 Fan Output is energized while system is purging
2 TCV/Air Output will (1) remain in its pre-Lockout position or (2) move to its configured Purge Position while system is purging and Post Purge Mode setting is set to Last Position or Purge Position, respectively.

5.4.2 TRANSITIONS TO THE READY STATE

FROM	SCENARIO	CONDITION
Power On	System has just powered up	No alarm conditions present
Lockout	Lockout message acknowledged by user	No alarm conditions present
Alarm	Alarm condition has been cleared	No additional alarm conditions present

5.4.3 TRANSITIONS FROM THE READY STATE

TO	SCENARIO	CONDITION
Alarm	Any	Alarm condition present
Waiting	Burner started by user	Any

There are 4 ways to start a burner from the Ready state:

1. USER INTERFACE: Press **START** and confirm start by pressing **OK**.
2. START/STOP SWITCH: Turn switch to the Ignite position and hold for 1 second.
3. REMOTE START INPUT: Toggle input from energized to de-energized to energized.
4. MODBUS: Write Start command to the Start Stop Modbus register.


Refer to the [Forced Draft Modbus Configuration Guide](#) for register addresses and commands.

5.4.4 RELATED SETTINGS – READY STATE

SETTING	NAVIGATION
Remote Start	Settings > Inputs > Remote Start
RTU Communication	Settings > Setup > Modbus

5.5 WAITING STATE

The Waiting state is a running state that does not admit fuel to the burner. The system will initiate a post purge when entering the Waiting state from a fuel state. The burner will only proceed to the Startup Checks state when all wait conditions are cleared.

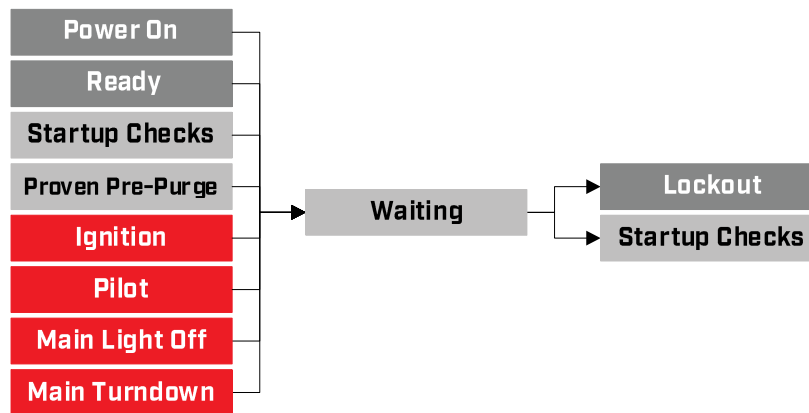

5.5.1 POWERED OUTPUT BEHAVIOR IN THE WAITING STATE

OUTPUT	BEHAVIOR
Coil 1 Output	De-energized
Coil 2 Output	De-energized
Pilot 1 Valve Output	De-energized
Pilot 2 Valve Output	De-energized
Main SSV Outputs	De-energized
Fan Output	De-energized ^(NOTE 1)
TCV/FARC Air Output	Off Position ^(NOTE 2)

1 Fan Output is energized while system is purging
 2 TCV/Air Output will move to its configured Purge Position while system is purging.

5.5.2 TRANSITIONS TO THE WAITING STATE

FROM	SCENARIO	CONDITION
Power On	System was running at last power down	Voltage Restart setting Enabled, AND No alarm condition present
Ready	System started by user	Any
Startup Checks Proven Pre-Purge Ignition Pilot Main Light Off	Any	Wait condition is present
Main Turndown	Main Turndown complete	Wait condition is present

5.5.3 TRANSITIONS FROM THE WAITING STATE

TO	SCENARIO	CONDITION
Lockout	Any	Alarm condition present
	System stopped by user	Any
Startup Checks	Any	All waits have been cleared

5.5.4 RELATED SETTINGS – WAITING STATE

SETTING	NAVIGATION
Voltage Restart	Settings > Setup > Commissioning

5.6 STARTUP CHECKS STATE

The Startup Checks state is a running state that does not admit fuel to the burner. The system will initiate a series of safety checks to ensure that the system is in a known state before proceeding to the Proven Pre-Purge state to prepare for an ignition attempt. The burner will only proceed to the Proven Pre-Purge state when all the following safety checks are successful:

- Confirm no flame is detected
 - Confirm Light Off Position input is not satisfied *
 - Confirm Pilot Position input is not satisfied *
 - Confirm Purge Position input is not satisfied *
 - Confirm Proof of Airflow input is not satisfied
- * Ignored if not enabled



5.6.1 POWERED OUTPUT BEHAVIOR IN THE STARTUP CHECKS STATE

OUTPUT	BEHAVIOR
Coil 1 Output	De-energized
Coil 2 Output	De-energized
Pilot 1 Valve Output	De-energized
Pilot 2 Valve Output	De-energized
Main SSV Outputs	De-energized
Fan Output	De-energized
TCV/FARC Air Output	Off Position

5.6.2 TRANSITIONS TO THE STARTUP CHECKS STATE

FROM	SCENARIO	CONDITION
Waiting	Any	All waits have been cleared

5.6.3 TRANSITIONS FROM THE STARTUP CHECKS STATE

TO	SCENARIO	CONDITION
Lockout	Any	Alarm condition is present
	System stopped by user	Any
	Flame detected	Any
	Airflow failure	Any
	Proof of Position failure	PoP/Aux input configured for position proving
Waiting	Any	Wait condition is present
Proven Pre-Purge	Any	All startup checks successful

5.6.4 RELATED SETTINGS – STARTUP CHECKS STATE


SETTING	NAVIGATION
Startup Check Timeout	Settings > Proc Control > Timing
Proof of Position Type	Settings > Inputs > Proof of Position
Proof of Airflow	Settings > Inputs > Proof of Airflow
Aux Digital Purge Position or Pilot Position	Settings > Inputs > Aux 1 or Aux 2

5.7 PROVEN PRE-PURGE STATE

The Proven Pre-Purge state is a running state that does not admit fuel to the burner. The system will energize the Fan output, prove airflow and hold for the user configured Pre-Purge Time to ensure that it is safe to proceed with burner ignition.

The Proven Pre-Purge state consists of the following sub states. Each of which are annunciated separately in the UI Status Bar:

- Request Purge Position
- Prove Airflow
- Pre-Purge
- Request Pilot Position

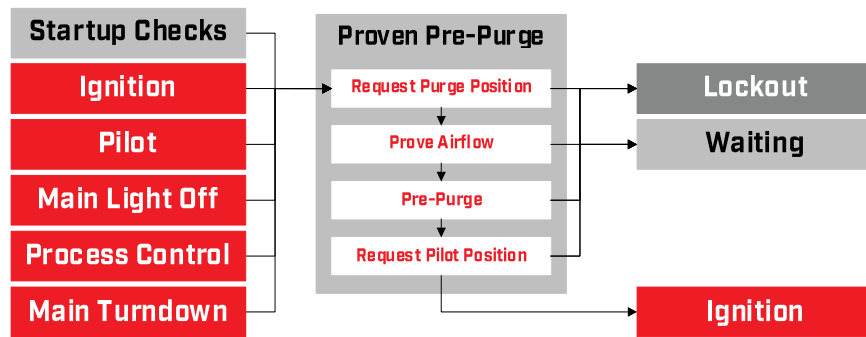

5.7.1 POWERED OUTPUT BEHAVIOR IN THE PROVEN PRE-PURGE STATE

OUTPUT	REQUEST PURGE POSITION PROVE AIRFLOW PRE-PURGE	REQUEST PILOT POSITION
Fan Output	Energized	Energized ^(NOTE 1)
TCV/FARC Air Output	Purge Position	Pilot Position
Coil 1 Output	De-energized	
Coil 2 Output	De-energized	
Pilot 1 Valve Output	De-energized	
Pilot 2 Valve Output	De-energized	
Main SSV Outputs	De-energized	

¹ Fan output is de-energized when Fan Mode is set to Purge Only

5.7.2 TRANSITIONS TO THE PROVEN PRE-PURGE STATE

FROM	SCENARIO	CONDITION
Startup Checks	Any	All startup checks successful
Ignition	Pilot fails to ignite	Ignition attempt limit not yet exceeded
Pilot Process Control	Flame failure	Relight attempts limit not yet exceeded
	Reignition command issued by the user	Any
Main Light Off	Flame failure	Relight attempts limit not yet exceeded
	Reignition command issued by the user	Any
	Process Temperature is too high	Pilot Off Mode is set to Interrupted
	Main Permissive condition is present	Pilot Off Mode is set to Interrupted
Main Turndown	Flame failure	Relight attempts limit not yet exceeded
	Reignition command issued by the user	Any
	Main Turndown complete	Pilot Off Mode is set to Interrupted

5.7.3 TRANSITIONS WITHIN THE PROVEN PRE-PURGE STATE

FROM	TO	SCENARIO	CONDITION
Request Purge Position	Prove Airflow	Proof of purge position input is satisfied	PoP/Aux input configured for purge position proving
		Purge Position Timeout has elapsed	PoP/Aux input is not configured for purge position proving
Prove Airflow	Pre-Purge	Proof of Airflow input has been satisfied	Airflow Proving Timeout has not elapsed
Pre-Purge	Request Pilot Position	Pre-Purge time has elapsed	Any

5.7.4 TRANSITIONS FROM THE PROVEN PRE-PURGE STATE

TO	SCENARIO	CONDITION
Lockout	Any	Alarm condition present
	System stopped by user	Any
	Failed to prove purge position	PoP/Aux input configured for purge position proving AND Purge Position Timeout has elapsed
	Failed to prove airflow	Any
	Failed to prove pilot position	PoP/Aux input configured for pilot position proving
Waiting	Any	Wait condition is present
Ignition	All Proven Pre-Purge sub states have been satisfied AND Proof of pilot position input is satisfied	PoP/Aux input configured for pilot position proving
	All Proven Pre-Purge sub states have been satisfied AND Pilot Position Timeout has elapsed	PoP/Aux input is not configured for pilot position proving

5.7.5 RELATED SETTINGS – PROVEN PRE-PURGE STATE

SETTING	NAVIGATION
Purge Position	Settings > Outputs > TCV
Pilot Position	Settings > Outputs > TCV
Pilot Position Timeout	Settings > Proc Control > Timing
Purge Position Timeout	Settings > Proc Control > Timing
Pre-Purge Time	Settings > Proc Control > Timing
Airflow Proving Timeout	Settings > Proc Control > Timing
Relight Attempts	Settings > Proc Control > Ignition
Pilot Off Mode	Settings > Proc Control > Configuration
Reignition	Settings > Proc Control > Configuration

5.8 IGNITION STATE

The Ignition state is the first fuel state in the burner startup sequence. The coil output(s) are energized, then the pilot valve output(s) are energized to attempt to light off the pilot burner(s). Successful pilot ignition is required before the burner can transition into any other fuel state.



5.8.1 POWERED OUTPUT BEHAVIOR IN THE IGNITION STATE

OUTPUT	BEHAVIOR
Coil 1 Output	Energized
Coil 2 Output	De-energized ^(NOTE 1)
Pilot 1 Valve Output	Energized
Pilot 2 Valve Output	De-energized ^(NOTE 1)
Main SSV Outputs	De-energized
Fan Output	Energized ^(NOTE 2)
TCV/FARC Air Output	Pilot Position

*1 Energized when Pilot 2 is Enabled
 2 Fan Output is de-energized when Fan Mode is set to Purge Only*

If Pilot 2 is Enabled and Minimum Pilots Running is set to 2, successful pilot ignition requires flame to be established on both Pilot 1 and Pilot 2. If Minimum Pilots Running is set to 1, successful pilot ignition requires flame to be established on one of Pilot 1 or Pilot 2 only.

5.8.2 TRANSITIONS TO THE IGNITION STATE

FROM	SCENARIO	CONDITION
Proven Pre-Purge	Any	Proven Pre-Purge sequence successful

5.8.3 TRANSITIONS FROM THE IGNITION STATE

TO	SCENARIO	CONDITION
Lockout	Any	Alarm condition present
	System stopped by user	Any
	Pilot fails to ignite	Ignition attempt limit has been exceeded
Waiting	Any	Wait condition is present
Proven Pre-Purge	Pilot fails to ignite within the declared Pilot-Flame Establishing Period .	Ignition attempt limit not yet exceeded
Pilot	Pilot ignition successful within the declared Pilot-Flame Establishing Period .	Any


The Relight Attempts setting dictates only the number of relight attempts allowed following a flame-loss event. The system can attempt pilot ignition 3 times upon a fresh user start, regardless of the setting value.

5.8.4 RELATED SETTINGS – IGNITION STATE

SETTING	NAVIGATION
Relight Attempts	Settings > Proc Control > Ignition
Pilot 2	Settings > Proc Control > Configuration
Minimum Pilots Running	Settings > Proc Control > Configuration

5.9 PILOT STATE

The Pilot state ensures that a reliable pilot flame is established prior to lighting off the main burner. The system can remain in the pilot state when heat demand is low and will transition to a main state when the heat demand increases.

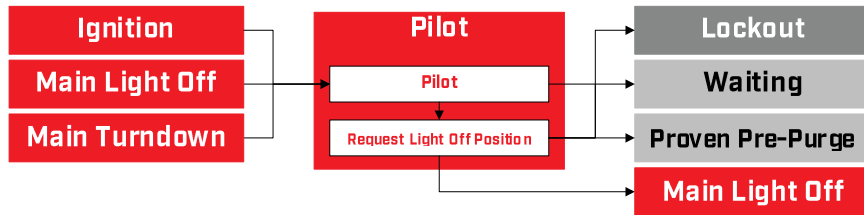

5.9.1 POWERED OUTPUT BEHAVIOR IN THE PILOT STATE

OUTPUT	PILOT	REQUEST LIGHT OFF POSITION
TCV/FARC Air Output	Pilot Position	Light Off Position
Coil 1 Output	De-energized ^(NOTE 1)	
Coil 2 Output	De-energized ^(NOTE 1)	
Pilot 1 Valve Output	Energized ^(NOTE 2)	
Pilot 2 Valve Output	De-energized ^{(NOTE 2), (NOTE 3)}	
Main SSV Outputs	De-energized	
Fan Output	Energized ^(NOTE 4)	

1 Energized under Reignition conditions when Reignition setting is Enabled

2 De-energized when single pilot flame is lost and Pilot 2 is enabled and Minimum Pilots Running is 1

3 Energized when Pilot 2 is Enabled

4 Fan Output is de-energized when Fan Mode is set to Purge Only

5.9.2 TRANSITIONS TO THE PILOT STATE

FROM	SCENARIO	CONDITION
Ignition	Pilot ignition successful	Any
Main Light Off	Process Temperature is too high	Pilot Off Mode is not set to Interrupted
	Main Permissive condition present	Pilot Off Mode is not set to Interrupted
Main Turndown	Main Turndown Timer has elapsed	Pilot Off Mode is not set to Interrupted

After successful pilot flame establishment, the system will hold in the Pilot state for the duration of the user configured Pilot Startup Delay Time before it can transition to a main state. The Request Light Off Position sub-state allows for the TCV to move to its configured Light Off Position prior to entering the Main Light Off state from the Pilot state. If the Proof of Position Input Type is Disabled, the system will hold in the Request Light Off Position sub-state for the duration of the configured Light Off Position Timeout. If the Proof of Position input Type is Digital or 4-20, the system will transition out of the Request Light Off Position sub-state only once the Proof of Position input is satisfied. If it is not satisfied within the configured Light Off Position Timeout, the system will transition to the Lockout state.

5.9.3 TRANSITIONS FROM THE PILOT STATE


TO	SCENARIO	CONDITION
Lockout	Any	Alarm condition present
	Burner stopped by user	Any
	Flame failure	Relight attempts limit has been exceeded
Waiting	Any	Wait condition present
Proven Pre-Purge	Flame failure	Relight attempts limit not yet exceeded
	Reignition command issued by the user	Any
Main Light Off	Process Temperature is too low	PoP Type is Disabled AND Light Off Position Timeout has elapsed
	Process Temperature is too low	PoP Type is not Disabled AND PoP input is satisfied

5.9.4 RELATED SETTINGS – PILOT STATE

SETTING	NAVIGATION
Relight Attempts	Settings > Proc Control > Ignition
Pilot Startup Delay	Settings > Proc Control > Timing
Pilot Off Mode	Settings > Proc Control > Configuration
Pilot 2	Settings > Proc Control > Configuration
Minimum Pilots Running	Settings > Proc Control > Configuration
Reignition	Settings > Proc Control > Configuration

5.10 MAIN LIGHT OFF STATE

The Main Light Off state allows for the controlled light off of the main burner before admitting maximum fuel to the burner. The main burner is lit with the TCV at its configured Light Off Position and is held there for the duration of the state to allow the burner to heat up gradually before transitioning into the Process Control state.

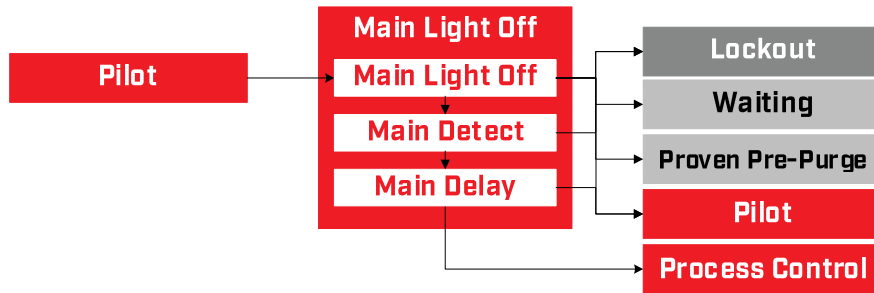

5.10.1 POWERED OUTPUT BEHAVIOR IN THE MAIN LIGHT OFF STATE

OUTPUT	BEHAVIOR
Coil 1 Output	De-energized ^(NOTE 1)
Coil 2 Output	De-energized ^(NOTE 1)
Pilot 1 Valve Output	Energized ^(NOTE 2)
Pilot 2 Valve Output	De-energized ^{(NOTE 2), (NOTE 3)}
Main SSV Outputs	Energized
Fan Output	Energized ^(NOTE 4)
TCV/FARC Air Output	Light Off Position

1 Energized under Reignition conditions when Reignition setting is Enabled

2 De-energized following energization of Main SSV outputs when Pilot Off Mode is set to Interrupted

3 Follows behavior of Pilot 1 Valve output when Pilot 2 is Enabled

4 Fan Output is de-energized when Fan Mode is set to Purge Only

5.10.2 TRANSITIONS TO THE MAIN LIGHT OFF STATE

FROM	SCENARIO	CONDITION
Pilot	Process Temperature is too low	No Main Permissive condition present

5.10.3 TRANSITIONS WITHIN THE MAIN LIGHT OFF STATE

FROM	TO	SCENARIO	CONDITION
Main Light Off	Main Detect	Any	UV Flame Detect Mode is not Disabled
	Main Delay	Any	UV Flame Detect Mode is Disabled
Main Detect	Main Delay	Main flame established successfully	Any

When entering the Main Light Off state following a user start, the burner will hold the TCV at its configured Light Off Position in the Main delay sub-state for the duration of the user configurable Main Startup Delay before transitioning to the Process Control state. If the burner is re-entering the Main Light Off state after having previously been running in Process Control, the Main Startup Delay Time is ignored and the system holds in the Main Delay sub-state for 5 seconds before transitioning to the Process control state.

5.10.4 TRANSITIONS FROM THE MAIN LIGHT OFF STATE

TO	SCENARIO	CONDITION
Lockout	Any	Alarm condition present
	System stopped by user	Any
	Flame failure	Relight Attempts limit has been exceeded
Waiting	Any	Wait condition present
Proven Pre-Purge	Flame failure	Relight attempts limit not yet exceeded
	Reignition command issued by the user	Any
	Process Temperature is too high	Pilot Off Mode is set to Interrupted
	Main Permissive condition is present	Pilot Off Mode is set to Interrupted
Pilot	Process Temperature is too high	Pilot Off Mode is not set to Interrupted
	Main Permissive condition is present	Pilot Off Mode is not set to Interrupted
Process Control	Main Delay sub-state has completed	Any

5.10.5 RELATED SETTINGS – MAIN LIGHT OFF STATE

SETTING	NAVIGATION
Relight Attempts	Settings > Proc Control > Ignition
Light Off Position Timeout	Settings > Proc Control > Timing
Main Startup Delay	Settings > Proc Control > Timing
Pilot Off Mode	Settings > Proc Control > Configuration
UV Flame Detect Mode	Settings > Proc Control > Configuration

5.11 PROCESS CONTROL STATE

The Process Control state is the state to which the system transitions when its heat demand is the highest. The Process Control state is annunciated as either PID Control or External Firing Rate in the UI Status Bar when Process Control Mode is set to PID Control or External Firing Rate, respectively.



5.11.1 POWERED OUTPUT BEHAVIOR IN THE PROCESS CONTROL STATE

OUTPUT	BEHAVIOR
Coil 1 Output	De-energized ^(NOTE 1)
Coil 2 Output	De-energized ^(NOTE 1)
Pilot 1 Valve Output	Energized ^(NOTE 2)
Pilot 2 Valve Output	De-energized ^{(NOTE 2), (NOTE 3)}
Main SSV Outputs	Energized
Fan Output	Energized ^(NOTE 4)
TCV/FARC Air Output	Variable ^{(NOTE 5), (NOTE 6)}

- 1 Energized under Reignition conditions when Reignition setting is Enabled
- 2 De-energized when Pilot Off Mode is set to Interrupted
- 3 Follows behavior of Pilot 1 Valve output when Pilot 2 is Enabled
- 4 Fan Output is de-energized when Fan Mode is set to Purge Only
- 5 Non-FARC applications - TCV output matches the system firing rate (from internal PID algorithm or external firing rate signal)
- 6 FARC applications - TCV/Air output positions are determined from the FARC table in accordance with the system firing rate.

5.11.2 TRANSITIONS TO THE PROCESS CONTROL STATE

FROM	SCENARIO	CONDITION
Main Light Off	Main Delay sub-state has completed	Any

5.11.3 TRANSITIONS FROM THE PROCESS CONTROL STATE

TO	SCENARIO	CONDITION
Lockout	Any	Alarm condition present
	System stopped by user	Any
	Flame failure	Relight Attempts limit has been exceeded
Proven Pre-Purge	Flame failure	Relight attempts limit not yet exceeded
	Reignition command issued by the user	Any
Main Turndown	Any	Wait condition is present
	Any	Main permissive condition is present
	Process Temperature is too high	Any

5.11.4 RELATED SETTINGS – PROCESS CONTROL STATE

SETTING	NAVIGATION
Relight Attempts	Settings > Proc Control > Ignition
Process Control Mode	Settings > Proc Control > Configuration
Pilot Off Mode	Settings > Proc Control > Configuration
Reignition	Settings > Proc Control > Configuration
PID Parameters	Settings > Proc Control > PID Control
TCV Minimum Position	Settings > Outputs > TCV
Aux Firing Rate Settings	Setting > Inputs > Aux 1 or Aux 2

5.12 MAIN TURNDOWN STATE

The Main Turndown state allows for the system to reliably transition from the Process Control state to a lower heat demand state. The firing rate output (and thus mechanically linked air damper output) decreases slowly to allow the airflow volume to reduce to a stable pilot operating level before de-energizing the main valves.



5.12.1 POWERED OUTPUT BEHAVIOR IN THE MAIN TURNDOWN STATE

OUTPUT	BEHAVIOR
Coil 1 Output	De-energized ^(NOTE 1)
Coil 2 Output	De-energized ^(NOTE 1)
Pilot 1 Valve Output	Energized ^(NOTE 2)
Pilot 2 Valve Output	De-energized ^{(NOTE 2), (NOTE 3)}
Main SSV Outputs	Energized
Fan Output	Energized ^(NOTE 4)
TCV/FARC Air Output	Minimum Position

1 Energized under Reignition conditions when Reignition setting is Enabled

2 De-energized following energization of Main SSV outputs when Pilot Off Mode is set to Interrupted

3 Follows behavior of Pilot 1 Valve output when Pilot 2 is Enabled

4 Fan Output is de-energized when Fan Mode is set to Purge Only

5.12.2 TRANSITIONS TO THE MAIN TURNDOWN STATE

FROM	SCENARIO	CONDITION
Process Control	Any	Wait condition is present
	Any	Main permissive condition is present
	Process Temperature is too high	Any

5.12.3 TRANSITIONS FROM THE MAIN TURNDOWN STATE

TO	SCENARIO	CONDITION
Lockout	Any	Alarm condition present
	System stopped by user	Any
	Flame failure	Relight Attempts limit has been exceeded
Waiting	Main Turndown complete	Wait condition present
Proven Pre-Purge	Flame failure	Relight attempts limit not yet exceeded
	Reignition command issued by the user	Any
	Main Turndown complete	Pilot Off Mode is set to Interrupted
Pilot	Main Turndown complete	Pilot Off Mode is not set to Interrupted

5.12.4 RELATED SETTINGS – MAIN TURNDOWN STATE

SETTING	NAVIGATION
Light Off Position	Settings > Outputs > TCV
Pilot Off Mode	Settings > Proc Control > Configuration
Relight Attempts	Settings > Proc Control > Ignition

6 INSTALLATION



Warning:

Installation and modification shall not be performed while the system is energized. Disconnect power source prior to connecting devices or modifying wiring.

Installers and commissioners of the PF2200-FD system must:

- Understand local codes and how they apply to the installation (for both electrical and mechanical aspects of the installation).
- Understand the electrical and mechanical limitations of the product and how that relates to the installation.
- Understand the safety and operational effects of modifying system settings or wiring.
- Verify all required safety functions prior to completing the commissioning of the appliance.
- Be fluent in the English language (the only language this product supports).
- Be familiar with navigating the product menus and modifying settings.

6.1 MOUNTING CONSIDERATIONS

The enclosure should be mounted:

- Upright in such a way that the screen is clearly visible and the keypad is easy to access. Recommended mounting height is 1.5m (5ft) above ground.
- Near to the appliance being controlled in order to minimize cable run lengths to the valve train (solenoids), burner assembly (ignition coil and flame rod) and thermocouple elements.
- In such a way as to avoid direct sunlight exposure on the screen. Extended UV exposure may compromise viewability.
- Such that the enclosure door can be fully opened during maintenance and commissioning.


6.2 CONNECTION DIAGRAMS



Caution:

Electrical devices connected to the controller must meet local electrical codes and be within the voltage limits specified in this manual. All field wiring must be properly fused and sized in accordance with local codes. Wires must be installed such that the connection does not rely on the structural integrity of the wire insulation, and that no more than one conductor is terminated in a single terminal.


6.2.1 DIGITAL INPUT – DRY CONTACT

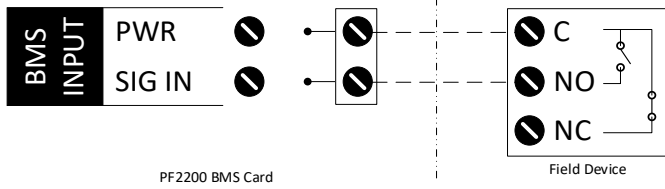

Installation Notes:

1. The BMS uses energized-to-run logic for all digital inputs.
2. PWR terminal output matches system voltage up to 13.5V.


6.2.2 DIGITAL INPUT – WET CONTACT

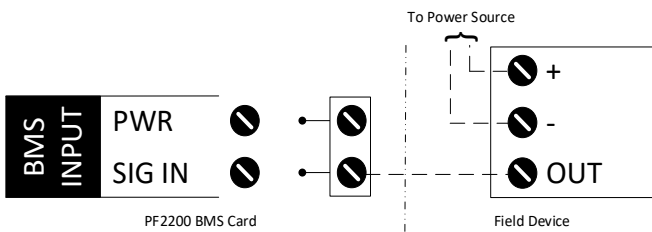

Installation Notes:

1. The BMS uses energized-to-run logic for all digital inputs.
2. External power source must be Earth grounded.
3. External power source must be referenced about BMS card terminal 29 such that the supplied voltage (1) does not exceed 30 V_{DC} with reference to BMS Power In -, and (2) does not drop below -0.5V with reference to BMS Power In -.


6.2.3 ANALOG INPUT – LOOP POWERED 4-20MA TRANSMITTER

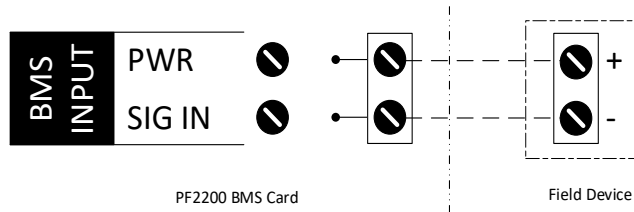

Installation Notes:

1. PWR terminal output matches system voltage up to 13.5V.


6.2.4 ANALOG INPUT – SELF POWERED 4-20MA TRANSMITTER

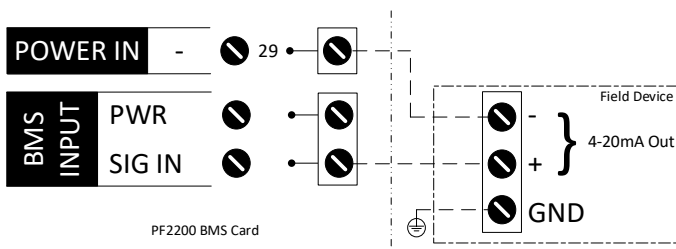

Installation Notes:

1. Field Device must be Earth grounded.
2. Power source must be referenced about BMS card terminal 29 such that the supplied voltage (1) does not exceed 30 V_{DC} with reference to BMS Power In -, and (2) does not drop below -0.5V with reference to BMS Power In -.


6.2.5 ANALOG INPUT – INPUT FROM PLC

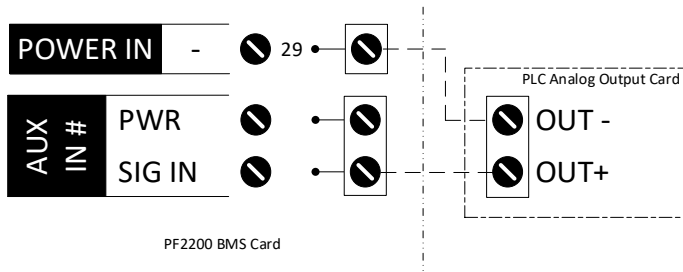

Installation Notes:

1. PLC power source must be referenced about BMS card terminal 29 such that the supplied voltage (1) does not exceed 30 V_{DC} with reference to BMS Power In -, and (2) does not drop below -0.5V with reference to BMS Power In -.

6.2.6 TCV OUTPUT WIRING

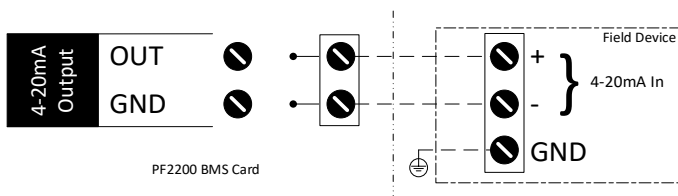

Installation Notes:


1. 4-20mA Input – terminal must be run back to BMS terminal 14 (Local ground) to ensure proper output functionality.

6.2.7 SOLENOID OUTPUT – 12V/24V



Caution:

Do not connect solenoid device minus (-) terminals to ground, as the BMS solenoid output minus (-) terminals are not grounded.
 Do not jumper solenoid minus terminals together under any circumstance, as this will compromise the safety integrity of the system.

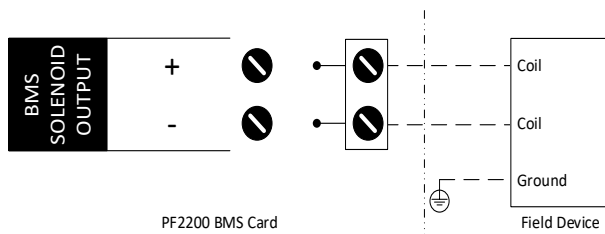


Installation Notes:

1. Solenoid powered outputs are rated to 5A max individually, however the power input to the BMS is fused at 10A. Care must be taken as to not exceed the 10A max input when using multiple high-powered solenoids.
2. Solenoid valve outputs are assumed to be in safe state when de-energized. Normally closed valves must be used such that gas-flow to the burner is stopped when the output is in the de-energized state. Solenoid valve outputs can also be connected to normally open bleed valves when utilizing a double block and bleed configuration.


6.2.8 RUN STATUS – EXTERNAL AC SOURCE




Warning:
 120VAC wiring should be installed by a qualified electrician.

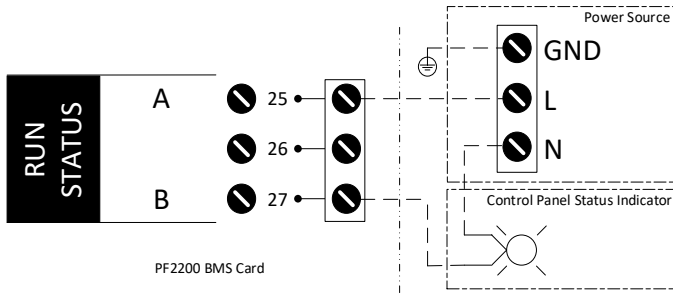

6.2.9 RUN STATUS – EXTERNAL DC SOURCE

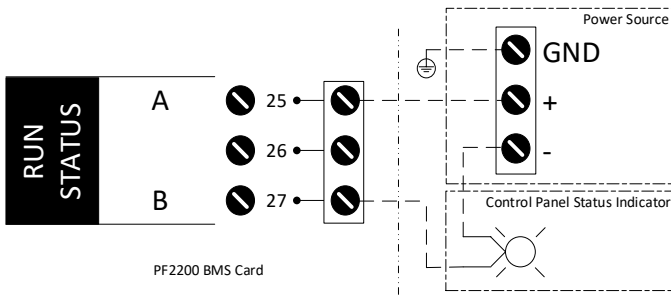


6.2.10 RUN STATUS – BMS POWER

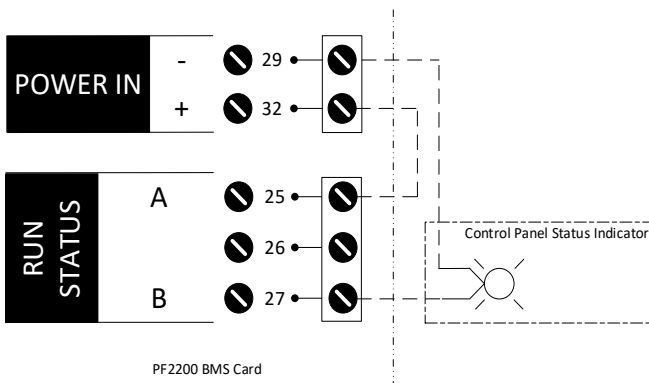

6.2.11 RUN STATUS – PUMP CONTROL




Warning:
 120VAC wiring should be installed by a qualified electrician.

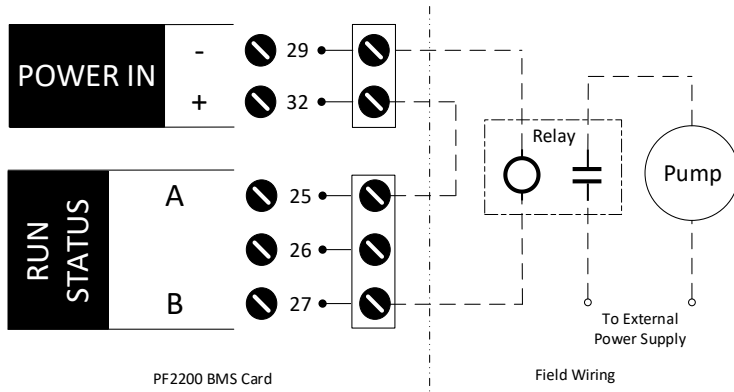

Installation Notes:

1. A relay must be used to isolate the Run Status contact from high-transient currents associated with motors and pumps.


6.2.12 POWER INPUT WIRING

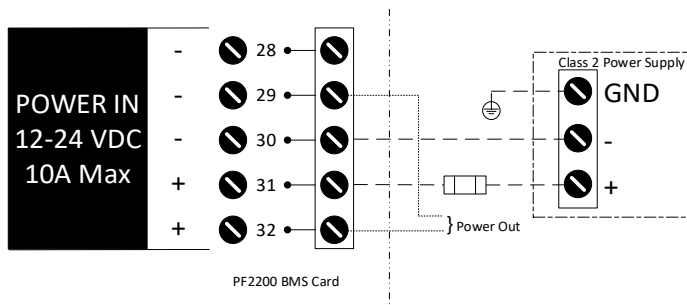

Installation Notes:

1. The PF2200 must be powered from a Class 2 power supply as defined in the Canadian Electrical Code (CSA 22.2 No 1-15) or US National Electrical Code (NFPA 70).

6.2.13 ANALOG OUTPUT – 4-20MA ECHO TO PLC

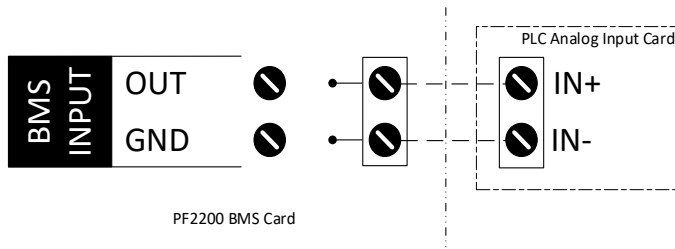

Installation Notes:


1. 4-20mA Input IN- terminal must be run back to BMS Input GND terminal (Local ground) to ensure proper output functionality.

6.2.14 SINGLE ROD IGNITION WIRING



Warning:

Failure to provide a low-impedance path from the burner assembly to the PF2200 may result in electric shock, product damage, failure to ignite the pilot, or failure to detect flame.

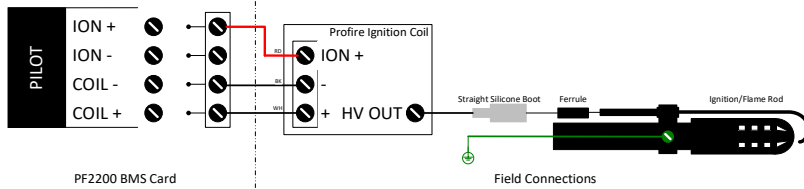

Installation Notes:


1. The wire length between the ignition coil and pilot should be no more than 5m (15ft).
2. For long run lengths of ION+, the connection should be made with 7mm ignition wire to help minimize ground-loading of the flame signal.

6.2.15 DUAL ROD IGNITION WIRING



Warning:


Failure to provide a low-impedance path from the burner assembly to the PF2200 may result in electric shock, product damage, failure to ignite the pilot, or failure to detect flame.

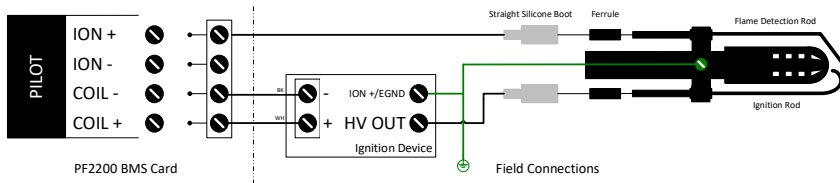

Installation Notes:

1. The wire length between the ignition coil and pilot should be no more than 5m (15ft).
2. For long run lengths of ION+, the connection should be made with 7mm ignition wire to help minimize ground-loading of the flame signal.


6.2.16 TEMPERATURE INPUT- DUAL TYPE K THERMOCOUPLE

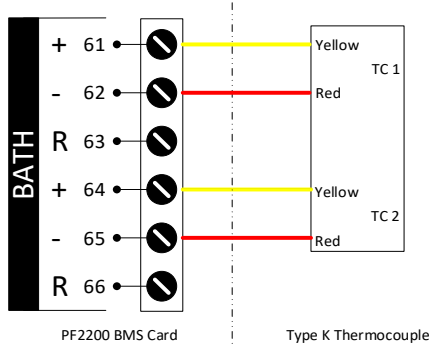


Installation Notes:

1. Thermocouple must be grounded or ungrounded Type K.
2. Thermocouple wire run lengths should be minimized where possible.
3. Thermocouple wires should not be run in the same conduit as high-noise signals (e.g. valve wires, motor wires, etc.)

6.2.17 TEMPERATURE INPUT- DUAL 3-WIRE RTD

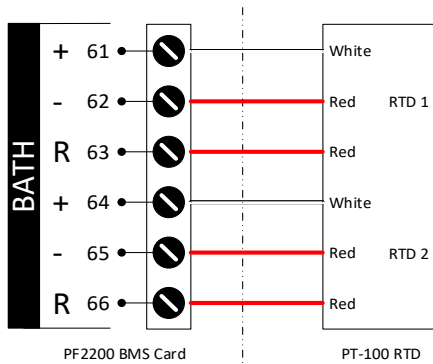


6.2.18 TEMPERATURE INPUT- SINGLE TYPE K THERMOCOUPLE

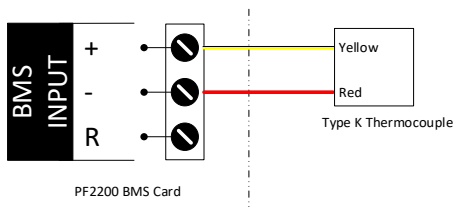


Installation Notes:

1. Thermocouple must be grounded or ungrounded Type K.
2. Thermocouple wire run lengths should be minimized where possible.
3. Thermocouple wires should not be run in the same conduit as high-noise signals (e.g. valve wires, motor wires, etc.)

6.2.19 TEMPERATURE INPUT- SINGLE 3-WIRE RTD

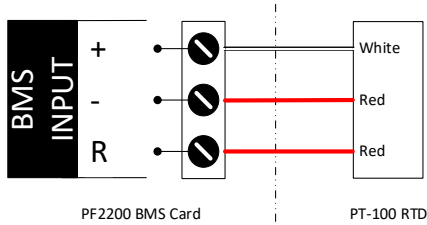


6.2.20 MODBUS INPUT WIRING

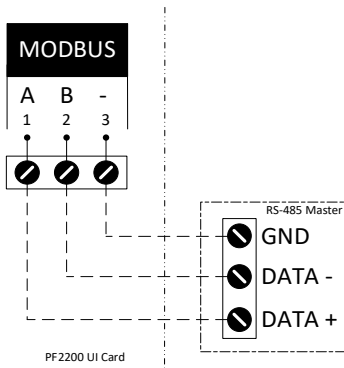

Installation Notes:

1. Modbus wires should not be run in the same conduit as high-noise signals (e.g. valve wires, motor wires, etc.)

6.2.21 UV FLAME SCANNER WIRING

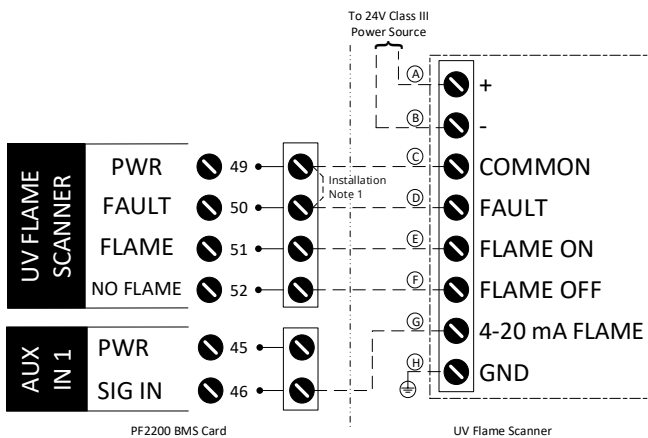


Wire Colors for approved UV Flame Scanners:

Wire	Fireye 65UV5-1004E	Zeeco ZPF-120
A	Brown	Red
B	White	Blue
C	Blue	Brown
D	Black	N/A
E	Yellow	Green
F	Red	White
G	Orange	Pink
H	Green	Grey

Installation Notes:

1. When using Zeeco ZPF-120 flame scanner, a wire jumper must be installed between BMS terminals 49 and 50, as the scanner does not have a separate fault output.

6.2.22 FAN OUTPUT WIRING

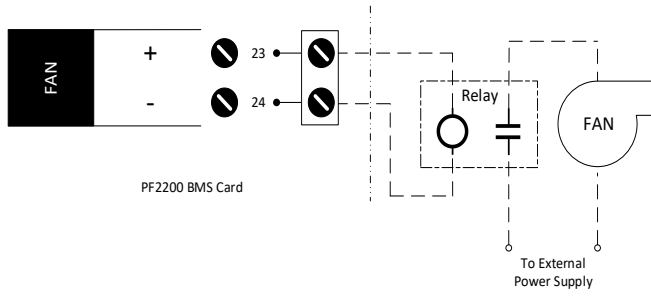

7 SYSTEM CONFIGURATION

The following section describes each configuration setting found in the menus of the PF2200-FD. All settings changes must be verified prior to starting the system and functional tests must be performed to ensure that all expected alerts ring in correctly. The best way to verify the system configuration is to manually force an alarm condition on each connected input or output device independently and verify that the PF2200 annunciates the appropriate alarm.



Warning:

System settings must only be modified by qualified personnel who have an understanding of the appliance under control and its effect on the other plant processes.

7.1 TEMPERATURES

7.1.1 BATH INPUT

NAME	DEFAULT	OPTIONS / RANGE	DESCRIPTION
Type	RTD	TC	Temperature sensing element type. Type K Thermocouple (grounded or ungrounded) or PT100 RTD.
		RTD	
Input	Dual	Dual	Configuration control for the Bath input. Dual requires two unique temperature sensing elements, whereas single only requires one.
		Single	
Input setting is required to be set to Dual if the Bath Input is specified as a safety function.			
Mode	Process Control	Process Control	Mode for the temperature input, used by the system to determine how the input is to be used.
		High Temp ESD	
At least one of Bath Mode or Outlet Mode must be set to Process Control			
High Temp Setpoint	90 °C	0 °C - 1350 °C	Temperature threshold at which the system shuts down.
	194 °F	32 °F - 2462 °F	
High Temp Setpoint must be greater than Pilot Off Setpoint and			
If Type setting is set to RTD, High Temp Setpoint must be less than 850 °C (1562 °F)			
Pilot Off Setpoint	85 °C	0 °C - 1350 °C	Temperature threshold at which the system turns off the pilot valve(s).
	185 °F	32 °F - 2462 °F	
Pilot Off Setpoint must be greater than Main Off Setpoint and less than High Temp Setpoint			
Main Off Setpoint	85 °C	0 °C - 1350 °C	Temperature threshold at which the system turns off the main valve(s).
	185 °F	32 °F - 2462 °F	
Main Off Setpoint must be greater than Process Setpoint and less than Pilot Off Setpoint			

NAME	DEFAULT	OPTIONS / RANGE	DESCRIPTION
Process Setpoint	80 °C	0 °C - 1350 °C	Temperature that the system attempts to maintain when in Process Control mode.
	176 °F	32 °F - 2462 °F	
Process Setpoint must be greater than Low Temp Setpoint and less than Main Off Setpoint			
Low Temp Setpoint	0 °C	0 °C - 1350 °C	Temperature threshold at which, if not exceeded, the system warns the user.
	32 °F	32 °F - 2462 °F	
Low Temp Setpoint must be less than Process Setpoint			
Deadband	2 °C	0 °C - 100 °C	The deadband prevents bouncing between states when the input reading is close to the corresponding setpoint.
	3.6 °F	0 °F - 180 °F	

7.1.2 OUTLET INPUT

NAME	DEFAULT	OPTIONS / RANGE	DESCRIPTION
Type	RTD	TC	Temperature sensing element type. Can be Type K Thermocouple (grounded or ungrounded) or PT100 RTD.
		RTD	
Mode	Disabled	Disabled	Mode for the temperature input, used by the system to determine how the input is to be used. See Temperature Inputs section for more details.
		Process Control	
		High Temp ESD	
		Display Only	
At least one of Bath Mode or Outlet Mode must be set to Process Control			
High Temp Setpoint	90 °C	0 °C - 1350 °C	Temperature threshold at which, if exceeded, the system will shut down.
	194 °F	32 °F - 2462 °F	
Only applicable if the mode is set to High Temp ESD or Process Control.			
High Temp must be greater than Pilot Off Setpoint AND If Type is RTD, must be less than 850 °C (1562 °F)			
Pilot Off Setpoint	85 °C	0 °C - 1350 °C	Temperature threshold at which the system will turn off the pilot valve(s).
	185 °F	32 °F - 2462 °F	
Pilot Off Setpoint must be greater than Main Off Setpoint and less than High Temp Setpoint			
Main Off Setpoint	85 °C	0 °C - 1350 °C	Temperature threshold at which the system will turn off the main valve(s).
	185 °F	32 °F - 2462 °F	
Main Off Setpoint must be greater than Process Setpoint and less than Pilot Off Setpoint			
Process Setpoint	80 °C	0 °C - 1350 °C	Temperature that the system attempts to maintain when in Process Control mode.
	176 °F	32 °F - 2462 °F	
Process Setpoint must be greater than Low Temp Setpoint and less than Main Off Setpoint			

NAME	DEFAULT	OPTIONS / RANGE	DESCRIPTION
Low Temp Setpoint	0 °C	0 °C - 1350 °C	Temperature threshold at which, if not exceeded, the system will warn the user.
	32 °F	32 °F - 2462 °F	
Low Temp Setpoint must be less than Process Setpoint			
Deadband	2 °C	0 °C - 100 °C	The deadband prevents bouncing between states when the input reading is close to the corresponding setpoint.
	3.6 °F	0 °F - 180 °F	

7.1.3 STACK INPUT

NAME	DEFAULT	OPTIONS / RANGE	DESCRIPTION
Type	RTD	TC	Temperature sensing element type. Can be Type K Thermocouple (grounded or ungrounded) or PT100 RTD.
		RTD	
Mode	Disabled	Disabled	Mode for the temperature input, used by the system to determine how the input is to be used.
		High Temp ESD	
		Display Only	
High Temp Setpoint	90 °C	0 °C - 1350 °C	Temperature threshold at which the system will shut down.
	194 °F	32 °F - 2462 °F	
Only applicable if the mode is set to High Temp ESD			
If Type is RTD, High Temp Setpoint must be less than 850 °C (1562°F)			
O2 Temp Minimum	85 °C	0 °C - 1350 °C	Temperature at which O2 Trim warmup period is complete.
Deadband	2 °C	0 °C - 100 °C	The deadband prevents bouncing between states when the input reading is close to the corresponding setpoint.
	3.6 °F	0 °F - 180 °F	

7.2 INPUTS

7.2.1 LEVEL/FLOW INPUT

NAME	DEFAULT	OPTIONS / RANGE	DESCRIPTION
Type	Digital	Disabled	Level/Flow sensor type. Can be configured as a switch (digital), transmitter (4-20), or disabled.
		Digital	
		4-20	
Digital Mode	Alarm	Alarm	Action the system will take when a de-energized contact occurs.
		Wait	
		Warning	
Type must be set to Digital			

NAME	DEFAULT	OPTIONS / RANGE	DESCRIPTION
4-20 Low Trip Mode	Alarm	Alarm	Action the system will take when a low-trip event occurs.
		Wait	
		Warning	
Type must be set to 4-20			
4-20 High Trip Mode	Alarm	Alarm	Action the system will take when a high-trip event occurs.
		Wait	
		Warning	
Type must be set to 4-20			
4-20 Low Trip Setpoint	60 L 15.9 gal	Span Min to Max	Input threshold at which the system will initiate a low-trip event in accordance with the 4-20 Low Trip Mode setting.
Type must be set to 4-20			
4-20 High Trip Setpoint	117 L 30.9 gal	Span Min to Max	Input threshold at which the system will initiate a high-trip event in accordance with the 4-20 High Trip Mode setting.
Type must be set to 4-20			
4-20 Deadband	1.5 L 0.4 gal	0 - 6.25% of span	The deadband prevents bouncing between states when the input reading is close to the corresponding trip point.
To clear a low trip, input must be greater than 4-20 Low Trip plus deadband.			
To clear a high trip, input must be less than 4-20 High Trip minus deadband.			
4-20 Span Min	0 L	0 - 10000000 L	Level/Flow value corresponding to 4mA output from the 4-20mA transmitter.
	0 gal	0 - 2641720 gal	
Span Min must be less than Span Max and 4-20 Low Trip			
4-20 Span Max	120 L	0 - 10000000 L	Level/Flow value corresponding to 20mA output from the 4-20mA transmitter.
	31.7 gal	0 - 2641720 gal	
Span Max must be greater than Span Min and 4-20 High Trip			
Level/Flow Delay	2 sec	2 sec - 20 sec	The amount of time the system requires a low-input event be consistent for before performing the low-trip action.

7.2.2 PRESSURE INPUT

NAME	DEFAULT	OPTIONS / RANGE	DESCRIPTION
Type	Digital	Disabled	Pressure sensor type. Can be configured as a switch (digital), transmitter (4-20), or disabled.
		Digital	
		4-20	

NAME	DEFAULT	OPTIONS / RANGE	DESCRIPTION
4-20 Low Trip	0 kPa 0 psi	Span Min to Max	Input threshold at which the system will initiate a low-trip event in accordance with the Low Pressure Mode setting.
Type must be set to 4-20			
4-20 High Trip	177 kPa 25.7 psi	Span Min to Max	Pressure threshold that, if exceeded, the system will shutdown.
Type must be set to 4-20			
4-20 Deadband	2.6 kPa 0.4 psi	0 - 6.25% of span	The deadband prevents bouncing between states when the input reading is close to the corresponding trip point.
To clear a low trip, input must be greater than 4-20 Low Trip plus deadband.			
To clear a high trip, input must be less than 4-20 High Trip minus deadband.			
4-20 Span Min	0 kPa	0 - 100000 kPa	Pressure value corresponding to 4mA output from the 4-20mA transmitter.
	0 psi	0 psi - 14504 psi	
Span Min must be less than Span Max and 4-20 Low Trip			
4-20 Span Max	207 kPa	0 - 100000 kPa	Pressure value corresponding to 20mA output from the 4-20mA transmitter.
	30 psi	0 psi - 14504 psi	
Span Max must be greater than Span Min and 4-20 High Trip			
Low Pressure Mode	Alarm	Alarm	Action the system will take when a low-pressure event occurs.
		Wait	
		Warning	
		Main Permissive	
Low Pressure Delay	2 sec	2 sec - 20 sec	The amount of time a low-pressure condition must be present before the system takes any action.

7.2.3 PRESSURE HIGH INPUT

NAME	DEFAULT	OPTIONS / RANGE	DESCRIPTION
Pressure High	Enabled	Disabled	See High Pressure Input section for more details.
		Enabled	

7.2.4 AUX IN 1 & AUX IN 2 INPUTS

NAME	DEFAULT	OPTIONS / RANGE	DESCRIPTION
Type	Digital	Disabled	Input sensor type. Can be configured as a switch (digital), transmitter (4-20), or disabled.
		Digital	
		4-20	
4-20 Mode	High/Low Trip	High/Low Trip	Various modes for the Aux input when configured as a 4-20 type. See Auxiliary Inputs section for more details.
		Appliance Firing Rate	
		Bath Process SP Adjust	
		Outlet Process SP Adjust	
		UV Flame Quality	
		Air Channel	
		O2 Sensor	
Type must be set to 4-20			
Digital Mode	Alarm	Alarm	Defines the system behavior when a de-energized contact occurs.
		Wait	
		Warning	
		Main Permissive	
		Pilot Position	
		Purge Position	
Type must be set to Digital			
4-20 Low Trip Mode/ 4-20 High Trip Mode	Alarm	Alarm	Action the system will take when a low-trip/high-trip event occurs.
		Wait	
		Warning	
		Main Permissive	
Type must be set to 4-20			
4-20 Low Trip	0 %	0 – 100 %	Input threshold at which the system will initiate a low-trip event in accordance with the 4-20 Low Trip Mode setting.
Type must be set to 4-20			
4-20 High Trip	100 %	0 – 100 %	Input threshold at which the system will initiate a high-trip event in accordance with the 4-20 High Trip Mode setting.
Type must be set to 4-20			

NAME	DEFAULT	OPTIONS / RANGE	DESCRIPTION
4-20 Deadband	1.2 %	0 – 100 %	The deadband prevents the system from bouncing between states when the input reading is close to the corresponding trip point.
Type must be set to 4-20			
To clear a low trip, input must be greater than 4-20 Low Trip plus deadband.			
To clear a high trip, input must be less than 4-20 High Trip minus deadband.			
4-20 Span Min	0 % 4 mA 0 [Other Units]	0 – 100 % 4 -20 mA -100000 – 100000	Input value corresponding to 4mA output from the 4-20mA transmitter.
Type must be set to 4-20			
Span Max must be greater than Span Min			
4-20 Span Max	100 % 20 mA 100 [Other Units]	0 – 100 % 4 -20 mA -100000 – 100000	Input value corresponding to 20mA output from the 4-20mA transmitter.
Type must be set to 4-20			
Span Max must be greater than Span Min			

7.2.5 PROOF OF POSITION INPUT

NAME	DEFAULT	OPTIONS / RANGE	DESCRIPTION
Type	Disabled	Disabled	Position input device type.
		Digital (POLO)	
		4-20	

7.2.6 PROOF OF AIRFLOW INPUT

NAME	DEFAULT	OPTIONS / RANGE	DESCRIPTION
Type	Digital	Digital	Airflow sensor type.
		4-20	
Low Trip Setpoint	60 CFM	Span Min to Max	Input threshold at which the system will initiate a low-trip event.
High Trip Setpoint	120 CFM	Span Min to Max	Input threshold at which the system will initiate a high-trip event.
Deadband	1.5 CFM	0 – 6.25% of span	The deadband prevents bouncing between states when the input reading is close to the corresponding trip point.

NAME	DEFAULT	OPTIONS / RANGE	DESCRIPTION
Span Min	0 CFM	0 – 100000 CFM	Airflow value corresponding to 4mA output from the 4-20mA transmitter.
Span Max	120 CFM	0 – 100000 CFM	Airflow value corresponding to 20mA output from the 4-20mA transmitter.

7.2.7 PROOF OF CLOSURE INPUT

NAME	DEFAULT	OPTIONS / RANGE	DESCRIPTION
Proof of Closure	Enabled	Disabled	Controls whether the Proof of Closure input is enabled or disabled. See Proof of Closure Input section for details.
		Enabled	

7.2.8 REMOTE START INPUT

NAME	DEFAULT	OPTIONS / RANGE	DESCRIPTION
Remote Start	Disabled	Disabled	Controls whether the Remote Start input is enabled or disabled. See Remote Start Input section for more details.
		Enabled	

7.3 PROCESS CONTROL

7.3.1 CONFIGURATION

NAME	DEFAULT	OPTIONS / RANGE	DESCRIPTION
Process Control Mode	Bath PID Control	External Firing Rate	Control mode of the system.
		Bath PID Control	
		Outlet PID Control	
		Cascaded PID Control	
Pilot Off Mode	Disabled	Disabled	Defines when the system turns off the Pilot valve while running.
		Off at Pilot Off Setpoint	
		Off at Main Off Setpoint	
		Interrupted	
When set to Interrupted – UV Flame Detect must be set to Main Only OR Pilot and Main			
Pilot 2	Disabled	Disabled	Enables the second Pilot valve output and flame detection input.
		Enabled	
When Enabled – UV Flame Detect Mode must be set to Disabled OR Main Only			

NAME	DEFAULT	OPTIONS / RANGE	DESCRIPTION
Minimum Pilots Running	1	1 - 2	Specifies the number of pilots that must be lit for the system to remain running.
When set to 2 – Pilot 2 must be enabled			
Reignition	Disabled	Disabled	Specifies whether the system will automatically attempt to reignite a lost pilot flame.
		Enabled	
Pilot 2 must be enabled Minimum Pilots Running must be set to 1			
UV Flame Detect Mode	Disabled	Disabled	Specifies where UV flame detection will be used.
		Main Only	
		Pilot and Main	
Ignition Mode	Coil	Coil	Controls the Coil output behavior when in the ignition state: Coil: Pulsed output mode HEI: constant output mode
		HEI	
Relight Attempts	3	0 - 3 attempts	Determines the number of relight attempts the system will use when establishing flame.
Minimum Firing Rate	40%	0 % - 70 %	Minimum allowable firing rate while in the Process Control state.
Light Off Firing Rate	40%	0 % - 100 %	Firing rate while in the Main Light Off state.
Light Off Firing Rate setting must be greater than the Minimum Firing Rate setting			

7.3.2 TIMING

NAME	DEFAULT	OPTIONS / RANGE	DESCRIPTION
Pilot Position Timeout	60 sec	5 sec - 900 sec	Time allowed for TCV to reach its configured Pilot position.
Light Off Position Timeout	60 sec	5 sec - 900 sec	Time allowed for TCV to reach its configured Light Off position.
Purge Position Timeout	60 sec	5 sec - 900 sec	Time allowed for TCV to reach its configured Purge position.
Position Error Timeout	2 sec	1 sec - 10 sec	Time for which a position feedback input reading can exceed its expected value before the system proceeds to the Lockout state.
Pre-Purge Time	60 sec	10 sec - 900 sec	Time that the system will remain in the Pre-Purge state.
Post-Purge Time	60 sec	10 sec - 900 sec	Time for which the system will Post-Purge.
Startup Check Timeout	60 sec	5 sec - 900 sec	Time allowed for the system to complete its startup checks.
Airflow Proving Timeout	60 sec	10 sec - 900 sec	Time allowed for airflow to be proven.
Pilot Startup Delay	15 sec	5 sec - 900 sec	Time that the system will hold in the Pilot state before transitioning to a higher heat demand state.
Main Startup Delay	30 sec	30 sec - 600 sec	Time that the system will hold in the TCV at its Light Off position before transitioning to the Process Control state.

7.3.3 PID CONTROL

NAME	DEFAULT	OPTIONS / RANGE	DESCRIPTION
Process Proportional Band	10 °C	0 °C – 1000 °C	This is the proportional Band used for the PID calculation.
	18 °F	0 °F – 1800 °F	
In cascaded control mode this value applies to the bath PID loop.			
Process Integral Time	4 mins/rep	0 – 1000 mins/rep	This is the integral time used for the PID calculation.
Process Derivative Time	0 min	0 min – 1000 min	This is the derivative time used for the PID calculation.
Process Integral Reset Range	10 °C	0 °C – 1000 °C	Process temperature range in which the integral term will accumulate.
	18 °F	0 °F – 1800 °F	
Cascade Proportional Band	10 °C	0 °C – 1000 °C	Proportional Band setting for cascaded PID.
	18 °F	0 °F – 1800 °F	
Inputs > Process Control > Configuration > Process Control Mode must be set to Cascaded PID Control			
Cascade Integral Time	0 mins/rep	0 mins/rep - 1000 mins/rep	Integral time setting for cascaded PID.
Inputs > Process Control > Configuration > Process Control Mode must be set to Cascaded PID Control			
Cascade Derivative Time	0 min	0 min - 1000 min	Derivative time setting for cascaded PID.
Inputs > Process Control > Configuration > Process Control Mode must be set to Cascaded PID Control			
Cascade Integral Reset Range	10 °C	0 °C - 1000 °C	Specifies the Outlet temperature range within which the cascade integral term accumulates.
	18 °F	0 °F - 1800 °F	
Output Rate Limit	100 %/sec	0.1 - 100 %/sec	Specifies the maximum output change of the TCV per second. A larger value allows for a quicker change in output. A smaller value slows down any change in output. This can help prevent fast movements from the TCV.
Ramp Time	10 sec	0 sec - 255 sec	Specifies the desired time to ramp to 100% firing rate upon startup – the system uses this value to calculate a rate limit which is applied for all startup ramping.

7.3.4 FARC

Note that the FARC settings menu is only available for controllers with the [FARC and O2 Trim software feature](#) installed.

Refer to the [PF2200-FD FARC User Guide](#) for operation and configuration details.

NAME	DEFAULT	OPTIONS / RANGE	DESCRIPTION
FARC Mode	Disabled	Disabled	Specifies whether fuel-air ratio control is enabled or disabled.
		Enabled	
Cross Limit Error	1 %	1 % - 15 %	Specifies the system tolerance for fuel-rich conditions that do not adhere to the configured FARC table.
Flat Line Tolerance	1	1 % - 10 %	Specifies the tolerance applied around a flat portion of a FARC channel curve within which the system ignores the difference between the channel feedback input reading and its expected value for the purposes of cross limiting.
FARC Table - Rate	N/A	0 % - 100 %	Corresponds to the system firing rate.
FARC Table - Fuel	0 %	0 % - 100 %	Specifies a dedicated fuel channel output position for each firing rate column in the table.
FARC Table - Air	0 %	0 % - 100 %	Specifies a dedicated air channel output position for each firing rate column in the table.

7.3.5 O2 TRIM

Note that the O2 Trim settings menu is only available for controllers with the [FARC and O2 Trim software feature](#) installed. Refer to the [PF2200-FD FARC User Guide](#) for operation and configuration details.

NAME	DEFAULT	OPTIONS / RANGE	DESCRIPTION
O2 Trim Mode	Disabled	Trim Air	Specifies whether O2 Trim functionality is enabled and whether the O2 Trim algorithm is to modulate the FARC air channel or fuel channel.
		Trim Fuel	
		Disabled	
Warmup Mode	Time Delay	Time Delay	Specifies whether the O2 Sensor readings are relied upon following a specific time delay or following stack warmup.
		Stack Temp	
Warmup Time	1 min	1 min - 100 min	Specifies the O2 Sensor Warmup time.
Warmup Time setting is only applicable when Warmup Mode is set to Time Delay			
O2 Trim Proportional Band	10	1 - 1000	Specifies the proportional band for the O2 Trim PI control algorithm.
O2 Trim Integral Band	4 mins/rep	0 - 100 mins/rep	Specifies the integral time for the O2 Trim PI control algorithm.
Target O2	22 % _{O2}	0.5% _{O2} - 22% _{O2}	Specifies the desired stack oxygen levels across the operating range of the appliance.
High O2 Offset Limit	0 %	0 % - 10 %	Specifies the maximum that a FARC channel can be increased by the system while attempting to achieve the configured Target O2.
Low O2 Offset Limit	0 %	-10 % - 0%	Specifies the maximum that a FARC channel can be decreased by the system while attempting to achieve the configured Target O2.

7.4 OUTPUTS

7.4.1 STATUS OUTPUT

NAME	DEFAULT	OPTIONS / RANGE	DESCRIPTION
Status Contact Mode	Run Status	Run Status	Defines the behavior of the Status Contact. See Status Relay Output section for more details.
		Heating Status	
		Low Temp Warning	
		Level/Flow Control	
Level/Flow Control Setpoint	18 mA	4mA - 20mA	Defines the Level/Flow setpoint at which the Status Contact changes state.
Status Contact Mode must be set to Level/Flow Control			

7.4.2 VALVES / FAN OUTPUTS

NAME	DEFAULT	OPTIONS / RANGE	DESCRIPTION
Pilot Valve PWM	60%	1 % - 100 %	Duty cycle of the output. Higher value corresponds to higher average output.
SSV PWM	60%	1 % - 100 %	Duty cycle of the output. Higher value corresponds to higher average output.
Fan Mode	Forced Draft	Forced Draft	Type of device connected to the Fan output terminals.
		Purge Only	



Warning:

The Purge Only Fan output mode must not be used for applications which require fan-assisted combustion air. This mode is only intended to be used in natural draft applications where a fan is only required during the purge cycle to lower the purge-time requirement. Improper use of this mode may result in inadequate airflow during combustion causing an unsafe fuel mixture and/or flame blow-back which may result in death, serious injury, property damage or equipment damage.

7.4.3 AUX OUT 1 & AUX OUT 2 OUTPUTS

NAME	DEFAULT	OPTIONS / RANGE	DESCRIPTION
Mode	Disabled	Disabled	Defines the behavior of the Auxiliary Output. See Auxiliary Outputs section for more details.
		Level/Flow Echo	
		Proof of Air Echo	
		Aux In 1 Echo	
		Aux In 2 Echo	
		Proof of Position Echo	
		Modbus Echo	
		Bath Temp Echo	
		Outlet Temp Echo	
		Stack Temp Echo	
Air Channel			
Temp Echo Span Min	0 °C	-100 °C - 1350 °C	Temperature value corresponding to 4mA from the Auxiliary Output.
	32 °F	-148 °F - 2462 °F	
Span Max must be greater than Span Min			
Temp Echo Span Max	1350 °C	-100 °C - 1350 °C	Temperature value corresponding to 20mA from the Auxiliary Output.
	2462 °F	-148 °F - 2462 °F	
Span Max must be greater than Span Min			

7.4.4 TCV OUTPUT

For fuel-air ratio control applications refer to the [PF2200-FD FARC User Guide](#) for operation and configuration details.

NAME	DEFAULT	OPTIONS / RANGE	DESCRIPTION
Position Error	2 %	0 % - 10 %	Specifies the maximum amount that the TCV position input reading may differ from the TCV position output.
Post Purge Mode	Purge Position	Purge Position	Defines the TCV position when post purging.
		Last Position	
Off Position	0%	0 % - 100 %	Position of TCV when system is stopped and not purging.
Purge Position	100%	0 % - 100 %	Position of the TCV output while system is purging.
Pilot Position	40%	0 % - 100 %	Position of the TCV output while in the Pilot state or while preparing for pilot ignition.

7.4.5 AIR OUTPUT

Note that the Air Output settings menu is only available for controllers with the [FARC and O2 Trim software feature](#) installed. Refer to the [PF2200-FD FARC User Guide](#) for operation and configuration details.

NAME	DEFAULT	OPTIONS / RANGE	DESCRIPTION
Air Inversion	Disabled	Enabled	Specifies that FARC air channel output positions of 0% and 100% are represented as 20mA and 4mA signals, respectively.
		Disabled	Specifies that FARC air channel output positions of 0% and 100% are represented as 4mA and 20mA signals, respectively.
Position Error	2 %	0 % - 10 %	Specifies the maximum amount that the air position feedback input reading may differ from the air position output.
Post Purge Mode	Purge Position	Purge Position	Defines the Air position when post purging.
		Last Position	
Off Position	0%	0 % - 100 %	Position of Air when system is stopped and not purging.
Purge Position	100%	0 % - 100 %	Position of the Air output while system is purging.
Pilot Position	40%	0 % - 100 %	Position of the Air output while in the Pilot state or while preparing for pilot ignition.

7.5 SETUP

7.5.1 COMMISSIONING

NAME	DEFAULT	OPTIONS / RANGE	DESCRIPTION
Voltage Setting	12V	12V	Sets the expected input voltage for the system.
		24V	
Voltage Restart	Disabled	Disabled	Allows the system to automatically restart after a low voltage event while running.
		Enabled	
L1 Password Enable	Disabled	Disabled	Enabling this mode allows L1 password control on some non-safety critical settings.
		Enabled	
Comm Loss Alarm	Disabled	Disabled	Specifies whether the system will shut down when the BMS and UI lose communication with one another.
		Enabled	
Commissioning Complete	Incomplete	Incomplete	Setting to confirm all commissioning checks have been performed.
		Complete	
Current Date/Time	Jan 1 2000		Sets the date and time for accurate event and data logging. Note: Ensure that this setting is reconfigured upon power up when the system is without power for longer than 15 days.
	12:00 AM		

7.5.2 MODBUS

NAME	DEFAULT	OPTIONS / RANGE	DESCRIPTION
RTU Communication	Disabled	Disabled	Enables or disables Modbus communication.
		Enabled	
Termination	Disabled	Disabled	Enables or disables Modbus termination resistor.
		Enabled	
Baud Rate	9600	9600	Baud rate for the RS-485 link.
		19200	
Stop Bits	1	1	Number of stop bits. Used for configuring the RS-485 protocol.
		2	
Parity	None	None	Parity bit support. Used for configuring the RS-485 protocol.
		Odd	
		Even	
Slave Address	1	1 - 247	Modbus slave address of the PF2200.

7.5.3 UNITS

NAME	DEFAULT	OPTIONS / RANGE	DESCRIPTION
Temperatures	Celsius	Celsius	Display units for Temperature inputs.
		Fahrenheit	
Pressure	kPa	kPa	Display units for Pressure input.
		Psi	
		inch wc	
		oz/in ²	
		kg/cm ²	
		Percent	
		Milliamps	

NAME	DEFAULT	OPTIONS / RANGE	DESCRIPTION
Level	Litres	Litres	Display units for Level/Flow input when configured as a Level input.
		m ³	
		US Gallons	
		Bbl	
		ft ³	
		Percent	
		Milliamps	
Flow	L/sec	L/sec	Display units for Level/Flow input when configured as a Flow input.
		L/min	
		m ³ /sec	
		m ³ /min	
		US Gal/sec	
		US Gal/min	
		bbl/sec	
		bbl/min	
		ft ³ /sec	
		ft ³ /min	
		Percent	
		Milliamps	
Airflow	CFM	CFM	Display units for Proof of Airflow input.
		m ³ /hr	
		kPa	
		Psi	
		inch wc	
		Percent	
		Milliamps	
Level/Flow Input Units	Level	Level	Sets whether Level/Flow Input is used as a Level input or a Flow input.
		Flow	

NAME	DEFAULT	OPTIONS / RANGE	DESCRIPTION
Aux In 1/ Aux In 2	Percent	Percent	Display units for Aux In 1 / Aux In 2.
		Milliamps	
		Temperature	
		Pressure	
		Level	
		Flow	
		Percent O ₂	

7.5.4 MANUAL OVERRIDES

NAME	DEFAULT	OPTIONS / RANGE	DESCRIPTION
Firing Rate Manual Override	Disabled	Disabled	Manual override of system firing rate.
		Enabled	
Manual Firing Rate	0%	0 % - 100 %	System firing rate while in Process Control when Firing Rate Manual Override is enabled.

8 MAINTENANCE



Warning:

Do not modify any system wiring or handle the electronics while the system is powered.



Caution:

Do not disassemble or modify the cards in any way. The cards are not field repairable and must be sent back to Profire for replacement if damaged. The enclosure door must be securely closed after opening. Improper closure may result in moisture or other environmental damage and may compromise the integrity of the product.

8.1 TOOLS REQUIRED

The following tools are required for maintenance and commissioning:

- Large flat-head or #2 Phillips screwdriver to open and close enclosure.
- 2.5mm and 3.5mm terminal block screwdriver for securing wiring to card terminal blocks.
- #2 Phillips screwdriver for BMS card mounting.
- 10-32 nut driver for UI card mounting.
- Digital multimeter or process calibrator for troubleshooting.

8.2 RECOMMENDED MAINTENANCE PROCEDURES

A comprehensive plan for routine maintenance should be developed in accordance with local safety codes, application requirements and manufacturer recommendations for all equipment used. The maintenance plan should include, but not be limited to the following recommended maintenance procedures:

1. Check all wiring against site wiring diagram.
2. Check enclosures, boards and fittings for signs of wear and replace as needed.
3. Check for moisture in enclosures and replace or recharge desiccant as needed.
4. Verify functionality of all keypad buttons.
5. Verify UI screen display functionality.
6. Verify accuracy of all settings.
7. Verify card hardware and firmware versions are up to date and compatible.

8. Verify all instrumentation and fuel train components are functional and undamaged.
9. Verify all heater components are functional and undamaged.
10. Verify that all configured interlock trips result in appropriate alert annunciation.
11. Verify calibration of all 4-20 mA input devices and temperature input devices.
12. Back up all data log and event log files from the USB to an external storage system.

It is expected that the PF2200 temperature and analog inputs are within the stated accuracy range for the lifetime of the product. Calibration and verification frequency is to be determined in accordance with the manufacturer recommendations for the connected end devices and the applicable local safety codes.

8.3 TRANSPORTATION AND STORAGE CONDITIONS

Transportation of the product shall be in the original product packaging or equivalent. Transportation of cards without enclosure is not recommended and should be done with the utmost care utilizing an Anti-Static/ESD bag.

Storage temperature should be kept within the operating temperature listed in Section 3 in a dry area. Avoid moisture buildup inside the enclosure.

8.4 REPAIR AND REPLACEMENT

Profire does not support on-site repairs for cards. For replacement cards contact Profire customer service.

In the event replacement card(s) are used, care must be taken to ensure proper firmware is loaded on both the User Interface and BMS cards. If the User Interface and BMS cards have different software bundles loaded on them, the system will fail to operate correctly and will require a firmware update to match.

BMS cards must be securely fastened into the back of the enclosure with six #10-32 machine screws.

UI cards must not be removed from the enclosure door. Should a UI card replacement be required, an entire door assembly will be shipped.

8.5 DECOMMISSIONING

When decommissioning the system, the appliance should be safely shut down (i.e. all safety outputs are turned off and there are no gas leaks on site). Once the appliance is in a safe state, the power should be disconnected from the PF2200. All cards should be treated like any other piece of electronics (e.g. be sent to a recycling depot).

8.6 USEFUL LIFE

The useful life of the PF2200 is 10 years. Prior to the expiry of that period the customer should contact Profire for a suitable replacement.

8.7 MANUFACTURER NOTIFICATION

Any detected failures that compromise the functional safety of the system must be reported to Profire customer service immediately.

9 TROUBLESHOOTING

PROBLEM	PROPOSED SOLUTIONS
System has visible flame but cannot detect	<ol style="list-style-type: none"> 1. Ensure pilot assembly, flame rod, and the gap between are fully engulfed in flame. If not, adjust rod position 2. Ensure flame detection wiring does not exceed the recommended maximum length 3. Ensure burner assembly has a low impedance path to chassis ground 4. For longer run lengths, ensure ignition cable is used to avoid ground-loading
Card is unresponsive or BMS card will not communicate with User Interface card	<ol style="list-style-type: none"> 1. Ensure the Status LEDs for both cards are functioning. If status LED is not functioning, cycle power (if safe to do so) and check again. 2. Check the wiring between the BMS card and the User Interface Card.
Ignition transformer “clicks” but no visible spark	<ol style="list-style-type: none"> 1. Ensure all wires in the ignition path are properly terminated and that there is a low impedance path from the primary-windings to the BMS card as well as the secondary-windings to the ignition rod. 2. Ensure the gap between the ignition rod and the burner housing is within the tolerances specified in the Product Declarations section under “High Voltage Spark Gap Range”.
Solenoids are not turning on, or turning on then over time turn off	<ol style="list-style-type: none"> 1. Ensure the solenoid is wired correctly and to the appropriate terminals. To ensure proper solenoid wiring, a multi-meter in OHM mode can be used to measure the resistance between the + and - terminal of the associated output. Note: this measurement should be done with the BMS card powered off. If properly wired, the multi-meter should read a resistance of the solenoid coil plus the run length (i.e. if the multimeter reads open, there is likely a problem with wiring). 2. Ensure the PWM setting is correct for the appropriate solenoid. If using a peak-and-hold solenoid, the appropriate PWM setting can be found in the solenoid data sheet. Typically add a margin of 5-10% to allow for temperature variance. If using a non-peak-and-hold solenoid, ensure the PWM setting is set to 100%.
Digital input will not energize	<ol style="list-style-type: none"> 1. Ensure the input is properly wired. See Connection Diagrams section. In the case of a dry contact, ensure the PWR terminal is connected and is sourcing the correct voltage. 2. Ensure adequate amount of wetting current is being applied to through contact. Run a current meter in series with the digital input switch and verify the energized state meets the requirements outlined in the BMS Card Electrical Ratings section. If the wetting current is not adequate, the digital input either has too high of an impedance or the wiring has been compromised.

10 ALERT CODES & RESPONSE TIMES

10.1 ALARMS

ID	NAME	ALARM CONDITION	SET
AL001	Proof of Closure Contact Open	POC input is open while SSV outputs de-energized	2s
AL002	ESD Contact Open	ESD input is open	1s
AL003	Pressure Out of Range	Pressure Input in 4-20 mode: Input is less than 3 mA OR greater than 21 mA Pressure Input in Digital mode: Input is not within valid range ^(NOTE 1)	1s
AL004	Low Pressure	Pressure Input in 4-20 mode: Input is less than Pressure Low Trip setting Pressure Input in Digital mode: Input is open	Low Pressure Delay setting
AL005	High Pressure 4-20	Pressure Input in 4-20 mode: Input is greater than High Trip setpoint AND SSV outputs energized Pressure Input in Digital mode: This alarm cannot be set	2s
AL006	High Pressure Out of Range	High Pressure input is not within valid range ^(NOTE 1)	1s
AL007	High Pressure Contact	High Pressure input is open	2s
AL008	Pressure Configuration Error	Pressure High Trip setting is less than Pressure Low Trip plus Pressure Deadband OR Pressure Span Max is less than Pressure Span Min	0
AL009	Proof of Position Out of Range	Proof of Position Input In 4-20 mode: Input is less than 3 mA OR greater than 21 mA Proof of Position Input in Digital mode: Input is not within a valid range ^(NOTE 1)	1s
AL010	TCV Failed to Prove Pilot Position	Proof of Position Input in 4-20 mode: Pilot position not proven in Request Pilot Position state. Aux In 1 or Aux In 2 in Digital Pilot Position Mode: Pilot position input stuck energized during Startup Checks state OR de-energized in Request Pilot Position state.	2s
AL011	Failed to Prove Airflow	Fan Mode is set to Forced Draft: Airflow not proven during any running state after Startup Checks Fan Mode is set to Purge Only: Airflow is not proven during Pre-Purge state	2s
AL012	TCV Failed to Prove Purge Position	Proof of Position Input in 4-20 mode: Purge position not proven in Request Purge Position state. Aux In 1 or Aux In 2 in Digital Pilot Position Mode: Purge position input stuck energized during Startup Checks state OR de-energized in Request Purge Position state.	2s
AL013	TCV Failed to Prove Light Off Position	Proof of Position Input in 4-20 mode: Light Off position not proven in Request Light Off Position state. Proof of Position Input in Digital Mode: Light Off position input stuck energized during Startup Checks state OR de-energized in Request Light Off Position state.	2s
AL014	Level/Flow Out of Range	Level Input in 4-20 mode: Input is less than 3 mA OR greater than 21 mA Level Input in Digital mode: Input is not within a valid range ^(NOTE 1)	1s
AL015	Low Level/Flow	Level Input in 4-20 mode: Input is less than Level Low Trip setting Level Input in Digital mode: Input is open	Level/Flow Delay setting

ID	NAME	ALARM CONDITION	SET
AL016	High Level/Flow	Level input in 4-20 mode: Input is greater than Level High Trip Level input in Digital mode: This alarm cannot be set	Level/Flow Delay setting
AL017	Level/Flow Configuration Error	Level High Trip setting is less than Level Low Trip plus Level Deadband OR Level Span Max less than Level Span Min	0
AL018	High Airflow	Proof of Airflow Input in 4-20 mode: Input is greater than High Trip setpoint Proof of Airflow Input in Digital mode: This alarm cannot be set	2s
AL019	Proof of Airflow Configuration Error	Proof of Airflow High Trip setting is less than Low Trip plus Level Deadband OR Proof of Airflow Span Max less than Span Min	0
AL020	Aux In 1 Contact Open	Aux In 1 input in 4-20 mode: This alarm cannot be set Aux In 1 input in Digital mode and Digital Trip Mode is Alarm: Input is open	2s
AL021	Aux In 1 Out of Range	Aux In 1 Input in 4-20 mode: Input is less than 3 mA OR greater than 21 mA Aux In 1 Input in Digital mode: Input is not within a valid range ^(NOTE 1)	1s
AL022	Aux In 1 Low Trip	Aux In 1 Input in 4-20 mode: Input is less than Aux In 1 Low Trip setting Aux In 1 Input in Digital mode: This alarm cannot be set	2s
AL023	Aux In 1 High Trip	Aux In 1 Input in 4-20 mode: Input is greater than Aux In 1 High Trip setting Aux In 1 Input in Digital mode: This alarm cannot be set	2s
AL024	Aux In 1 Configuration Error	Input High Trip less than Input Low Trip plus Input Deadband OR Input Span Max less than Input Span Min OR Input High Trip greater than Input Span Max OR Input Low Trip less than Input Span Min OR Mode is Appliance Firing Rate AND Process Control Mode is not External Firing Rate OR Both Aux In 1 and Aux in 2 are set up as Appliance Firing Rate inputs OR Both Aux In 1 and Aux in 2 are set up as Process Setpoint Adjust inputs OR Both Aux In 1 and Aux in 2 are set up as UV Flame Quality inputs OR Both Aux In 1 and Aux in 2 are set up as Pilot Position inputs OR Both Aux In 1 and Aux in 2 are set up as Purge Position inputs	0
AL025	Aux In 2 Contact Open	Aux In 2 input in 4-20 mode: This alarm cannot be set Aux In 2 input in Digital mode and Digital Trip Mode is Alarm: Input is open	2s
AL026	Aux In 2 Out of Range	Aux In 2 Input in 4-20 mode: Input is less than 3 mA OR greater than 21 mA Aux In 2 Input in Digital mode: Input is not within a valid range ^(NOTE 1)	1s
AL027	Aux In 2 Low Trip	Aux In 2 Input in 4-20 mode: Input is less than Aux In 2 Low Trip setting Aux In 2 Input in Digital mode: This alarm cannot be set	2s
AL028	Aux In 2 High Trip	Aux In 2 Input in 4-20 mode: Input is greater than Aux In 2 High Trip setting Aux In 2 Input in Digital mode: This alarm cannot be set	2s
AL029	Aux In 2 Configuration Error	Input High Trip less than Input Low Trip plus Input Deadband OR Input Span Max less than Input Span Min OR Input High Trip greater than Input Span Max OR Input Low Trip less than Input Span Min OR Mode is Appliance Firing Rate AND Process Control Mode is not External Firing Rate OR Both Aux in 1 and Aux in 2 are set up as Appliance Firing Rate inputs OR Both Aux in 1 and Aux in 2 are set up as Process Setpoint Adjust inputs OR Both Aux in 1 and Aux in 2 are set up as UV Flame Quality inputs OR Both Aux In 1 and Aux in 2 are set up as Pilot Position inputs OR Both Aux In 1 and Aux in 2 are set up as Purge Position inputs	0

ID	NAME	ALARM CONDITION	SET
AL030	Process Setpoint Adjust Lacks Process Temp	Process Setpoint Adjust input is configured to use a temperature that is not set up for Process Control	0
AL031	Process Setpoint Adjust Unit Configuration Error	Process Setpoint Adjust Input units are not set to a valid temperature unit	0
AL032	Bath High Temp ESD	Bath Temperature Input is greater than High Temp ESD setpoint	2s
AL033	Bath Temp Mismatch	Bath Temperature Input 1 does not match Bath Temperature Input 2	2s
AL034	Bath Temp Configuration Range Error	Bath High Temp Setpoint is out of range OR Pilot Off Setpoint (if enabled) is greater than or equal to the High Temp Setpoint OR Main Off Setpoint is greater than or equal to the High Temp Setpoint OR Main Off Setpoint is greater than the Pilot Off Setpoint (if enabled) OR Process Setpoint is greater than or equal to the High Temp Setpoint OR Process Setpoint is greater than the Pilot Off Setpoint (if enabled) OR Process Setpoint is greater than the Main Off Setpoint OR Low Temp Setpoint is greater than the Process Setpoint	0
AL035	Bath 1 Sensor Open	Bath Input 1 sensor has an open circuit	6s
AL036	Bath 1 Sensor Short	Bath Input 1 in RTD Mode: Input is measuring a short circuit Bath Input 1 in Thermocouple Mode: This alarm cannot be set	6s
AL037	Bath 1 Out of Range	Bath Input 1 in RTD Mode: Input is outside valid RTD range Bath Input 1 in Thermocouple Mode: Input is outside valid Thermocouple range	6s
AL038	Bath 1 Stale Data	Bath Input 1 is not reading valid data	6s
AL039	Bath 2 Sensor Open	Bath Input 2 sensor has an open circuit	6s
AL040	Bath 2 Sensor Short	Bath Input 2 in RTD Mode: Input is measuring a short circuit Bath Input 2 in Thermocouple Mode: This alarm cannot be set	6s
AL041	Bath 2 Out of Range	Bath Input 2 in RTD Mode: Input is outside valid RTD range Bath Input 2 in Thermocouple Mode: Input is outside valid Thermocouple range	6s
AL042	Bath 2 Stale Data	Bath Temperature Input 2 is not reading valid data	6s
AL043	Outlet High Temp ESD	Outlet Temperature Input is greater than High Temp ESD setpoint	2s
AL044	Outlet Temp Configuration Range Error	Outlet High Temp Setpoint is out of range OR Pilot Off Setpoint (if enabled) is greater than or equal to the High Temp Setpoint OR Main Off Setpoint is greater than or equal to the High Temp Setpoint OR Main Off Setpoint is greater than the Pilot Off setpoint (if enabled) OR Process Setpoint is greater than or equal to the High Temp Setpoint OR Process Setpoint is greater than the Pilot Off Setpoint (if enabled) OR Process Setpoint is greater than the Main Off Setpoint OR Low Temp Setpoint is greater than the Process Setpoint	0
AL045	Outlet Sensor Open	Outlet Input sensor has an open circuit	6s
AL046	Outlet Sensor Short	Outlet Input in RTD Mode: Input is measuring a short circuit Outlet Input in Thermocouple Mode: This alarm cannot be set	6s

ID	NAME	ALARM CONDITION	SET
AL047	Outlet Out of Range	Outlet Input in RTD Mode: Input is outside valid RTD range Outlet Input in Thermocouple Mode: Input is outside valid Thermocouple range	6s
AL048	Outlet Stale Data	Outlet Temperature Input is not reading valid data	6s
AL049	Stack High Temp ESD	Stack Temperature Input is greater than High Temp ESD setpoint	2s
AL050	Stack Temp Configuration Range Error	Stack High Temp Setpoint is out of range	0
AL051	Stack Sensor Open	Stack Input sensor has an open circuit	6s
AL052	Stack Sensor Short	Stack Input in RTD Mode: Input is measuring a short circuit Stack Input in Thermocouple Mode: This alarm cannot be set	6s
AL053	Stack Out of Range	Stack Input in RTD Mode: Input is outside valid RTD range Stack Input in Thermocouple Mode: Input is outside valid Thermocouple range	6s
AL054	Stack Stale Data	Stack Input is not reading valid data	6s
AL055	Ambient Temp Mismatch	Ambient Temperature Measurement mismatch between sensors ^(NOTE 2)	6s
AL056	Ambient Temp 1 Invalid	Ambient Temperature sensor 1 on BMS card is reporting an invalid reading ^(NOTE 2)	6s
AL057	Ambient Temp 2 Invalid	Ambient Temperature sensor 2 on BMS card is reporting an invalid reading ^(NOTE 2)	6s
AL058	No Process Temp Configured	Neither Bath nor Outlet temperature input is configured to be in Process Control mode	0
AL059	Pilot 1 Flame Fail	Pilot 1 has lost flame OR failed to ignite	0
AL060	Pilot 2 Flame Fail	Pilot 2 has lost flame OR failed to ignite	0
AL061	Pilot 1 Flame Detected While Off	Flame has been detected on Pilot 1 input before Pilot ignition	0
AL062	Pilot 2 Flame Detected While Off	Flame has been detected on Pilot 2 input before Pilot ignition	0
AL063	UV Flame Detected While Off	UV Detect Mode is Disabled: This alarm cannot be set UV Detect Mode is Main Only: UV Flame detected before Pilot Ignition or Main Light Off UV Detect Mode is Pilot and Main: UV Flame detected before Pilot Ignition	0
AL064	Reserved		
AL065	Reserved		
AL066	Reserved		
AL067	Airflow Input Stuck	Airflow detected during Startup Checks state	0
AL068	Flame 1 Ion+ Wiring Fault	AC voltage on Pilot 1 input too low to reliably detect flame Note: Usually caused by loading of the flame rod to ground	3s
AL069	Flame 2 Ion+ Wiring Fault	AC voltage on Pilot 2 input too low to reliably detect flame Note: Usually caused by loading of the flame rod to ground	3s
AL070	Pilot ADC Start Fault	Internal BMS Card fault ^(NOTE 2)	2s

ID	NAME	ALARM CONDITION	SET
AL071	Pilot ADC Read Fault	Internal BMS Card fault ^(NOTE 2)	2s
AL072	Pilot ADC Stop Fault	Internal BMS Card fault ^(NOTE 2)	2s
AL073	Flame 1 Voltage Fault	Pilot Flame 1 flame test failure ^(NOTE 2)	3s
AL074	Flame 2 Voltage Fault	Pilot Flame 2 flame test failure ^(NOTE 2)	3s
AL075	Low Voltage	In 12V Mode: System Voltage is less than 9.5V In 24V Mode: System Voltage is less than 19.0V	2s
AL076	High Voltage	In 12V Mode: System Voltage is greater than 16.8V In 24V Mode: System Voltage is greater than 33.6V	2s
AL077	System ADC Start Fault	Internal BMS Card fault ^(NOTE 2)	2s
AL078	System ADC Read Fault	Internal BMS Card fault ^(NOTE 2)	2s
AL079	System ADC Stop Fault	Internal BMS Card fault ^(NOTE 2)	2s
AL080	Commissioning Setting is Set to Incomplete	The Commissioning Complete setting is set to Incomplete	0
AL081	Cross Compare Failure	Internal BMS Card fault ^(NOTE 2)	2s
AL082	External Switch Stuck	External switch input is stuck in the Ignite position	5s
AL083	External Switch Invalid	External switch input is in an invalid position	0
AL084	User Stop via External Switch	External switch input is in the off position	0
AL085	User Stop via Interface	The BMS card received a stop command from the UI or remote Modbus device	0
AL086	Settings CRC Failed	Settings have been corrupted and cannot be verified	0
AL087	State Mismatch	Internal BMS Card fault ^(NOTE 2)	1s
AL088	Pressure I2C Bus Fault	Internal BMS Card fault ^(NOTE 2)	2s
AL089	High Pressure I2C Bus Fault	Internal BMS Card fault ^(NOTE 2)	2s
AL090	Reserved		
AL091	Level/Flow I2C Bus Fault	Internal BMS Card fault ^(NOTE 2)	2s
AL092	Reserved		
AL093	Aux In 1 I2C Bus Fault	Internal BMS Card fault ^(NOTE 2)	2s
AL094	Aux In 2 I2C Bus Fault	Internal BMS Card fault ^(NOTE 2)	2s
AL095	Pilot 1 I2C Bus Fault	Internal BMS Card fault ^(NOTE 2)	2s
AL096	Pilot 2 I2C Bus Fault	Internal BMS Card fault ^(NOTE 2)	2s
AL097	SSV1 I2C Bus Fault	Internal BMS Card fault ^(NOTE 2)	2s
AL098	SSV2 I2C Bus Fault	Internal BMS Card fault ^(NOTE 2)	2s
AL099	Reserved		
AL100	System Voltage Current I2C Bus Fault	Internal BMS Card fault ^(NOTE 2)	2s

ID	NAME	ALARM CONDITION	SET
AL101	IO Short Switch Run Fault	Internal BMS Card fault ^(NOTE 2)	1.5s
AL102	IO Short Switch Ignition Fault	Internal BMS Card fault ^(NOTE 2)	1.5s
AL103	IO Short Start Fault	Internal BMS Card fault ^(NOTE 2)	1.5s
AL104	IO Short POC Fault	Internal BMS Card fault ^(NOTE 2)	1.5s
AL105	IO Short UV Flame Off Fault	Internal BMS Card fault ^(NOTE 2)	1.5s
AL106	IO Short UV Fault	Internal BMS Card fault ^(NOTE 2)	1.5s
AL107	IO Short ESD Fault	Internal BMS Card fault ^(NOTE 2)	1.5s
AL108	Reserved		
AL109	Reserved		
AL110	Reserved		
AL111	Flash Failed To Read	Internal BMS Card fault ^(NOTE 2)	0
AL112	Flash Failed To Write	Internal BMS Card fault ^(NOTE 2)	0
AL113	Descriptor Failure	Internal BMS Card fault ^(NOTE 2)	0
AL114	Descriptor Mismatch	Internal BMS Card fault ^(NOTE 2)	0
AL115	Pilot 1 Valve Output Voltage Fault	Pilot 1 output is de-energized and voltage at BMS terminal 15 is greater than 5V	10s
AL116	Pilot 2 Valve Output Voltage Fault	Pilot 2 output is de-energized and voltage at BMS terminal 17 is greater than 5V	10s
AL117	SSV1 Output Voltage Fault	SSV 1 output is de-energized and voltage at BMS terminal 19 is greater than 5V	10s
AL118	SSV2 Output Voltage Fault	SSV 2 output is de-energized and voltage at BMS terminal 21 is greater than 5V	10s
AL119	Proof of Airflow Out of Range	Proof of Airflow Input in 4-20 mode: Input is less than 3 mA OR greater than 21 mA Proof of Airflow Input in Digital mode: Input is not within a valid range ^(NOTE 1)	1s
AL120	Start Contact Out of Range	Input is not within a valid range ^(NOTE 1)	2s
AL121	POC Contact Out of Range	Input is not within a valid range ^(NOTE 1)	2s
AL122	ESD Contact Out of Range	Input is not within a valid range ^(NOTE 1)	2s
AL123	UV Flame On Contact Out of Range	Input is not within a valid range ^(NOTE 1)	2s
AL124	UV Flame Off Contact Out of Range	Input is not within a valid range ^(NOTE 1)	2s
AL125	UV Flame Fault Contact Out of Range	Input is not within a valid range ^(NOTE 1)	2s
AL126	Digital Input ADC Start Fault	Internal BMS Card fault ^(NOTE 2)	2s
AL127	Digital Input ADC Read Fault	Internal BMS Card fault ^(NOTE 2)	2s
AL128	Digital Input ADC Stop Fault	Internal BMS Card fault ^(NOTE 2)	2s

ID	NAME	ALARM CONDITION	SET
AL129	Safety Output Mismatch	Internal BMS Card fault ^(NOTE 2)	2s
AL130	Processor Reset	Internal BMS Card fault ^(NOTE 2)	0
AL131	Calibration CRC Failed	Internal BMS Card fault ^(NOTE 2)	0
AL132	Brownout Reset Voltage Incorrect	Internal BMS Card fault ^(NOTE 2)	0
AL133	Flame 1 DC Input Open	Internal BMS Card fault ^(NOTE 2)	3s
AL134	Flame 2 DC Input Open	Internal BMS Card fault ^(NOTE 2)	3s
AL135	Factory Calibration Error	Internal BMS Card fault ^(NOTE 2)	0
AL136	UV Flame Detect Mismatch	UV Flame Scanner Flame input and No Flame Input are both open or both closed	1s
AL137	UV Flame Detect Fault	UV Flame Scanner Fault input is open	1s
AL138	Interrupted Pilot Requires Main Flame Detection	Pilot Off Mode is Interrupted and UV Flame Detect Mode is disabled	0
AL139	Proof of Position Configuration Error	Proof of Position input in 4-20 Mode: Aux In 1 and or Aux In 2 are configured as digital proof of pilot or proof of purge inputs. Proof of Position input in Digital Mode: This alarm cannot be set	0
AL140	UV Flame Fail	Loss of UV flame	0
AL141	Appliance Firing Rate Aux Input Not Enabled	Process Control Mode is Firing Rate and Aux In 1/2 not set up as Firing Rate input	0
AL142	Shutdown Failed To Set	Internal BMS Card fault ^(NOTE 2)	0
AL143	Reserved		
AL144	Fan Output Voltage Fault	Fan output is de-energized and voltage at BMS terminal 23 is greater than 5V	10s
AL145	Pilot 2 Enabled with UV Pilot Detect	Pilot 2 is enabled when UV Flame Detect Mode is set to Pilot and Main	0
AL146	System Voltage Mismatch	Internal BMS Card fault ^(NOTE 2)	10s
AL147	Proof of Position I2C Bus Fault	Internal BMS Card fault ^(NOTE 2)	2s
AL148	Proof of Air I2C Bus Fault	Internal BMS Card fault ^(NOTE 2)	2s
AL149	Fan I2C Bus Fault	Internal BMS Card fault ^(NOTE 2)	2s
AL150	Level/Flow Control Setpoint Configuration Error	Run Status Level/Flow Control setting is outside Level/Flow Low and High Trip setpoints	0
AL151	UI Comm Loss	Comm Loss Alarm setting enabled: Communication loss between BMS and UI Cards Comm Loss Alarm setting disabled: This alarm cannot be set	10s
AL152	Invalid Aux Out Mode Selected	Configured Aux Output Mode is not supported	0
AL153	Reignition Configuration Error	Reignition enabled: Minimum Pilots Running is 2 OR Pilot 2 is disabled Reignition disabled: This alarm cannot be set	0
AL154	Pilot 2 Disabled While Min Pilots is 2	Minimum Pilots Running is 2 and Pilot 2 is disabled	0

ID	NAME	ALARM CONDITION	SET
AL155	PID Configuration Error	Process Control Mode is set to PID control with a temperature input that is not set to process control	0
AL156	Level/Flow Control Requires 4-20 Input	Run Status Mode is Level/Flow Control: Level/Flow input type is disabled or digital Run Status Mode is not Level/Flow Control: This alarm cannot be set	0
AL157	Flame Detect Software Watchdog Trip	Internal BMS Card fault	0
AL158	FARC Enabled Without Feature Enabled	FARC Mode (Settings > Proc Control > FARC) is enabled and FARC and O2 Trim Feature (System > Firmware > Info) shows Unavailable.	0
AL159	FARC Requires 4-20 Proof of Position	FARC Mode (Settings > Proc Control > FARC) is enabled and Proof of Position Type (Settings > Inputs > Proof of Position) is not set to 4-20	0
AL160	FARC Requires 4-20 Air Input and Output	FARC Mode (Settings > Proc Control > FARC) is enabled and either of the following conditions are satisfied: <ol style="list-style-type: none"> Aux In 4-20 Mode (Settings > Inputs > Aux In 1/2) is not set to Air Channel, or Aux Out 1 and 2 Modes (Settings > Outputs > Aux) are not set to Air Channel 	0
AL161	FARC Table Requires Commissioning	The FARC Table (Settings > Proc Control > FARC) has no configured points	0
AL162	FARC Table Requires Positive Slope	The FARC Table (Settings > Proc Control > FARC) fuel and/or air channel contains a section with a decreasing slope	0
AL163	Too Many Air Inputs or Outputs	Either of the following conditions is satisfied: <ol style="list-style-type: none"> Both Aux In 1 4-20 Mode (Settings > Inputs > Aux In 1) and Aux In 2 4-20 Mode (Settings > Inputs > Aux In 2) are set to Air Channel, or Both Aux Out 1 and 2 Modes (Settings > Outputs > Aux) are set to Air Channel 	0
AL164	Air Aux In Requires Percent Units	Aux In 4-20 Mode (Settings > Inputs > Aux In 1/2) is set to Air Channel and Aux In Units (Settings > Setup > Units) are not set to %	0
AL165	Air Input and Output Requires FARC	FARC Mode (Settings > Proc Control > FARC) is disabled and either of the following conditions are satisfied: <ol style="list-style-type: none"> Aux In 4-20 Mode (Settings > Inputs > Aux In 1/2) is set to Air Channel, or Aux Out 1 or 2 Mode (Settings > Outputs > Aux) is set to Air Channel 	0
AL166	Min Firing Rate Exceeds Light Off Firing Rate	The Minimum Firing Rate setting is higher than the Light Off Firing Rate (Settings > Proc Control > Configuration)	0
AL167	Air Position Error	The difference between the air position output and the air position input reading exceeds the configured air channel Position Error (Settings > Outputs > Air)	Position Error Timeout Time
AL168	TCV Position Error	The difference between the fuel position output and the fuel position input reading exceeds the configured fuel channel Position Error (Settings > Outputs > TCV)	Position Error Timeout Time
AL169	FARC Cross Limit Error	A fuel-rich condition in excess of the configured Cross Limit Error (Settings > Proc Control > FARC) is present	2s

ID	NAME	ALARM CONDITION	SET
AL170	FARC Requires Forced Draft Fan	FARC Mode (Settings > Proc Control > FARC) is enabled and Fan Mode (Settings > Outputs > Valves/Fan) is not set to Forced Draft	0
AL171	O2 Trim Requires FARC	O2 Trim Mode (Settings > Proc Control > O2 Trim) is enabled and FARC Mode (Settings > Proc Control > FARC) is disabled	0
AL172	O2 Trim Requires 4-20 O2 Sensor	O2 Trim Mode (Settings > Proc Control > O2 Trim) is enabled and neither Aux input 4-20 Mode (Settings > Inputs > Aux 1/2) is set to O2 Sensor	0
AL173	Too Many O2 Sensors	Aux input 1 4-20 Mode and Aux input 2 4-20 Mode are both set to O2 Sensor	0
AL174	O2 Sensor Requires %O2 Units	Aux input 4-20 Mode (Settings > Inputs > Aux 1/2) is set to O2 Sensor and corresponding Aux In Units (Settings > Setup > Unites) is not set to Percent O2	0
AL175	O2 Trim Requires High Temp ESD Stack Temp	O2 Trim Warmup (Settings > Proc Control > O2 Trim) is set to Stack Temp and Stack Temp Mode (Settings > Temps > Stack) is not set to High Temp ESD	0
AL176	Target Percent O2 Below O2 Low Trip	Aux input in O2 Sensor mode: Target O2 (Settings > Proc Control > O2 Trim) is lower than Aux In 4-20 Low Trip Setpoint (Settings > Inputs > Aux 1/2)	0
AL177	Target Percent O2 Above O2 High Trip	Aux input in O2 Sensor mode: Target O2 (Settings > Proc Control > O2 Trim) is greater than Aux In 4-20 High Trip Setpoint (Settings > Inputs > Aux 1/2)	0
AL178	O2 Sensor Requires O2 Trim	Aux input 4-20 Mode (Settings > Inputs > Aux 1/2) is set to O2 Sensor and O2 Trim Mode (Settings > Proc Control > O2 Trim) is disabled.	0
AL179	Low Percent O2	Aux input in O2 Sensor mode: Input is lower than Aux In 4-20 Low Trip Setpoint Aux input not in O2 Sensor mode: This alarm cannot be set	2s
AL180	Air Failed to Prove Pilot Position	Aux input in Air Channel mode: Input position not proven during the Request Pilot Position state Aux input not in Air Channel mode: This alarm cannot be set	Pilot Position Timeout setting
AL181	Air Failed to Prove Purge Position	Aux input in Air Channel mode: Input position not proven during the Request Purge Position state Aux input not in Air Channel mode: This alarm cannot be set	Purge Position Timeout setting
AL182	Air Failed to Prove Light Off Position	Aux input in Air Channel mode: Input position not proven during the Request Light Off Position state Aux input not in Air Channel mode: This alarm cannot be set	Light Off Position Timeout setting
AL183	Stack O2 Temp Min Exceeds High Temp ESD	Stack O2 Temp Minimum setting is above its configured High Temp Setpoint setting minus its configured Deadband setting.	0

1 This fault can occur in one of two scenarios: a negative voltage is present on the Signal In terminal OR the BMS card has been compromised

2 This fault usually occurs when the BMS card has been compromised

10.2 WAITS

ID	NAME	WAIT CONDITION	SET
WT001	Low Voltage	In 12V Mode: Voltage Restart is enabled AND System Voltage is less than 9.5V In 24V Mode: Voltage Restart is enabled AND System Voltage is less than 19.0V	2s
WT002	High Voltage	In 12V Mode: Voltage Restart is enabled AND System Voltage is greater than 16.8V In 24V Mode: Voltage Restart is enabled AND System Voltage is greater than 33.6V	2s
WT003	Low Pressure ^(NOTE 1)	Pressure Input in 4-20 mode: Input is less than Pressure Low Trip setting Pressure Input in Digital mode: Input is open	Low Pressure Delay setting
WT004	Low Level/Flow ^(NOTE 1)	Level Input in 4-20 mode: Input is less than Level Low Trip setting Level Input in Digital mode: Input is open	Level/Flow Delay setting
WT005	High Level/Flow ^(NOTE 1)	Level input in 4-20 mode: Input is greater than Level High Trip Level input in Digital mode: This wait cannot be set	Level/Flow Delay setting
WT006	High Bath Temp	Bath temperature is too high to require the system to be in a fuel state. Refer to Operating Sequence section for configuration specific behavior	2s
WT007	High Outlet Temp	Outlet temperature is too high to require the system to be in a fuel state. Refer to Operating Sequence section for configuration specific behavior	2s
WT008	Start Contact Open	Start contact open	1s
WT009	Aux In 1 Contact Open ^(NOTE 1)	Aux In 1 input in 4-20 mode: This wait cannot be set Aux In 1 input in Digital mode: Input is open	2s
WT010	Aux In 1 Low Trip ^(NOTE 1)	Aux In 1 Input in 4-20 mode: Input is less than Aux In 1 Low Trip setting Aux In 1 Input in Digital mode: This wait cannot be set	2s
WT011	Aux In 1 High Trip ^(NOTE 1)	Aux In 1 Input in 4-20 mode: Input is greater than Aux In 1 High Trip setting Aux In 1 Input in Digital mode: This wait cannot be set	2s
WT012	Aux In 2 Contact Open ^(NOTE 1)	Aux In 2 input in 4-20 mode: This wait cannot be set Aux In 2 input in Digital mode: Input is open	2s
WT013	Aux In 2 Low Trip ^(NOTE 1)	Aux In 2 Input in 4-20 mode: Input is less than Aux In 2 Low Trip setting Aux In 2 Input in Digital mode: This wait cannot be set	2s
WT014	Aux In 2 High Trip ^(NOTE 1)	Aux In 2 Input in 4-20 mode: Input is greater than Aux In 2 High Trip setting Aux In 2 Input in Digital mode: This wait cannot be set	2s

1 Associated Trip Mode setting must be configured as a Wait

10.3 WARNINGS

ID	NAME	WARNING CONDITION	SET
WN001	Low Voltage	In 12V Mode: System Voltage is less than 10.2V In 24V Mode: System Voltage is less than 20.4V	2s
WN002	High Voltage	In 12V Mode: System Voltage is greater than 16.2V In 24V Mode: System Voltage is greater than 32.4V	2s
WN003	Low Level/Flow ^(NOTE 1)	Level Input in 4-20 mode: Input is less than Level Low Trip setting Level Input in Digital mode: Input is open	Level/Flow Delay setting
WN004	High Level/Flow ^(NOTE 1)	Level input in 4-20 mode: Input is greater than Level High Trip Level input in Digital mode: This warning cannot be set	Level/Flow Delay setting
WN005	Low Bath Temp	Bath Temperature reading is at or below the Bath Low Temp Setpoint	2s
WN006	Low Outlet Temp	Outlet Temperature reading is at or below the Outlet Low Temp Setpoint	2s
WN007	High Pressure 4-20	Pressure in 4-20 mode: Input is greater than High Trip setpoint AND SSV outputs de-energized Pressure in Digital mode: This warning cannot be set	2s
WN008	Low Pressure ^(NOTE 1)	Pressure Input in 4-20 mode: Input is less than Pressure Low Trip setting Pressure Input in Digital mode: Input is open	Low Pressure Delay setting
WN009	Aux In 1 Contact Open ^(NOTE 1)	Aux In 1 input in 4-20 mode: This warning cannot be set Aux In 1 input in Digital mode: Input is open	2s
WN010	Aux In 1 Low Trip ^(NOTE 1)	Aux In 1 Input in 4-20 mode: Input is less than Aux In 1 Low Trip setting Aux In 1 Input in Digital mode: This warning cannot be set	2s
WN011	Aux In 1 High Trip ^(NOTE 1)	Aux In 1 Input in 4-20 mode: Input is greater than Aux In 1 High Trip setting Aux In 1 Input in Digital mode: This warning cannot be set	2s
WN012	Aux In 2 Contact Open ^(NOTE 1)	Aux In 2 input in 4-20 mode: This warning cannot be set Aux In 2 input in Digital mode: Input is open	2s
WN013	Aux In 2 Low Trip ^(NOTE 1)	Aux In 2 Input in 4-20 mode: Input is less than Aux In 2 Low Trip setting Aux In 2 Input in Digital mode: This warning cannot be set	2s
WN014	Aux In 2 High Trip ^(NOTE 1)	Aux In 2 Input in 4-20 mode: Input is greater than Aux In 2 High Trip setting Aux In 2 Input in Digital mode: This warning cannot be set	2s
WN015	POC Contact Failed to Open	Proof of Closure Input enabled: Proof of Closure input closed AND SSV outputs are energized Proof of Closure Input disabled: This warning cannot be set	10s
WN016	Reserved		
WN017	UI to BMS Firmware Mismatch	UI and BMS firmware do not match	0
WN018	BMS Comm Loss	UI Comm Loss Alarm Setting is Enabled AND UI card has lost communications with the BMS card	0
WN019	Hardware Descriptor Error	Internal BMS Card fault	0
WN020	Product Variant Descriptor Error	Internal BMS Card fault	0

ID	NAME	WARNING CONDITION	SET
WN021	Firmware Descriptor Error	Internal BMS Card fault	0
WN022	Bootloader Descriptor Error	Internal BMS Card fault	0
WN023	UI Descriptor Error	Internal UI Card fault	0
WN024	Outlet Sensor Open	Outlet Mode is Display Only AND Outlet Input has a TC Open or RTD Open fault.	6s
WN025	Outlet Sensor Short	Outlet Mode is Display Only AND Outlet Input has an RTD short fault.	6s
WN026	Outlet Out of Range	Outlet Mode is Display Only AND Outlet Input out of valid RTD or Thermocouple range	6s
WN027	Outlet Stale Data	Outlet Mode is Display Only AND Outlet Input is not reading valid data	6s
WN028	Stack Sensor Open	Stack Mode is Display Only AND Stack Input has a TC Open or RTD Open fault.	6s
WN029	Stack Sensor Short	Stack Mode is Display Only AND Stack Input has an RTD short fault.	6s
WN030	Stack Out of Range	Stack Mode is Display Only AND Stack Input out of valid RTD or Thermocouple range	6s
WN031	Stack Stale Data	Stack Mode is Display Only AND Stack Input is not reading valid data	6s
WN032	Aux Output 1 Fault	Aux Output 1 wiring problem or board fault	2s
WN033	Aux Output 2 Fault	Aux Output 2 wiring problem or board fault	2s
WN034	TCV Fault	TCV Output wiring problem or board fault	2s
WN035	Pilot 1 Flame Lost	Minimum Pilots Running is 1: Running with Pilot 2 flame only and Pilot 1 de-energized Minimum Pilots Running is 2: This warning cannot be set	0
WN036	Pilot 2 Flame Lost	Minimum Pilots Running is 1: Running with Pilot 1 flame only and Pilot 2 de-energized Minimum Pilots Running is 2: This warning cannot be set	0
WN037	Firing Rate Manual Override Enabled	Firing Rate Manual Override setting is enabled	0
WN038	O2 Trim at Limit	The O2 Trim Offset is at its configured High Offset Limit or Low Offset Limit (Settings > Proc Control > O2 Trim)	2s
WN039	High Percent O2	Aux input in O2 Sensor mode: Input is higher than Aux In 4-20 High Trip Setpoint Aux input not in O2 Sensor mode: This warning cannot be set	2s

1 Associated Trip Mode setting must be configured as a Warning

10.4 MAIN PERMISSIVES

ID	NAME	MAIN PERMISSIVE CONDITION	SET
MP001	Low Pressure ^(NOTE 1)	Pressure Input in 4-20 mode: Input is less than Pressure Low Trip setting Pressure Input in Digital mode: Input is open	Low Pressure Delay setting
MP002	Aux In 1 Contact Open ^(NOTE 1)	Aux In 1 input in 4-20 mode: This main permissive cannot be set Aux In 1 input in Digital mode: Input is open	2s
MP003	Aux In 1 Low Trip ^(NOTE 1)	Aux In 1 Input in 4-20 mode: Input is less than Aux In 1 Low Trip setting Aux In 1 Input in Digital mode: This main permissive cannot be set	2s
MP004	Aux In 1 High Trip ^(NOTE 1)	Aux In 1 Input in 4-20 mode: Input is greater than Aux In 1 High Trip setting Aux In 1 Input in Digital mode: This main permissive cannot be set	2s
MP005	Aux In 2 Contact Open ^(NOTE 1)	Aux In 2 input in 4-20 mode: This main permissive cannot be set Aux In 2 input in Digital mode: Input is open	2s
MP006	Aux In 2 Low Trip ^(NOTE 1)	Aux In 2 Input in 4-20 mode: Input is less than Aux In 2 Low Trip setting Aux In 2 Input in Digital mode: This main permissive cannot be set	2s
MP007	Aux In 2 High Trip ^(NOTE 1)	Aux In 2 Input in 4-20 mode: Input is greater than Aux In 2 High Trip setting Aux In 2 Input in Digital mode: This main permissive cannot be set	2s

1 Associated Trip Mode setting must be configured as a Main Permissive

11 GLOSSARY

TERM	DEFINITION
Alarm	An indication of an abnormal condition in either the equipment or the process.
Continuous Pilot	A pilot which, once placed in operation, is intended to remain ignited continuously until it is manually interrupted
Digital Input	An input to the system that can be one of only two states (Energized or De-energized).
Electronic Disconnection	Non-cycling interruption by an electronic device of a circuit for functional disconnection which provides a disconnection other than by means of an air gap by satisfying certain electrical requirements in at least one pole
Flame Detector	Device which provides the programming unit with a signal indicating the presence of absence of flame
Flame Detector Response Time	Period of time between loss of the sensed flame and the signal indicating the absence of flame
Flame Detector Self-Checking Rate	Frequency of self-checking function of the flame detector (in number of operations per unit of time)
Flame Failure Lock-out Time	Period of time between the signal indicating absence of flame and lock-out
Full Rate Start	Condition in which the main burner ignition and subsequent flame supervision occur at full fuel rate
Ignition Time	Period of time during which the ignition device is energized
Incorporated Control	Control intended for incorporation in, or on, an equipment, but which can be tested separately.
Intermittent Pilot	A pilot which is automatically ignited when an appliance is called on to operate and which remains continuously ignited during each period of main burner operation. The pilot is automatically extinguished when each main burner operating cycle is completed
Interrupted Ignition	A type of ignition which is energized prior to the admission of fuel to the main burner and which is de-energized when the main flame is established
Interrupted Pilot	A pilot which is automatically ignited prior to the admission of fuel to the main burner and which is automatically extinguished when the main flame is established
Lockout	A state in which all powered outputs (Valves and Ignition) are de-energized and interaction from the user is required in order to exit the state.
Low Rate Start	Condition in which main burner ignition occurs at low fuel rate. Once ignition at low fuel rate occurs and the flame is proven, full main burner fuel rate may be admitted
Main Permissive	An event which causes the BMS to de-energize the main solenoid outputs (SSV) and remain in that state until the event clears (or an alarm / wait condition forces the BMS out)
Maximum Flame-failure Reignition Time	Period of time between the signal indicating absence of flame and the signal to energize the ignition device. During this time period the fuel supply is not shut off.
Non-volatile Lockout	Condition such that a restart can only be accomplished by a manual reset of the system and by no other cause
Permanent Operation	System which is intended to remain in the running position for longer than 24 h without interruption
Pilot-flame Establishing Period	Period of time between the signal to energize the pilot fuel flow means and the signal indicating presence of the pilot flame

TERM	DEFINITION
Post-Ignition Time	Period of time between the signal indicating presence of flame and the signal to de-energize the ignition device
Post-Purge Time	Purge time that takes place immediately following the shutting off of the fuel supply
Pre-Ignition Time	Period of the ignition time between the signal to ignite and the signal to energize the fuel flow means
Pre-Purge Time	Purge time that takes place between initiation of a burner control sequence and the admission of fuel to the burner
Recycle Time	Period of time between the signal to de-energize the fuel flow means following the loss of flame and the signal to begin a new start-up procedure
Safety Output	A powered electrical output from the PF2200 BMS card designed to control safety actuators (e.g. safety shut off valves, ignition coils, etc.). Safety Outputs of the PF2200 BMS card are as follows: Pilot 1, Pilot 2, SSV, High Fire, Coil 1, and Coil 2.
Safety-interlock	A term used to describe an input (either switch or Transmitter) that must be satisfied to run. If the interlock is not satisfied (e.g. open switch or out of range transmitter) the system will proceed to lock-out.
Shutdown	The process the system goes through when it receives an alarm event while running. This is immediately followed by entering the state of Lockout.
Signal for Absence of Flame	Maximum signal which indicates the loss of flame
Signal for Presence of Flame	Minimum signal which indicates the presence of flame when there was previously no flame
Start-up Lock-out Time	Period of time between the signal to energize the fuel flow means and lock-out
Type 2 Action	Automatic action for which the manufacturing deviation and the drift of its operating value, operating time, or operating sequence have been declared and tested per IEC 60730
Wait	An event which causes the BMS to proceed to a state which will de-energize all safety outputs. When all wait events clear, the BMS is free to automatically recycle.
Waiting Time	Period between the start signal and the signal to energize the ignition device. For burners without fans, natural ventilation of the combustion chamber and the flue passages normally takes place during this time.

12 ACRONYMS

ACRONYM	DESCRIPTION
1oo1	One out of one deployment
BMS	Burner Management System
ESD	Emergency Shut Down – a mechanism that shuts down the system in the event of a safety emergency
HEI	High Energy Ignition
HFT	Hardware Fault Tolerance
HFV	High Fire Valve
I/O	The generic name for a terminal that can be an input, output, or a combination of both.
PF2200-FD	The model number for the PF2200 Forced Draft BMS product. Consists of: BMS Card, User Interface Card, keypad, and enclosure.
PoC	Proof of Closure
PFN	Profire Network. Method of communication between User Interface Card and BMS Card.
PWM	Pulse Width Modulation
RTD	Resistive Thermal Device
SIL	Safety Integrity Level. A discrete level (one out of a possible four) for specifying the safety integrity requirements of the safety functions to be allocated to the E/E/PE safety-related systems where Safety Integrity Level 4 has the highest level of safety integrity, and Safety Integrity Level 1 has the lowest
SIF	Safety Instrumented Function. A set of equipment intended to reduce the risk due to a specific hazard (a safety loop)
SFF	Safe Failure Fraction. The fraction of the overall failure rate of a device that results in either a safe fault or a diagnosed unsafe fault
SSV	Safety shutoff valve.
TCV	Temperature Control Valve

13 DOCUMENT REVISION HISTORY

DOCUMENT VERSION	RELEASE DATE	APPLICABLE BMS HARDWARE	APPLICABLE UI HARDWARE	APPLICABLE FIRMWARE
v6.0	08 MAY 2026	v2.3.x / v2.4.x	v3.2.x / v3.3.x	FD 3.0.4
v5.0	21 JUN 2022	v2.3.x / v2.4.x	v3.2.x / v3.3.x	FD 3.0.4
v4.0	25 OCT 2021	v2.3.x	v3.2.x	FD 2.1.2
v3.0	29 SEP 2021	v2.3.x	v3.2.x	FD 2.1.2
v2.0	02 FEB 2021	v2.3.x	v3.2.x	FD 2.1.2
v1.0	30 SEP 2020	v2.3.0	v3.2.0	FD 2.0.4

13.1 CHANGE SUMMARY

13.1.1 VERSION 6.0

- Corrected wire sizing in Section 2: Electrical and Mechanical Ratings
- Updated ION- wiring note in Section 9: Troubleshooting
- Added note to describe Aux Out behavior when outside Echo spans in Temp Echo mode
- Updated wording of Process Setpoint Adjust feature note for clarity

13.1.2 VERSION 5.0

- Added the following to cover FARC and O2 Trim optional feature additions:
- New FARC and O2 Trim Settings
- New FARC and O2 Trim alerts
- New FARC and O2 Trim input and output configuration and functionality tables

13.1.3 VERSION 4.0

- Added French safety warnings.

13.1.4 VERSION 3.0

- Added UL certification information on p.4
- Added settings modification helper graphic on p.12
- Added firmware update section to p.15
- Corrected Dual Rod Ignition wiring diagram on p.66

PROFIRE

SUPPORT@PROFIREENERGY.COM

1.855.PRO.FIRE



UNITED STATES

***321 South, 1250 West Suite 1
Lindon, UT 84042, USA***

CANADA

***9671 – 283 Street
Acheson, AB T7X 6J5, Canada***