



PF2200-SB

OPERATOR GUIDE



PROFIRE

PF2200-SB OPERATOR GUIDE

DOC-001042 v6.0

© 2022 PROFIRE ENERGY INC.

PROFIREENERGY.COM

PF2200-SB

OPERATOR GUIDE

TABLE OF CONTENTS

INTRODUCTION	02
PF2200-SB BMS Controller	02
Applicable Hardware and Firmware Versions	02
APPROVALS AND RATINGS	03
CONTROLLER INTERFACE	04
Screens	04
Buttons and Functions	05
KEY SETTINGS	06
Temperature Settings	06
Input Settings	07
Process Control Settings	07
SETTINGS MODIFICATION	08
Drop down menu settings	08
Numeric settings	09
SYSTEM TOOLS	10
The Event Log screen	10
The Data Logging tool	10
The Status Priority tool	11
The PF2200-SB Diagnostic menus	11
OPERATING SEQUENCE	12
State Table	12
State Diagram	13
TROUBLESHOOTING	14

INTRODUCTION

PF2200-SB BMS CONTROLLER

The PF2200-SB Burner Management System is an automated safety controller designed to monitor and control industrial heating processes that utilize single burner natural draft appliances. It provides for safe burner ignition, ionization or UV flame detection, temperature control and peripheral input device monitoring.

The user interface provides real-time system status and state information as well as detailed alert annunciation, advanced diagnostics and data logging. The system has been optimized for power consumption to be utilized in a variety of applications and can be monitored remotely.

This document provides a brief overview of the interface, operating sequence and functionality of the PF2200-SB BMS controller. Refer to the PF2200-SB Product Manual for detailed descriptions of the inputs, outputs and operating sequence as well as installation, maintenance and commissioning instructions.



APPLICABLE HARDWARE AND FIRMWARE VERSIONS

This document is applicable for the following hardware and firmware versions:

PF2200-SB Firmware Version: SB 2.2.0

BMS Card Hardware Version v2.4.X

UI Card Hardware Version v3.3.X

SYSTEM FW Info		Ready
BMS Bundle Version	SB 2.2.0	
BMS Hardware Model	2200-02	
BMS HW Product Variant	Single Burner	
BMS FW Product Variant	Single Burner	
BMS Firmware Version	v2.1.1	
BMS Bootloader Version	v1.1.1	
BMS BOM Version	v2.4.x	
BMS Region Code	North America	
BMS Serial Number	9300-0000-XXXX	
BMS Manufacture Date	YYYY-MM-DD	
BMS Test Date	YYYY-MM-DD	
BMS PFN Version	v2.1.1	

Refer to the controller's Information Screen (*System > Firmware > Info*) to find the hardware and firmware versions of your system.

APPROVALS AND RATINGS

The PF2200-SB is certified to the following standards:



SIL 2 Capable

IEC 61508: 2010 Parts 1-7

Approved for use in a 1oo1 deployment configuration



Electrical Burner Control System

UL 60730-2-5/ ANSI Z21.20-2014 • CSA C22.2 No. 60730-2-5

Class I Div 2 Group A, B, C & D, T4A (Class I, Zone 2, Group IIC – US Only)

UL 121201 • CSA-C22.2 No. 213



Type 4X

CSA C22.2 No. 94.1:15 • CSA C22.2 No. 94.2:15, Ed. 2

UL 50:15, Ed. 13 • UL 50E:15, Ed. 2

IP66

CSA-C22.2 No. 60529:16

CONTROLLER INTERFACE

SCREENS

The PF2200-SB controller consists of 3 main screens:

1. **STATUS SCREEN** – Always-on display that shows real-time input device readings, controller state and alerts.
ALERT TYPES DISPLAYED IN THE ALERTS PANE OF THE STATUS SCREEN:
 - Alarm - Prevents the system from entering any running state.
 - Wait – Prevents the system from entering any fuel state.
 - Main Permissive – Prevents the system from entering any main fuel state.
 - Warning – Displayed on screen only - does not affect system state.

STATUS			Alarm
BATH (°C)		OUTLET (°C)	
186.5 [197]		107.5 [128]	
STACK (°C)	LEVEL (L)	PRESSURE (psi)	
557.8 [580]	246.7 [208]	45.6 [70]	
FIRING RATE	AUX TEMP (°C)	AUX IN 1 (%)	
0%	238.4 [312]	43 [60]	
⊙ AL00X: Alarm ⊗ WT00X: Wait ▲ WN00X: Warning ⚡ MP00X: Main Permissive			












SETTINGS		Alarm
Temps	Inputs	
Bath	Level/Flow	
Outlet	Pressure	
Stack	Aux 1	
Aux	Aux 2	
Proc Control	Setup	
PID Control	Units	



2. **SETTINGS SCREEN** – Screen containing all the configuration settings required to set up the system
3. **SYSTEM SCREEN** – Screen containing tools for data logging and settings backup as well as a suite of diagnostic information for troubleshooting

SYSTEM			Alarm
Diagnostics		Logging	
Temperature	Power	Events	
Inputs	Run Metrics	Data	
Outputs	Modbus		
Flame	Keypad		
Customization		Firmware	
Status Priority	Info		

BUTTONS AND FUNCTIONS

BUTTONS	FUNCTIONS
	<p>Start the system from the Ready state</p> <p>OR</p> <p>Reignite when one pilot is lost while running</p>
	<p>Stop the system*</p>
	<p>Return to previous screen from an on-screen menu</p>
	<p>Cycle through Status, Settings, and System screens</p>
	<p>Display keypad functionality help screen</p>
	<p>Switch to Commissioner Mode to see all available settings</p> <p>OR</p> <p>Switch to Operator Mode to see only essential settings and setpoints</p>
	<p>Navigate Menus and highlight items</p>
	<p>Select highlighted item</p> <p>OR</p> <p>Open settings adjustment dialog when highlighting numeric settings</p>
	<p>Change Status screen display mode</p>
	<p>Make incremental changes to numeric settings</p> <p>OR</p> <p>Scroll Event Log by full page</p>

* If user shut-down is a required safety function, the ESD input or External Ignition Switch must be used instead of the Stop button.

KEY SETTINGS

TEMPERATURE SETTINGS

NAME	DEFAULT	RANGE	DESCRIPTION
HIGH TEMP SETPOINT	90 °C	0 °C - 1350 °C	Temperature threshold at which the system shuts down.
	194 °F	32 °F - 2462 °F	
<p>High Temp Setpoint must be greater than Pilot Off Setpoint</p> <p>If Type setting is set to RTD, High Temp Setpoint must be less than 850 °C (1562 °F)</p>			
PILOT OFF SETPOINT	85 °C	0 °C - 1350 °C	Temperature threshold at which the system turns off the pilot valve(s).
	185 °F	32 °F - 2462 °F	
<p>Pilot Off Setpoint must be greater than Main Off Setpoint and less than High Temp Setpoint</p>			
MAIN OFF SETPOINT	85 °C	0 °C - 1350 °C	Temperature threshold at which the system turns off the main valve(s).
	185 °F	32 °F - 2462 °F	
<p>Main Off Setpoint must be greater than Process Setpoint and less than Pilot Off Setpoint</p>			
PROCESS SETPOINT	80 °C	0 °C - 1350 °C	Temperature that the system attempts to maintain when in Process Control mode.
	176 °F	32 °F - 2462 °F	
<p>Process Setpoint must be greater than Low Temp Setpoint and less than Main Off Setpoint</p>			
STANDBY SETPOINT	70 °C	0 °C - 1350 °C	Minimum bath temperature the system will try to maintain in Bath Standby Mode.
	158 °F	32 °F - 2462 °F	
<p>Settings > Process Control > Configuration > Bath Standby Mode must be enabled</p> <p>Settings > Process Control > Configuration > Process Control Mode must be set to On/Off Control</p> <p>Standby Setpoint must be at least 2 degrees lower than the Process Setpoint</p>			
LOW TEMP SETPOINT	0 °C	0 °C - 1350 °C	Temperature threshold at which, if not exceeded, the system warns the user.
	32 °F	32 °F - 2462 °F	
<p>Low Temp Setpoint must be less than Process Setpoint</p>			
DEADBAND	2 °C	0 °C - 100 °C	The deadband prevents bouncing between states when the input reading is close to the corresponding setpoint.
	3.6 °F	0 °F - 180 °F	

INPUT SETTINGS

NAME	DEFAULT	RANGE	DESCRIPTION
4-20 LOW TRIP SETPOINT	12 mA	4 mA - 20 mA	Input threshold at which the system will initiate a low-trip event in accordance with the 4-20 Low Trip Mode setting.
Type must be set to 4-20			
4-20 HIGH TRIP SETPOINT	19.6 mA	4 mA - 20 mA	Input threshold at which the system will initiate a high-trip event in accordance with the 4-20 High Trip Mode setting.
Type must be set to 4-20			
4-20 DEADBAND	0.2 mA	0 mA - 1 mA* * Aux In 1/2 Deadband maximum is 16mA	The deadband prevents bouncing between states when the input reading is close to the corresponding trip point.
To clear a low trip, input must be greater than 4-20 Low Trip plus deadband. To clear a high trip, input must be less than 4-20 High Trip minus deadband.			

PROCESS CONTROL SETTINGS

NAME	DEFAULT	RANGE	DESCRIPTION
RAMP TIME	10 sec	0 sec - 255 sec	Once the system enters process control mode after light off delay it will slowly ramp to the requested firing rate over this time.

SETTINGS MODIFICATION

DROP DOWN MENU SETTINGS

ACCEPTED CHANGE METHOD

SETTINGS Bath		Ready
Type	RTD	▼
Input	Dual	▼
Mode	Process Control	▼
High Temp Setpoint	90.0 °C	
Pilot Off Setpoint	85.0 °C	
Main Off Setpoint	85.0 °C	
Process Setpoint	80.0 °C	
Standby Setpoint	70.0 °C	
Low Temp Setpoint	0.0 °C	
Deadband	2.0 °C	



SETTINGS Bath		Ready
Type	TC	▼
Input	RTD	▼
Mode		
High Temp Setpoint	90.0 °C	
Pilot Off Setpoint	85.0 °C	
Main Off Setpoint	85.0 °C	
Process Setpoint	80.0 °C	
Standby Setpoint	70.0 °C	
Low Temp Setpoint	0.0 °C	
Deadband	2.0 °C	



QUICK SETTING ADJUSTMENT METHOD

SETTINGS Bath		Ready
Type	RTD	▼
Input	Dual	▼
Mode	Process Control	▼
High Temp Setpoint	90.0 °C	
Pilot Off Setpoint	85.0 °C	
Main Off Setpoint	85.0 °C	
Process Setpoint	80.0 °C	
Standby Setpoint	70.0 °C	
Low Temp Setpoint	0.0 °C	
Deadband	2.0 °C	



*Note: Settings modifications made using the Quick Settings Adjustment Method take effect immediately.

NUMERIC SETTINGS


ACCEPTED CHANGE METHOD

SETTINGS Bath		Ready
Type	RTD	▼
Input	Dual	▼
Mode	Process Control	▼
High Temp Setpoint	90.0 °C	
Pilot Off Setpoint	85.0 °C	
Main Off Setpoint	85.0 °C	
Process Setpoint	80.0 °C	
Standby Setpoint	70.0 °C	
Low Temp Setpoint	0.0 °C	
Deadband	2.0 °C	



High Temp Setpoint

Accept
Cancel



High Temp Setpoint

90.0 °C

Accept
Cancel



QUICK SETTING ADJUSTMENT METHOD

SETTINGS Bath		Ready
Type	RTD	▼
Input	Dual	▼
Mode	Process Control	▼
High Temp Setpoint	90.0 °C	
Pilot Off Setpoint	85.0 °C	
Main Off Setpoint	85.0 °C	
Process Setpoint	80.0 °C	
Standby Setpoint	70.0 °C	
Low Temp Setpoint	0.0 °C	
Deadband	2.0 °C	



*Note: Settings modifications made using the Quick Settings Adjustment Method take effect immediately.

SYSTEM TOOLS

Date	Time	Description
Sep 30	18:07:24	Clear Shutdown Code received
Sep 30	18:06:12	Wait 10: Purging
Sep 30	18:06:12	Entered State: Lockout
Sep 30	18:06:12	Shutdown: User Stop via Interface
Sep 30	18:06:12	Stop received
Sep 30	18:05:42	Operator Present
Aug 14	9:21:08	Operator Timeout
Aug 14	9:14:35	Entered State: PID Control
Aug 14	9:12:35	Entered State: Main
Aug 14	9:12:35	Entered State: Main Detect
Aug 14	9:12:32	Entered State: Main Light Off

THE EVENT LOG SCREEN

(SYSTEM > LOGGING > EVENTS)

Displays a full history of system events for reference and troubleshooting. Events are continuously recorded to the USB storage device when inserted.

System Current	<input type="checkbox"/>
System Power	<input checked="" type="checkbox"/>
Pilot	<input type="checkbox"/>
Pilot	<input type="checkbox"/>
SSV	<input type="checkbox"/>
High	<input type="checkbox"/>
Amb	<input checked="" type="checkbox"/>
Pilot	<input checked="" type="checkbox"/>
Pilot 2 Flame Strength	<input type="checkbox"/>

20.1% Full

* Space Used	179/891 MB
* Space Free	712 MB
* Time Until Full:	~611.2 Days

Accept Cancel Statistics Clear Data

THE DATA LOGGING TOOL

(SYSTEM > LOGGING > DATA)

Logs input/output readings for up to 8 user selectable pieces of system information to the USB storage device. The data is logged in 15 second intervals and saved to the USB storage device regularly.

SYSTEM		Ready
Diagnostics		Logging
Temperature	Power	Events
Inputs	Run Metrics	Data
Outputs	Modbus	
Flame	Keypad	
Settings		Customization
Reset	Status Priority	Info
Backup		Update
Restore		

THE PF2200-SB DIAGNOSTIC MENUS

(SYSTEM > DIAGNOSTICS)

Contain useful real-time system input and output measurements, run metrics and useful troubleshooting information.

The screenshot shows the 'SYSTEM | Status Priority' screen. On the left, there are three data panels:

- Panel 1:** BATH (°C) 186.5 [197], OUTLET (°C) 107.5 [128], STACK (°C) 557.8 [557], LEVEL (L) 246.7 [246], PRESSURE (psi) 45.6 [45.6], FIRING RATE 0%, AUX TEMP (°C) 238.4 [238], AUX IN 1 (%) 43.
- Panel 2:** BATH (°C) 186.5 [197], STACK (°C) 557.8 [557], OUTLET (°C) 107.5 [128], LEVEL (L) 246.7 [246], PRESSURE (psi) 45.6 [45.6].
- Panel 3:** BATH 186.5°C, PROCESS 197°C, HIGH TEMP 205°C.

The main interface features a grid of status elements (1-8) and a list of 10 items to be prioritized:

- Bath
- Outlet
- Stack
- Level
- Pressure
- Firing Rate
- Aux Temp
- Aux In 1
- Flame 1 Strength
- Pressure High

THE STATUS PRIORITY TOOL

(SYSTEM > CUSTOMIZATION > STATUS PRIORITY)

Allows configuration of the items displayed on the main Status screen.

Use and to select a status element and and to move it up or down the priority list.

OPERATING SEQUENCE

The PF2200-SB utilizes a state-based control scheme to safely monitor and control a burner. Each system state has specific entry and exit requirements and defined output behavior.

NOTE: The current system state is always displayed in the Status Bar located at the top of the User Interface screen.

STATE TABLE


SYSTEM STATES		SYSTEM OUTPUTS				
STATE NAME	UI STATUS BAR TEXT	COIL	PILOT	SSV	TCV POSITION	STATUS LED BEHAVIOR
Power On	Power On	De-energized	De-energized	De-energized	Purge	Green- Amber-Red
Alarm	Alarm	De-energized	De-energized	De-energized	Purge	Slow flashing Red
Ready	Ready	De-energized	De-energized	De-energized	Purge	Solid Red
Lockout	Lockout	De-energized	De-energized	De-energized	Purge	Fast flashing Red
Waiting	Waiting	De-energized	De-energized	De-energized	Purge	Slow flashing Green ³
Ignition	Ignition	Energized	Energized	De-energized	Pilot	Solid Green ³
Pilot	Pilot	De-energized ¹	Energized	De-energized	Pilot	Solid Green ³
Main Light Off	Main Startup Checks	De-energized ¹	Energized ²	De-energized	Minimum	Solid Green ³
	Main Light Off Main Delay	De-energized ¹	Energized ²	Energized	Minimum	Solid Green ³
Process Control	Main Stage 1	De-energized ¹	Energized ²	Energized	100%	Solid Green ³
	Stage 2	De-energized ¹	Energized ²	Energized	100%	Solid Green ³
	PID Control External Firing Rate	De-energized ¹	Energized ²	Energized	Variable	Solid Green ³

1 Coil outputs can be energized in this state upon flame loss when Reignition setting is Enabled

2 Pilot outputs are de-energized in this state when Pilot Off Mode is set to Interrupted

3 Amber LED shows instead of Green when a warning is present in the Alerts Pane on the Status Screen

STATE DIAGRAM

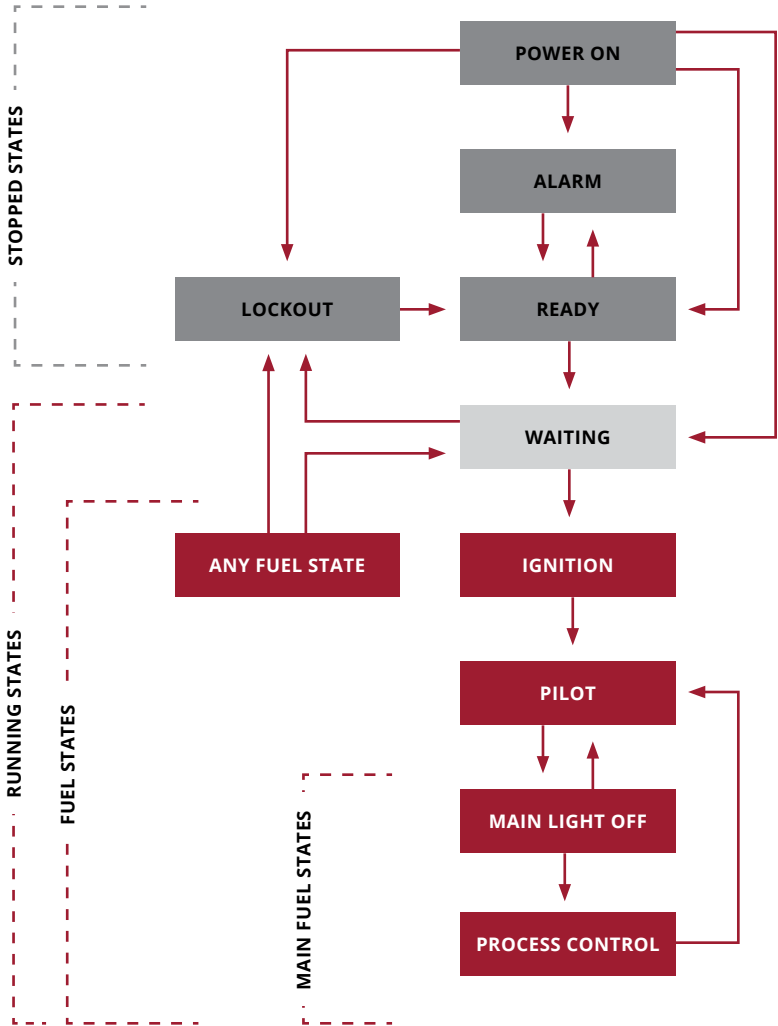

TROUBLESHOOTING

PROBLEM	PROPOSED SOLUTIONS
System has visible flame but cannot detect	1. Ensure pilot assembly, flame rod, and the gap between are fully engulfed in flame. If not, adjust rod position
	2. Ensure flame detection wiring does not exceed the recommended maximum length
	3. Ensure burner assembly has a low impedance path to chassis ground
	4. For longer run lengths, ensure ignition cable is used to avoid ground-loading
Card is unresponsive or BMS card will not communicate with User Interface card	1. Ensure the Status LEDs for both cards are functioning. If status LED is not functioning, cycle power (if safe to do so) and check again.
	2. Check the wiring between the BMS card and the User Interface Card.
	3. Ensure that the firmware versions of the BMS card and UI card are matching.
Ignition transformer "clicks" but no visible spark	1. Ensure all wires in the ignition path are properly terminated and that there is a low impedance path from the primary-windings to the BMS card as well as the secondary-windings to the ignition rod.
	2. Ensure the gap between the ignition rod and the burner housing is between 2mm and 8mm
Solenoids are not turning on, or turning on then over time turn off	<p>Ensure the solenoid is wired correctly and to the appropriate terminals. To ensure proper solenoid wiring, a multi-meter in OHM mode can be used to measure the resistance between the + and - terminal of the associated output.</p> 1. Note: this measurement should be done with the BMS card powered off. If properly wired, the multi-meter should read a resistance of the solenoid coil plus the run length (i.e. if the multimeter reads open, there is likely a problem with wiring).
	2. Ensure the PWM setting is correct for the appropriate solenoid. If using a peak-and-hold solenoid, the appropriate PWM setting can be found in the solenoid data sheet. Typically add a margin of 5-10% to allow for temperature variance. If using a non-peak-and-hold solenoid, ensure the PWM setting is set to 100%.
Digital input will not energize	1. Ensure the input is properly wired. In the case of a dry contact, ensure the PWR terminal is connected and is sourcing the correct voltage.
	2. Ensure adequate amount of wetting current is being applied to the contact. Run a current meter in series with the digital input switch to verify the current applied. If the wetting current is not adequate, the digital input either has too high of an impedance or the wiring has been compromised.



QUESTIONS?

If you have any concerns or questions about the PF2200-SB, please contact us or visit us online at profireenergy.com.

UNITED STATES

1.801.796.5127

321 South, 1250 West Suite 1
Lindon, UT 84042, USA

support@profireenergy.com

CANADA

1.780.960.5278

9671 - 283 Street
Acheson, Alberta T7X 6J5, Canada

support@profireenergy.com



UNITED STATES

1.801.796.5127

321 South, 1250 West Suite 1
Lindon, UT 84042, USA

support@profireenergy.com

CANADA

1.780.960.5278

9671 - 283 Street
Acheson, AB T7X 6J5, CAN

support@profireenergy.com